

KAFFE

BERNINA 475 QE  
KAFFE EDITION



made to create **BERNINA**





# Table of Contents

<b>IMPORTANT SAFETY INSTRUCTIONS .....</b>	<b>5</b>	2.6 Slide-on table .....	31
<b>Important information .....</b>	<b>8</b>	Using the slide-on table .....	31
<b>1 My BERNINA .....</b>	<b>10</b>	2.7 Presser foot .....	32
1.1 Introduction .....	10	Adjusting the presser foot position via the knee lifter of the Free Hand System .....	32
1.2 Welcome to the world of BERNINA .....	10	Changing the presser foot sole .....	32
1.3 Overview Machine .....	12	Changing the presser foot .....	33
Overview front controls .....	12	Having the presser foot displayed in the User Interface ..	33
Overview front .....	13	Adjusting the presser foot pressure .....	34
Overview sideways .....	14	2.8 Needle and stitch plate .....	34
Overview back .....	15	Changing the needle .....	34
1.4 Supplied accessories .....	16	Selecting the needle in the User Interface .....	35
Overview accessories machine .....	16	Selecting the needle type and the needle size .....	35
Use of the power cable (only USA/Canada) .....	17	Adjusting the needle position up/down .....	36
Overview presser feet .....	17	Adjusting the needle position left/right .....	36
1.5 Overview User Interface .....	20	Needle stop up/down (permanent) .....	36
Overview functions/visual information .....	20	Changing the stitch plate .....	36
Overview System settings .....	20	Selecting the stitch plate in the User Interface .....	37
Overview selection menu sewing .....	21	2.9 Threading .....	37
Software operation .....	21	Threading the upper thread .....	37
1.6 Needle, Thread, Fabric .....	23	Threading the double needle .....	40
Overview Needles .....	23	Threading the Triple Needle .....	41
Example for needle description .....	25	Winding the bobbin thread .....	42
Thread selection .....	25	Threading the bobbin thread .....	42
Needle/thread combination .....	26	Instruction how to thread the bobbin thread .....	44
<b>2 Sewing preparation .....</b>	<b>27</b>	<b>3 Setup Program .....</b>	<b>45</b>
2.1 Before using the machine for the first time .....	27	3.1 Sewing settings .....	45
2.2 Connection and Switching on .....	27	Adjusting the upper thread tension .....	45
Connecting the foot control .....	27	Adjusting the maximum sewing speed .....	45
Connecting the machine .....	27	Programming securing stitches .....	45
Attaching the knee lifter of the Free Hand System .....	28	Programming the button «Securing» .....	46
Attaching the touchscreen pen (optional accessory) ....	28	Programming the button «Quick reverse» .....	46
Switching the machine on .....	28	3.2 Selecting personal settings .....	47
2.3 Foot control .....	29	3.3 Activating the audio signals .....	48
Regulating the speed via the foot control .....	29	3.4 Machine settings .....	48
2.4 Spool pin .....	29	Selecting a language .....	48
Retractable spool pin .....	29	Adjusting the screen brightness .....	49
Horizontal spool pin .....	30	Reviewing the total number of stitches .....	49
2.5 Feed dog .....	31	Registering details of the dealer .....	49
Adjusting the feed dog .....	31	Saving Service data .....	50
Instruction for adjusting the feed dog .....	31	Back to default setting .....	51
		Deleting user data .....	51
		Calibrating the Buttonhole Foot #3A .....	51

<b>4</b>	<b>System settings</b> .....	<b>53</b>	6.2	Sewing straight stitch .....	66
4.1	Calling up the Tutorial .....	53	6.3	Securing with the automatic Securing Program .....	67
4.2	Calling up the Creative Consultant .....	53	6.4	Sewing in the zipper .....	67
4.3	Using eco mode .....	53	6.5	Sewing both sides of the zipper from bottom to top .....	68
4.4	Calling up the Help .....	53	6.6	Sewing Triple Straight stitch .....	69
4.5	Cancelling any alterations with «clr» .....	53	6.7	Sewing Triple zig zag .....	70
<b>5</b>	<b>Creative sewing</b> .....	<b>54</b>	6.8	Manual darning .....	70
5.1	Overview selection menu sewing .....	54	6.9	Automatic darning .....	72
	Selecting a stitch pattern .....	54	6.10	Reinforced darning, automatic .....	73
5.2	Regulating the speed .....	54	6.11	Finishing edges .....	73
5.3	Adjusting the upper thread tension .....	54	6.12	Sewing Double overlock .....	74
5.4	Editing stitch patterns .....	55	6.13	Narrow edgestitching .....	74
	Changing the stitch width .....	55	6.14	Wide edgestitching .....	75
	Changing the stitch length .....	55	6.15	Edgestitching using the seam guide (optional accessory) .....	75
	Correcting the balance .....	56	6.16	Sewing hem edges .....	76
	Programming pattern repeat .....	56	6.17	Sewing blind hems .....	76
	Mirror image of stitch patterns .....	57	6.18	Sewing visible hems .....	77
	Quick reverse .....	57	6.19	Sewing flat joining seams .....	78
	Permanent Quick reverse .....	57	6.20	Sewing basting stitches .....	78
5.5	Combining stitch patterns .....	57	<b>7</b>	<b>Decorative stitches</b> .....	<b>79</b>
	Overview Combi mode .....	57	7.1	Overview Decorative Stitches .....	79
	Creating Stitch pattern combinations .....	58	7.2	Bobbin-Play .....	80
	Saving a stitch pattern combination .....	58	7.3	Sewing cross stitches .....	81
	Loading a stitch pattern combination .....	58	7.4	Pintucks .....	81
	Overwriting a stitch pattern combination .....	58		Pintucks .....	81
	Deleting a stitch pattern combination .....	59		Overview Pintuck Feet .....	82
	Editing a single stitch pattern .....	59		Working with cord .....	82
	Deleting a single stitch pattern .....	59		Sewing Pintucks .....	83
	Adding a single stitch pattern .....	60	<b>8</b>	<b>Alphabets</b> .....	<b>84</b>
	Mirroring a stitch pattern combination .....	60	8.1	Overview Alphabet .....	84
	Securing a stitch pattern combination .....	60	8.2	Creating lettering .....	84
	Programming pattern repeat .....	60	<b>9</b>	<b>Buttonholes</b> .....	<b>86</b>
5.6	Administering stitch patterns .....	61	9.1	Overview Buttonholes .....	86
	Saving settings of stitch patterns .....	61	9.2	Making use of the height compensation tool .....	87
	Saving stitch patterns in personal memory .....	61	9.3	Using the compensation plate .....	87
	Overwriting stitch patterns from the personal memory .....	61	9.4	Marking buttonholes .....	88
	Loading stitch patterns from the personal memory .....	61	9.5	Cord .....	89
	Deleting stitch patterns from the personal memory .....	62			
5.7	Securing .....	62			
	Securing a seam with the button «Securing» .....	62			
5.8	Height Compensation of uneven layers .....	62			
5.9	Sewing Corners .....	63			
<b>6</b>	<b>Practical stitches</b> .....	<b>64</b>			
6.1	Overview Practical Stitches .....	64			



Using cord with the Buttonhole Foot #3 .....	89	12.2 Machine .....	105
Using cord with the Buttonhole Foot with Slide #3A ...	90	Cleaning the display .....	105
9.6 Sewing a test sample .....	91	Cleaning the feed dog .....	106
9.7 Determining the buttonhole length with Buttonhole Foot #3 .....	91	Cleaning the hook .....	106
9.8 Determining the buttonhole length with the Buttonhole Foot with Slide #3A .....	92	Lubricating the hook .....	107
9.9 Sewing the manual 7-step buttonhole with the Buttonhole Foot #3 .....	92	Cleaning the thread catcher .....	109
9.10 Sewing the manual 5-step buttonhole with the Buttonhole Foot #3 .....	93	<b>13 Errors and faults .....</b>	<b>110</b>
9.11 Sewing a buttonhole automatically with the Buttonhole Foot with Slide #3A .....	94	13.1 Error messages .....	110
9.12 Cutting the buttonhole open with the seam ripper .	95	13.2 Troubleshooting .....	113
9.13 Cutting open buttonholes with the buttonhole cutter (optional accessory) .....	96	<b>14 Storage and disposal .....</b>	<b>116</b>
9.14 Sewing on buttons .....	96	14.1 Storing the machine .....	116
9.15 Sewing eyelets .....	97	14.2 Dispose of the machine .....	116
<b>10 Quilting .....</b>	<b>98</b>	<b>15 Technical data .....</b>	<b>117</b>
10.1 Overview Quilt Stitches .....	98	<b>16 Overview stitch patterns .....</b>	<b>118</b>
10.2 Quilting, Securing Program .....	99	16.1 Overview Stitch patterns .....	118
10.3 Sewing handlook quilt stitches .....	99	Practical stitches .....	118
10.4 Guiding the quilt work freely .....	100	Buttonholes .....	118
<b>11 BERNINA Stitch Regulator (BSR) (optional accessory) .....</b>	<b>101</b>	Decorative stitches .....	118
11.1 BSR mode 1 .....	101	Quilt stitches .....	120
11.2 BSR mode 2 .....	101	<b>Index .....</b>	<b>121</b>
11.3 BSR function with Straight stitch No. 1 .....	101		
11.4 BSR function with Zigzag No. 2 .....	101		
11.5 Sewing preparations for quilting .....	101		
Attach the BSR presser foot .....	101		
Changing the presser foot sole .....	102		
11.6 Using the BSR mode .....	102		
11.7 Securing .....	103		
Securing in BSR1 Mode with the button «Start/Stop» .	103		
Securing in BSR2 mode .....	103		
<b>12 Care and maintenance .....</b>	<b>104</b>		
12.1 Firmware .....	104		
Checking the firmware version .....	104		
Updating firmware .....	104		
Recovering saved data .....	105		



# IMPORTANT SAFETY INSTRUCTIONS

Please be aware of the following basic safety instructions when using your machine. Before using this machine, read instruction manual carefully.

## DANGER

To protect against electric shock, the following instructions must be observed.

- Never leave the machine unattended when it is connected to the power supply.
- Immediately after use and before cleaning, switch off the machine and disconnect the power cable from the outlet.

In order to protect against injury, the following instructions must be adhered to.

- Do not look directly into the LED lamp with optical instruments (e. g. magnifying glass).
- If the LED lamp is damaged or defective, have the LED lamp checked or repaired at your local authorized BERNINA dealer.
- Switch off the machine before working in the needle area.
- Before starting the machine, close all covers.

## WARNING

To reduce the risk of burns, fire, electric shock or injury to persons, the following instructions must be observed.

### General facts

- This machine may only be used for the purpose described in this instruction manual.

### Working environment

- Do not use the machine outdoors.
- Only use the machine in dry rooms.
- Do not use the machine in a humid area.
- Do not use the machine in rooms where aerosol products (sprays) are being used.
- Do not use the machine in rooms where oxygen is dispensed.

### Technical condition

- Never use the machine when it is damp.
- Do not use the machine if it is not working properly.



- Do not use the machine if a cable or the plug is damaged.
- Do not use the machine if it has been dropped, damaged or has fallen into water.
- If the machine is damaged or does not work properly, have the machine checked or repaired by your local authorized BERNINA dealer.
- Keep all ventilation openings of the machine and the foot control free of lint, dust and loose cloth.
- Do not use the machine if the ventilation openings are blocked.

#### **Accessories and Supplies**

- Only use the accessories recommended by the manufacturer.
- Always use the original BERNINA Stitch Plate.  
An incorrect stitch plate can result in needle breakage.
- Use only straight needles of good quality.  
Bent or damaged needles can cause needle breakage.
- This machine is double-insulated (except for USA, Canada and Japan).  
Use only identical replacement parts. See instructions for servicing of double-insulated products.
- To lubricate the machine, only use oil recommended by BERNINA.

#### **Safety instructions**

- While operating the machine, all protective inserts must be in place and all covers must be closed.

#### **Appropriate use**

- The machine may be used, cleaned and maintained by children older than eight or by people with reduced physical, sensory or mental capabilities or if there is a lack of experience and knowledge as long as they have been given instructions.
- Furthermore, these persons must be supervised while working with the machine, and/or they must know the safe operation of the machine and be aware of the resulting hazards.
- Children are not allowed to play with this machine.
- Special care should be taken when the machine is operated by or in the presence of children.
- Only use the machine with the supplied power cable.
- USA and Canada only: Do not connect power plug NEMA 1-15 to circuits exceeding 150 volt-to-ground.
- Only use this machine with the supplied foot control of type SR-1.
- Never insert any objects into any openings of the machine.





- Do not place any objects on the foot control.
- While sewing, guide the fabric gently.  
Pulling and pushing the fabric can cause needle breakage.
- Keep fingers away from all moving parts.
- Special care is required in the needle area.
- For activities in the needle area - such as threading the needle, changing the needle, threading the looper or changing the presser foot - switch off the machine.
- To switch off, set the power switch to «0».
- When protective covers are removed, when the machine is oiled or when other cleaning and maintenance operations mentioned in this instruction manual are carried out, switch off the machine and disconnect the power plug from the outlet.
- Pull the plug out of the outlet by pulling on the plug. Do not pull on the cable.



## Important information

### Availability of the instruction manual

The instruction manual is supplied with the machine.



- Keep the instruction manual safe at a suitable place near the machine to have it at hand in case that you need to look up something.
- If you pass the machine to a third party, always include the instruction manual.
- The latest version of the instruction manual can be downloaded at [www.bernina.com](http://www.bernina.com)

### Proper use

Your BERNINA machine is conceived and designed for private household use. It is intended for sewing fabrics and other materials as described in this instruction manual. Any other use is not considered proper. BERNINA assumes no liability for consequences resulting from improper use.


### Equipment and scope of delivery

Example images are used in these operating instructions for the purposes of illustration. The machines shown in the images and the accessories shown therefore do not always match the actual items included with your machine. The supplied accessory can vary depending on the country of delivery. You can acquire any accessories mentioned or shown that are not included in the scope of delivery as optional accessories from a specialist BERNINA dealer. Further accessories can be found at [www.bernina.com](http://www.bernina.com).

For technical reasons and in order to improve the product, changes may be made to the equipment of the machine and the scope of delivery at any time and without prior notice.

### Maintenance of double-insulated products

In a double-insulated product, two systems of insulation are provided instead of grounding. No grounding means is provided on a double-insulated product nor should a means for grounding be added to the product. Servicing a double-insulated product requires extreme care and knowledge of the system and should only be done by qualified service personnel. Only original spare parts should be used for service and repairs. A double-insulated product is marked with the words: «Double-Insulation »or «double-insulated».

 The symbol may also be marked on the product.

### Environmental Protection

BERNINA is committed to the protection of the environment. We strive to minimize the environmental impact of our products by continuously improving product design and our technology of manufacturing.



The machine is labeled with the symbol of the crossed-out wastebin. This means that the machine should not be disposed of in household waste when it is no longer needed. Improper disposal can result in dangerous substances getting into the groundwater and thus into our food chain, damaging our health.

The machine must be returned free of charge to a nearby collection point for waste electrical and electronic equipment or to a collection point for the reuse of the machine. Information on the collection points can be obtained from your local administration. When purchasing a new machine, the dealer is obliged to take back the old machine free of charge and dispose of it properly.

If the machine contains personal data, you are responsible for deleting the data yourself before returning the machine.

## Explanation of symbols



**DANGER**

Designates a danger with a high risk which can lead to serious injuries or even death unless it is avoided.



**WARNING**

Designates a medium-risk hazard which can lead to serious injuries if not avoided.



**CAUTION**

Designates a low-risk hazard which can lead to minor or moderate injuries if not avoided.

**NOTICE**

Designates a hazard which can lead to material damage if not avoided.



**Tips** from BERNINA **quilt experts** can be found next to this symbol.



# 1 My BERNINA

## 1.1 Introduction

The purposes of your BERNINA 475 QE are sewing and quilting. Delicate silk or satin fabrics as well as heavy-weight linen, fleece and denim can be sewn without any problems with this machine. A wide range of practical as well as decorative stitches and buttonholes are at your disposal.

In addition to this instruction manual, following Help Programs are provided at any time to give you useful advice and support how to operate your BERNINA 475 QE.

The **Tutorial** provides information and explanations on different sections concerning sewing and the various stitches.

The **Creative Consultant** informs you about decision support for sewing projects. After entering the choice of fabric and the intended sewing project, suggestions concerning the suitable needle or the appropriate presser foot are displayed.

The **Help Program** provides information about individual stitch patterns, functions and operations in the User Interface.

### Further information



In addition to this instruction manual for your BERNINA 475 QE, further information products are enclosed.

The current version of your manual as well as many other information about the machine and the accessories can be found on our website <https://www.bernina.com>

## 1.2 Welcome to the world of BERNINA

Made to create, this is the slogan of BERNINA. Not only with our machines do we support you in the implementation of your ideas. In addition to the offers listed below, we offer you lots of suggestions and instructions for your future projects as well as the opportunity to exchange ideas with other sewing, quilting and embroidery enthusiasts. I wish you lots of pleasure.

### BERNINA YouTube Channel



On YouTube we offer a wide range of how-to videos and support concerning the most important functions of our machines. You can also find detailed explanations many presser feet, meaning that your projects will be a complete success.

<https://www.youtube.com/BerninaInternational>

Available in English and German.

### inspiration – the sewing magazine in the online shop



Are you looking for ideas, sewing patterns and instructions for great sewing projects? In this case, the BERNINA magazine «inspiration» is exactly what you need. Three times a year, inspiration offers fantastic sewing and embroidery ideas. From seasonal fashion trends to trendy accessories and practical tips to original decorations for your home or cute sewing ideas for children.

The magazine is available in English, German, Dutch, and French.

In our online shop you can purchase "inspiration" as an e-magazine or as a print version, either as individual issues or as a subscription. Furthermore, there are many individual downloadable cutting patterns to discover! Please have a look at <https://www.bernina.com/inspiration>

### **BERNINA Blog**



Subtle instructions, free cutting patterns and embroidery motifs as well as many new ideas: All this you can find in the weekly blog of BERNINA. Our experts give useful tips and explain step by step how you can achieve the desired result. In the community you can upload your own projects and exchange experiences and ideas with other sewing and embroidering enthusiasts.

<https://www.bernina.com/blog>

Available in English, German, Dutch and French.

### **BERNINA Social Media**



Follow on social networks to learn more about events, thrilling projects as well as tips and tricks all about sewing, quilting and embroidering. We keep updated and we are happy to show you one or two highlights from the world of BERNINA.

<https://www.bernina.com/social-media>



## 1.3 Overview Machine

### Overview front controls



- |   |               |    |                          |
|---|---------------|----|--------------------------|
| 1 | Quick reverse | 6  | Needle up/down           |
| 2 | Thread cutter | 7  | Presser foot pressure    |
| 3 | Securing      | 8  | Upper Multifunction knob |
| 4 | Start/Stop    | 9  | Lower Multifunction knob |
| 5 | Pattern end   | 10 | Needle left/right        |

Overview front



- |   |                     |    |                                 |
|---|---------------------|----|---------------------------------|
| 1 | Bobbin cover        | 7  | Thread take-up lever cover      |
| 2 | Presser foot        | 8  | Thread take-up lever            |
| 3 | Needle threader     | 9  | Thread cutter                   |
| 4 | Sewing light        | 10 | Needle fixing screw             |
| 5 | Thread cutter       | 11 | Connection for slide-on table   |
| 6 | Slide speed control | 12 | Connection for Free Hand System |

## Overview sideways



- 1 Connection for foot control
- 2 Feed dog up/down
- 3 PC-connection
- 4 USB port
- 5 Spool pin
- 6 Bobbin winding unit

- 7 Retractable spool pin
- 8 Air vents
- 9 Handwheel
- 10 Power switch
- 11 Connection for power cable
- 12 Magnet holder for touchscreen pen (optional accessory)



### Overview back



- |   |                               |    |                          |
|---|-------------------------------|----|--------------------------|
| 1 | Air Vents                     | 9  | Bobbin Winding Unit      |
| 2 | Connection for Slide-on Table | 10 | Bobbin Winder Pretension |
| 3 | Connection for Darning Hoop   | 11 | Thread Take-up Lever     |
| 4 | Presser foot lifter           | 12 | Thread Guide             |
| 5 | Carry Handle                  | 13 | Thread Cutter            |
| 6 | Spool Pin                     | 14 | BSR Connection           |
| 7 | Thread Guide                  | 15 | Feed Dog                 |
| 8 | Retractable spool pin         | 16 | Stitch Plate             |

## 1.4 Supplied accessories

### Overview accessories machine










Illustration	Name	Purpose
	Dust Cover	To protect the machine from dust and contamination.
	Accessory Bag	To store the supplied accessories as well as the optional accessories.
	Free Hand System (FHS)	To raise and lower the presser foot.
	Slide-On Table	To increase the sewing surface.
	Spool Disc	To support the regular unwinding of the thread from the spool.
	Bobbin for B9 hook Set of 4.	To wind the bobbin thread.
	Foam Pad 1 piece	The foam pad prevents the thread from slipping, tangling or breaking on the spool pin.
	Seam Ripper	To undo seams and to cut buttonholes open.
	Height Compensating Tool	To level an angled position of the presser foot sole when sliding over thick seams.

Illustration	Name	Purpose
	Selection of needles	For any common applications.
	Screwdriver red (slot)	To loosen and tighten slotted screws.
	Brush/Needle Inserter	To clean the feed dog and the looper area.
	Sewing Machine Oil	To oil the machine.
	Power Cable	To connect the machine with the power supply system.
	Foot Control	To start and stop the machine. To control the sewing speed.











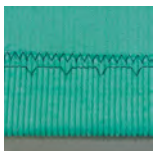




### Use of the power cable (only USA/Canada)

The machine has a polarized plug (one contact is wider than the other). To reduce the risk of electric shock, the plug can only be plugged into the socket in one way. If the plug does not fit into the socket, turn the plug. If it still does not fit, contact an electrician to install an appropriate outlet. Do not modify the plug in any way.

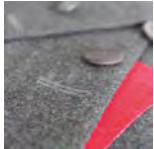








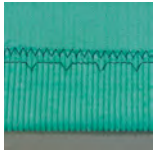


### Overview presser feet

**NOTICE!** Depending on the country where the deliveries are sent to, the contents either include snap-on presser feet or standard presser feet. The respective standard accessory is shown in the two following charts. When snap-on presser feet are delivered as standard accessory, a claim to get standard presser feet for free can't be made. The standard presser feet can be ordered as optional accessory.

## Snap-on Presser Feet

Illustration	Number	Name	Purpose	Example
	#78	Snap-On Shank	For securing the interchangeable snap-on soles.	
	#1	Reverse Pattern Sole	For sewing different practical and decorative stitches.  To sew forward and in reverse.	
	#2	Overlock Sole	To finish edges in stretch material.	
	#3	Buttonhole Sole	For sewing buttonholes.	
	#4	Zipper Sole	For sewing in zippers.	
	#5	Blindstitch Sole	For sewing blind-stitch hems.	
	#20	Open Embroidery Sole	For sewing applications and decorative patterns.	
	#37	Patchwork Foot	For patchwork projects with 3 mm (1/8 in) or 6 mm (1/4 in) seam allowances.	

## Standard Presser Feet

Illustration	Number	Name	Purpose	Example
	#1	Reverse Pattern Foot	To sew various practical and decorative stitches.  To sew forward and in reverse.	
	#2	Overlock Foot	For overlock seams.  For overcasting seams.  For visible seams on stretch fabrics.	
	#3A	Buttonhole Foot with Slide	To sew buttonholes automatically.	
	#4	Zipper Foot	To sew in zippers.	
	#5	Blindstitch Foot	For sewing blind-stitch hems.  For stitching edges guided on the left side of the presser foot.	
	#37	Patchwork Foot	For patchwork projects with 3 mm (1/8 in) or 6 mm (1/4 in) seam allowances.	


## 1.5 Overview User Interface

### Overview functions/visual information




- |   |   |   |                                 |
|---|---|---|---------------------------------|
| 1 | «Upper Thread Tension»                            | 4 | «Stitch Plate/Needle Selection» |
| 2 | «Presser foot indicator / presser foot selection» | 5 | «Feed Dog Indicator»            |
| 3 | «Presser Foot Pressure»                           | 6 | «Bobbin Thread»                 |

### Overview System settings

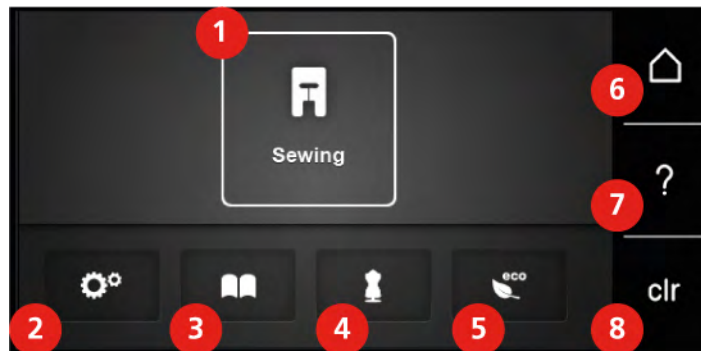

- |   |                       |   |                  |
|---|-----------------------|---|------------------|
| 1 | «Sewing Mode»         | 5 | «eco Mode»       |
| 2 | «Setup Program»       | 6 | «Home»           |
| 3 | «Tutorial»            | 7 | «Help»           |
| 4 | «Creative Consultant» | 8 | «Clear Settings» |

## Overview selection menu sewing

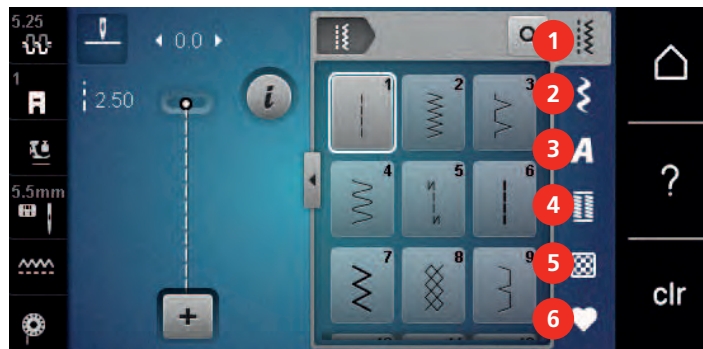

- |   |                       |   |                   |
|---|-----------------------|---|-------------------|
| 1 | «Practical Stitches»  | 4 | «Buttonholes»     |
| 2 | «Decorative Stitches» | 5 | «Quilt Stitches»  |
| 3 | «Alphabets»           | 6 | «Personal Memory» |

## Software operation

The touch-sensitive screen can be operated with the finger or stylus.

**Tap:** Short tap of an element.





**Swipe:** Tap an element and swipe quickly on the screen.

**Draw:** Tap the screen and slowly move in one direction, eg. for scrolling up and down.


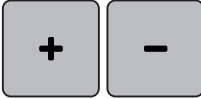

### Navigation

Illustration	Name	Purpose
	«Home»	Switch between «Home screen» and «Sewing screen».
	Navigation path	Show a previous menu level.
	«Close»	Close the window.
	More	Show more features or information.
	Continue	Scroll to next display.
	Back	Scroll to previous display.

Activate/deactivate functions

Figure	Element	Status
	Switch	Function is activated.
		Function is deactivated.
	Icon	Function ist deactivated.
		Function ist activated.

Adjust values

Illustration	Name	Purpose
	Slider control	Set the value with the slider control. Reset the value to the default value by tapping the small bullet.
	Field «Plus» / «Minus»	«Plus» increase, «Minus» reduce the value.
	Yellow frame	Indication that the set value differs from the default value. Reset the value to the default value by tapping.

Enter text and numbers

To enter numerical values or text, a corresponding keyboard is shown.





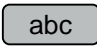

 
 


Illustration	Name	Purpose
	Entry field	Display of the entry. Delete all characters entered with a single tap.



Illustration	Name	Purpose
	«Delete»	Delete the last character.
	«Lower Case Characters»	Show the available letters in lower case letters.
	«Upper Case Characters»	Show the available letters in upper case letters.
	«Numbers and Mathematical Characters»	Show the available numbers and mathematical characters.
	«Special Characters»	Show the available special characters.
	«Confirm»	Confirm the entry and leave the submenu.
	«Cancel»	Cancel the entry and the view closes.

## 1.6 Needle, Thread, Fabric

In the course of time a needle wears out. Therefore it should be replaced regularly. Only a perfect point results in a good stitching result. In general it can be said: the thinner the thread, the finer the needle. The illustrated needles are either standard or optional accessory, depending on the machine.

- Needle sizes 70, 75: for thin fabrics.
- Needle sizes 80, 90: for medium fabrics.
- Needle sizes 100, 110 and 120: for heavy fabrics.

### Overview Needles





Illustration	Needle name	Needle description	Purpose
	<b>Universal needle</b> 130/705 H 60-120	Slightly rounded point	For nearly all natural and synthetic fabrics (woven and knitted).
	<b>Stretch needle</b> 130/705 H-S 75, 90	Mid-sized ball point, special eye shape and needle scarf	For jersey, tricot, knit and stretch fabrics.
	<b>Jersey/Embroidery needle</b> 130/705 H SUK 60-100	Mid-sized ball point	For knitware, knitted good. For embroidering.
	<b>Jeans needle</b> 130/705 H-J 80-110	Point, narrow point, reinforced shaft	For heavy-weight fabrics such as jeans or canvas.













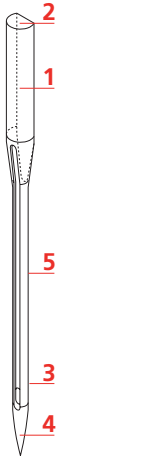
Illustration	Needle name	Needle description	Purpose
	<b>Leather needle</b> 130/705 H LR 90, 100	With cutting point (LR = special point to sew leather)	For all types of leather, synthetic leather, plastic, sheeting.
	<b>Microtex needle</b> 130/705 H-M 60-110	Especially sharp, narrow point	For micro fiber fabrics and silk.
	<b>Quilting needle</b> 130/705 H-Q 75, 90	Slightly rounded fine point	For straight and topstitching.
	<b>Embroidery needle</b> 130/705 H-E 75, 90	Small ball point, especially wide needle eye and wide thread groove	For embroidery on all natural and synthetic fabrics.
	<b>Fine-material needle</b> 130/705 H SES 70, 90	Small ball point	For fine knitware and knitted materials.  For embroidery on fine, delicate fabrics.
	<b>Metafil needle</b> 130/705 H METAFIL 80	Long needle eye (2 mm) in all needle sizes	For sewing or embroidering with metallic threads.
	<b>Cordonnet needle (to patch embroidery)</b> 130/705 H-N 70-100	Long needle eye (2 mm) in all needle sizes	Topstitching with thick thread.
	<b>Hemstitch needle</b> 130/705 H WING 100-120	Wing-like widened needle shaft (wing)	To sew blind stitches.
	<b>Universal double needle</b> 130/705 H ZWI 70-100	Needle distance: 1.0/1.6/2.0/2.5/3.0/4.0/6.0/8.0	For visible hems in stretch fabrics, pintucks, decorative sewing.
	<b>Stretch double needle</b> 130/705 H-S ZWI 75	Needle distance: 2.5/4.0	For visible hems in stretch fabrics, pintucks, decorative sewing.
	<b>Hemstitch double needle</b> 130/705 H ZWIHO 100	Needle distance: 2.5	For special effects with hemstitch embroidery.

Illustration	Needle name	Needle description	Purpose
	<b>Universal triple needle</b>  130/705 H DRI 80	Needle distance: 3.0	For visible hems in stretch fabrics, decorative sewing.

### Example for needle description

The 130/705 system, which is the most common for household machines, is explained by the following picture of a Jersey/Stretch needle.

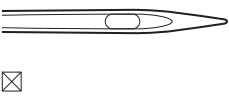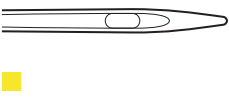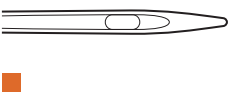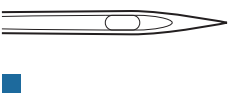	<b>130/705 H-S/70</b>  <b>130</b> = Shank length (1)  <b>705</b> = Flat shank (2)  <b>H</b> = Needle scarf (3)  <b>S</b> = Needle point (here medium ball point) (4)  <b>70</b> = Needle size 0.7 mm (5)
--	--

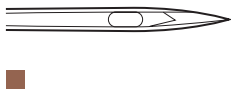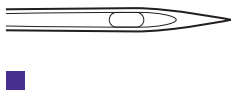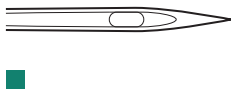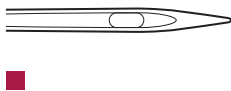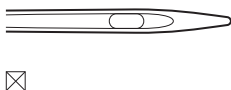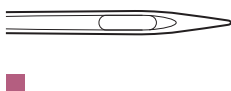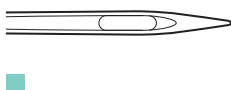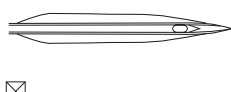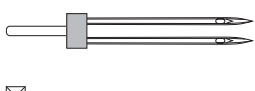
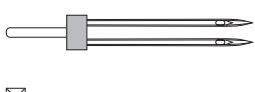
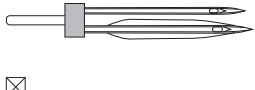
### Thread selection

For a perfect sewing result, thread and fabric quality play an important role.

We recommend purchasing quality threads to achieve good sewing results.

- Cotton threads have the advantage of being a natural fiber and therefore are especially suitable for sewing cotton fabrics.
- Mercerized cotton threads have a slight sheen that is not lost with washing.
- Polyester threads have a high tensile strength and is particularly colorfast.
- Polyester threads are more flexible and are recommended where a strong and elastic seam is required.
- Rayon threads are made of natural fibers and have a brilliant sheen.
- Rayon threads are suitable for decorative stitches and achieve a more beautiful effect.

### Needle/thread combination

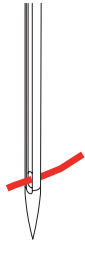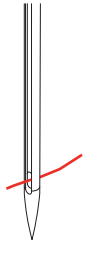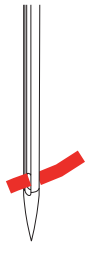	<p>The needle/thread combination is correct, when the thread fits perfectly into the long groove and goes easily through the needle eye. The thread can be optimally secured.</p>
	<p>The thread can break and skipped stitches can occur when there is too much clearance in the long groove and the needle eye.</p>
	<p>The thread can break and get stuck when the thread scrapes against the edge of the long groove not fit well into the needle eye optimally.</p>

## 2 Sewing preparation

### 2.1 Before using the machine for the first time



BERNINA recommends lubricating the hook before using the machine for the first time or after a longer period of non-use. (see page 104)

By oiling the hook, the occurrence of unwanted noises in the hook area can be avoided.

### 2.2 Connection and Switching on

#### Connecting the foot control

The cable of the foot control is rolled up on its underside.

- > Unroll the cable of the foot control to the desired length and fix it in the cable holders of the foot control..



- > Insert the plug of the cable into the foot control socket of the machine.



- > Place the foot control under the table.
- > If the cable is too long, roll up the excess length and fix it in the cable holders of the foot control.

#### Connecting the machine

To ensure safe operation of the machine, only the supplied mains cable may be used. The supplied power cable is designed for the voltage range applicable in the country of use. If the machine is to be used in a country other than the country of origin, the power cable suitable for that country must be obtained from the Authorized BERNINA dealer.

The power cable for USA and Canada has a polarized plug (one blade wider than the other). To reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit into the outlet, turn the plug upside down and plug it in. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not modify the plug in any way.

- > Insert the device connector of the power cable into the machine's power cable connection.



- > Insert the power plug of the power cable into the socket.

### Attaching the knee lifter of the Free Hand System



The lateral position of the knee lifter can be adjusted by your local BERNINA Dealer if required.

- > Insert the knee lifter into the opening at the front side of the machine.
- > Adjust the sitting height so that the knee lifter can be operated with the knee.



### Attaching the touchscreen pen (optional accessory)

- > Store the touchscreen pen at the magnet holder.



### Switching the machine on

- > Set the Power Switch to «I».



## 2.3 Foot control

### Regulating the speed via the foot control

Via the foot control the speed can be adjusted infinitely variable.

- > Press the foot control down carefully to start the machine.
- > To sew faster, press the foot control harder.
- > Release the foot control to stop the machine.



## 2.4 Spool pin

### Retractable spool pin

Lift the spool pin

The retractable spool pin is necessary when several threads are sewn and it can also be used for bobbin winding while sewing.

- > Press on the retractable spool pin with the finger and let go.
  - The retractable spool pin appears automatically.



Inserting foam pad and thread spool

The foam pad prevents the thread from getting hooked at the retractable spool pin.

- > Place the foam pad on the retractable spool pin.

- > Place the thread spool on the spool pin.



### Horizontal spool pin

Placing the foam pad, the thread spool and the spool disc

The spool disc provides an even unwinding of the thread from the thread spool. The spool disc is only used with the horizontal spool pin.

- > Place the foam pad on the spool pin.
- > Place the thread spool on the spool pin.
- > Position the appropriate spool disc on the spool pin so that there is no space between the spool disc and the thread spool.



Using a spool net

The spool net holds the thread on the thread spool and prevents the thread from knotting and breaking.

- > If available, slide the spool net over the thread spool.





## 2.5 Feed dog

### Adjusting the feed dog

- > To lower the feed dog, push the button «Feed Dog Indicator».



- > To raise the feed dog, push the button «Feed Dog Indicator» again.

### Instruction for adjusting the feed dog



- > Tap «Feed Dog Indicator».
- > Raise or lower the feed dog according to the animation.

## 2.6 Slide-on table

### Using the slide-on table

The Slide-on Freearm Extension Table, attached to the freearm, enables the available sewing area to be extended.

- > Raise the needle.
- > Raise the presser foot.
- > Switch off the machine and disconnect it from the power supply.
- > Push the Slide-on Freearm Extension Table from the left to the right over the freearm until it engages.




- > To remove the slide-on table, pull the slide-on table over the free arm to the left.



## 2.7 Presser foot

### Adjusting the presser foot position via the knee lifter of the Free Hand System

- > Adjust the sitting height so that the knee lifter can be operated with the knee.
- > Push the knee lifter with the knee to the right to raise the presser foot.

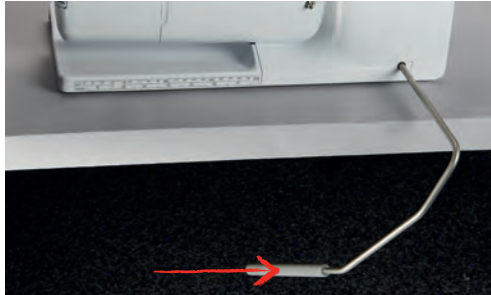

- Simultaneously the feed dog is lowered and the thread tension is released.
- > Release the knee lifter slowly to lower the presser foot.

### Changing the presser foot sole

#### Removing the presser foot sole

- > Raise the needle.
- > Raise the presser foot.
- > Switch the machine off and disconnect it from the power supply system.
- > Push the button at the snap-on shaft.



- The presser foot sole is released.

#### Attaching the presser foot sole

- > Place the presser foot sole beneath the shaft so that the cross pin is beneath the opening of the shaft.



- > Lower the shaft via the lever.



- The presser foot sole snaps in.

### Changing the presser foot

- > Raise the needle.
- > Raise the presser foot.
- > Switch the machine off and disconnect it from the power supply system.
- > Push the clamping lever up (1).
- > Remove the presser foot (2).



- > Guide the new presser foot upwards over the cone.
- > Press the clamping lever down.

### Having the presser foot displayed in the User Interface

For each selected stitch, the machine displays the recommended and any other alternative presser feet.

Prerequisite:

- The machine is switched on.
- > Select a stitch pattern.
  - In the icon «Presser foot indicator / presser foot selection» the recommended presser foot is indicated with a number.
- > Tap «Presser foot indicator / presser foot selection».
- > Wipe up in the area of the presser feet to have more presser feet displayed.



- > When a presser foot is tapped, the description and use for that presser foot appears.



## Adjusting the presser foot pressure

The factory-set standard presser foot pressure can be used for all common sewing works. When working with jersey fabrics or with loose knitware, reduce the presser foot pressure. For firm materials, increase the presser foot pressure.



The presser foot pressure is designed to adjust the pressure of the presser foot optimally to the fabric thickness. When working with thick fabrics, it is recommended to reduce the presser foot pressure. This provides the advantage that the presser foot is slightly lifted so that the fabric can be moved more easily. When working with thin fabrics, it is recommended to increase the presser foot pressure. This provides the advantage that the fabric cannot be moved too easily under the presser foot.

- > Turn the knob to the right to reduce the pressure foot pressure.
- > Turn the knob further to the right to raise the presser foot.
- > Turn the knob to the left to increase the pressure foot pressure.



## 2.8 Needle and stitch plate

### Changing the needle

- > Raise the needle.
- > Switch the machine off and disconnect it from the power supply system.
- > Remove the presser foot.

- > Loosen the fixing screw of the needle manually.



- > Pull the needle down.
- > Hold the new needle with the flat side to the back.
- > Insert the needle as far as it will go.
- > Tighten the fixing screw manually.

### Selecting the needle in the User Interface

After changing the needle, you can check whether this can be used with the selected stitch plate.

- > Tap «Stitch Plate/Needle Selection».



- > Select the fitted needle.

### Selecting the needle type and the needle size

Useful reminder function: So that no information is lost, the needle type and needle thickness can also be saved on the machine. This means that the saved needle type and needle thickness can be checked at any time.

- > Tap «Stitch Plate/Needle Selection».



- > Tap «Needle Selection».
- > Select the needle type (1) of the fitted needle.
- > Select the needle thickness (2) of the fitted needle.



### Adjusting the needle position up/down




- > To lower the needle, push the button «Needle position Up/Down».
- > To raise the needle, push the button «Needle position Up/Down» again.

### Adjusting the needle position left/right

There is a total of 11 needle positions. The needle position is indicated by the needle position number in the display.

- > To position the needle position to the left, push the button «Needle position Left» (1).
- > To position the needle position to the right, push the button «Needle position Right» (2).

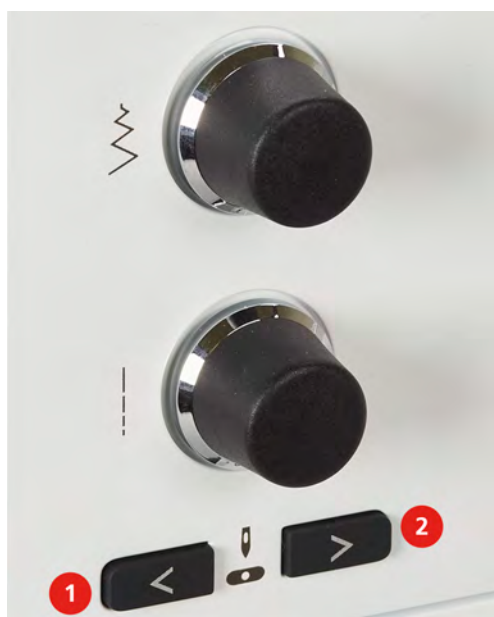

### Needle stop up/down (permanent)



- > To set the needle stop position permanently, tap «Needle Stop Up/Down».
  - The machine stops with needle position down as soon as the foot control is released or the button «Start/Stop» has been pushed.
- > Tap «Needle Stop Up/Down» again.
  - The machine stops with needle position up as soon as the foot control is released or the button «Start/Stop» has been pushed.

### Changing the stitch plate

The stitch plate is marked with vertical, horizontal and diagonal lines in millimeters (mm) and inches (inch). These markings are helpful for sewing or precise top-stitching.

Prerequisite:

- The feed dog is lowered.
- The machine is switched off and disconnected from the power supply.
- The needle and presser foot are removed.

- > At the marking on the rear of the stitch plate, push the stitch plate downwards until it tips.



- > Remove the stitch plate.
- > Place the openings of the new stitch plate above the corresponding guide pins and press down until it clicks into place.

### Selecting the stitch plate in the User Interface

After changing the stitch plate, you can check whether this can be used with the selected needle.



- > Tap «Stitch Plate/Needle Selection».
- > Select the previously attached the stitch plate.



- If the selected stitch plate is suitable to be used in combination with the needle, sewing can begin.
- If the selected stitch plate is not suitable to be used in combination with the needle, an error message is displayed and the machine is automatically prevented from starting.

## 2.9 Threading


### Threading the upper thread

#### Preparing the threading

- > Place the foam pad on the spool holder.
- > Place the thread spool on the spool holder so that the thread unwinds clockwise.
- > Add the appropriate spool disc.
- > Switch on the machine and wait until it starts up.
- > Raise the needle and presser foot.

### Guiding the thread to the needle

- > Hold the thread with one hand between the thread spool and rear thread guide (1). Use the other hand to hold the thread at the end and, during the subsequent steps, always keep it under light tension.
- > Guide the thread in direction of the arrow through the thread tension (2).

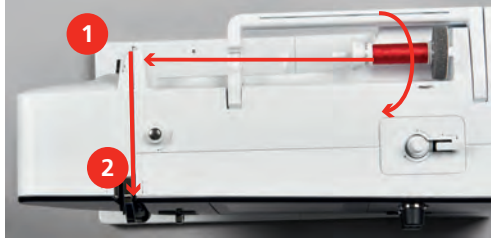

- > Guide the thread downwards around the thread take-up lever cover (3) and then upwards.
- > Insert the thread in the thread take-up lever (4).




- > Guide the thread downwards again (5).
- > Only release the thread now.
- > Switch the machine off.




### Threading the needle


- > Guide the thread through the guides (6/7) above the presser foot.

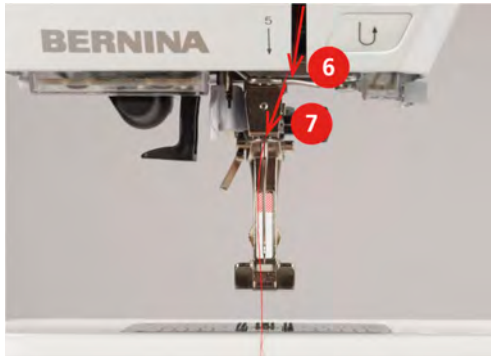

- > Push the semi-automatic needle-threading lever (8) halfway down and pull the thread behind the grey needle-threading finger/hook to the left (9).

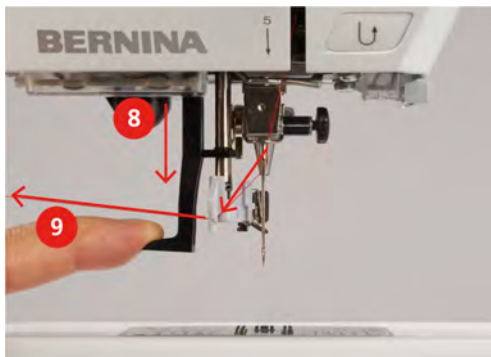


- > Guide the thread from the left to the right in front of the gray needle-threading finger/hook (11).
- > Push the needle-threading lever down as far as it will go (10).
- > Pull the thread from left to right (11) through the needle-threading slot (12) until it clips into the wire hook.
- > Pull the thread over the thread cutter (13) from the back and cut.

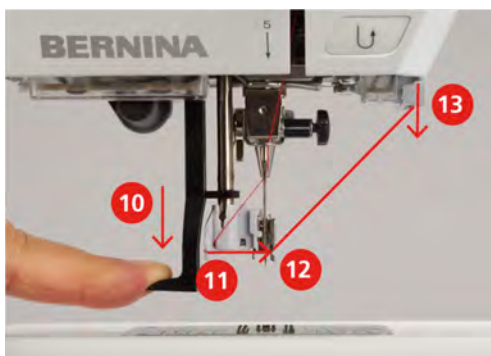

- > Release the needle-threading lever.
  - The thread is pushed through the needle eye.

- > Pull the loop of thread (14) to the rear until the end of the thread is pulled through the needle.

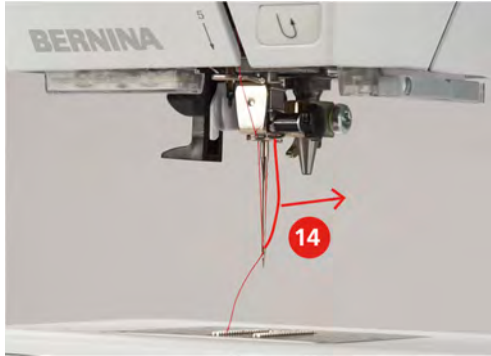

- > Pull the thread below the presser foot and through to the thread cutter (15), and cut it.



### Threading the double needle

Prerequisite:

- The double needle is inserted.
- > Guide the first thread in direction of the arrow on the right side of the tension disc (1).
- > Guide the second thread in direction of the arrow on the left side of the tension disc (1).



- > Guide the first and the second thread to the thread guide above the needle.
- > Thread the first thread manually into the right needle.



- > Thread the second thread manually into the left needle.




### Threading the Triple Needle



Always insert a foam pad when using the retractable spool pin. It prevents the thread from getting hooked at the spool pin.

Prerequisite:

- The triple needle is inserted.
- > Place the foam pad, the thread spool and the appropriate spool disc on the spool holder.
- > Place the filled bobbin on the retractable spool pin.
- > Add the appropriate spool disc.
- > Place the thread spool.
- > Thread the 3 threads up to the upper thread guide.

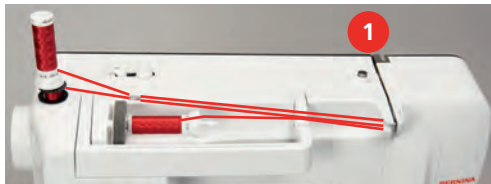

- > Guide 2 threads past the thread tension discs (1) on the left and to the thread guide above the needle.
- > Guide 1 thread past the thread tension discs (1) on the right and to the thread guide above the needle.
- > Thread the first thread into the left needle manually.
- > Thread the second thread into the center needle manually.
- > Thread the third thread into the right needle manually.

## Winding the bobbin thread




The bobbin thread can be wound while sewing when the retractable spool pin is used for winding.

Prerequisite:

- The foam pad, the thread spool and the appropriate spool disc are fitted.
- > Place the empty bobbin on the winding unit so that the silvery sensor surface is facing downwards.



- > Guide the thread to the left into the rear thread guide (1).
- > Guide the thread around the bobbin winder pretension clockwise (2).
- > Wind the thread clockwise 2 – 3 times around the empty bobbin (3).
- > Pull the thread over the thread cutter at the engaging lever (4) and cut.

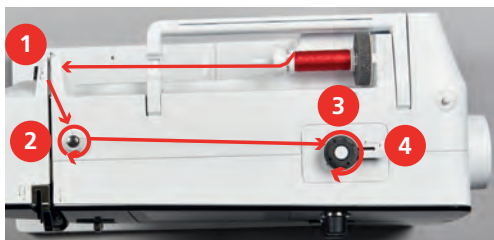

- > Push the engaging lever (5) towards the bobbin.




- The machine winds.
- > To stop the winding process, the engaging lever must be pushed to the right.
- > Push the engaging lever towards the bobbin again to continue the winding process.
  - As soon as the bobbin is full, the machine stops the winding process automatically.
- > Remove the bobbin and cut the thread using the thread cutter at the engaging lever.

## Threading the bobbin thread

Prerequisite:

- The needle is raised.
- The machine is switched off and the bobbin cover is opened.

- > Press the bobbin case release at the bobbin case (1).

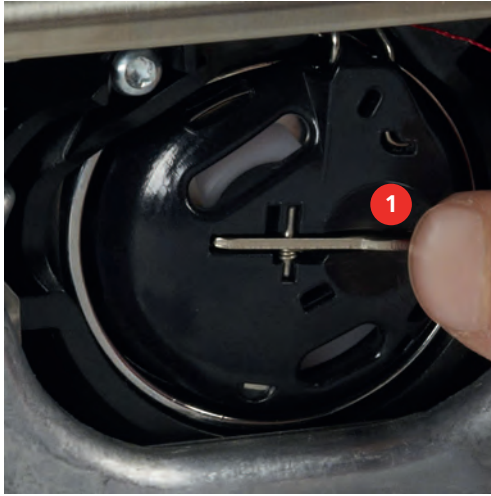

- > Remove the bobbin case.
- > Remove the bobbin from the bobbin case.
- > Insert the new bobbin so that the silvery sensor surface is facing the back of the bobbin case.



- > Pull the thread into the slot (2) from the left.




- > Pull the thread to the right under the spring (3), then pass it below the two thread guides (4) and pull it upwards.



- > To insert the bobbin case into the machine, hold it so that the thread guide (5) points upwards.



- > Insert the bobbin case.
- > Press onto the center of the bobbin case until it engages.
- > Pull the thread through the thread cutter (6) and cut.

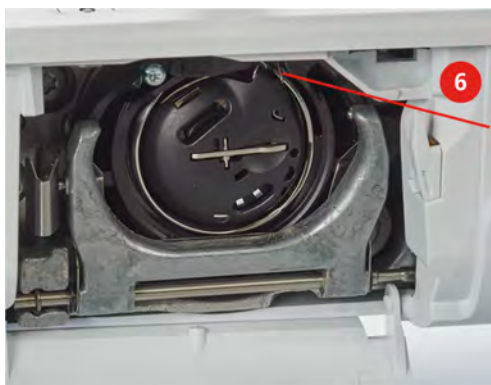

- > Close the Loper Cover.

### Instruction how to thread the bobbin thread



- > Tap «Bobbin Thread».
- > Thread the bobbin thread according to the animation.



## 3 Setup Program

### 3.1 Sewing settings

#### Adjusting the upper thread tension

Changes to the upper thread tension in the Setup Program affect all of the stitch patterns. You can also make changes to the upper thread tension which then apply for the selected stitch pattern in each case. The setting in the setup is retained after the machine is switched off.



> Tap «Home».



> Tap «Setup Program».



> Tap «Sewing settings».



> Tap «Change upper thread tension».  
> Adjust the upper thread tension.

#### Adjusting the maximum sewing speed

You can use this function to set the maximum speed.



> Tap «Home».



> Tap «Setup Program».



> Tap «Sewing settings».



> Tap «Maximum Sewing Speed».  
> Set the maximum sewing speed.

#### Programming securing stitches

If the function is switched on, at the start of the pattern, 4 securing stitches are automatically sewn after the thread cut.



> Tap «Home».



> Tap «Setup Program».



> Tap «Sewing settings».



> Switch "Securing stitches at the start of the pattern" on or off.

### Programming the button «Securing»

The number and type of securing stitches can be programmed.



> Tap «Home».



> Tap «Setup Program».



> Tap «Sewing settings».



 
> Tap «Program buttons and icons».



> Tap «Program securing button».



> To program securing stitches in close succession, tap «Alter the number of securing stitches».  
> Program the number of securing stitches.



> To program 4 securing stitches at the same place, tap «Securing stitches in place».

### Programming the button «Quick reverse»

You can choose between «Reverse sewing» and «Stitch-specific reverse sewing».



> Tap «Home».



> Tap «Setup Program».



> Tap «Sewing settings».



> Tap «Program buttons and icons».







### 3.3 Activating the audio signals



> Tap «Home».



> Tap «Setup Program».



> Tap «Set Sound».  
> To switch all audio signals on or off, tap (1).



> To switch off the sound when selecting a stitch pattern, tap the corresponding «Switch Sounds On/Off» in area (2).



> To switch on the sound when selecting a stitch pattern, tap the corresponding in area\_(2) «1 – 4».



> To switch off the sound for selecting functions, tap the corresponding «Switch Sounds On/Off» in area (3).

> To switch on the sound for selecting functions, tap the corresponding in area\_(3) «1 – 4».

> To deactivate the sound of the beeper when using the BSR Modes, tap «Switch Sounds On/Off» in the sector (4).

### 3.4 Machine settings

#### Selecting a language



> Tap «Home».



> Tap «Setup Program».



> Tap «Machine Settings».



> Tap «Language Selection».  
> Tap the required language.

## Adjusting the screen brightness

The brightness of the screen can be set to meet your individual needs.



> Tap «Home».



> Tap «Setup Program».



> Tap «Machine Settings».



> Tap «Screen Settings».  
> Adjusting the screen brightness.

## Reviewing the total number of stitches

The total number of stitches by the machine and the number of stitches since the last maintenance carried out by a specialist BERNINA dealer are displayed.



> Tap «Home».



> Tap «Setup Program».



> Tap «Machine Settings».



> Tap «Information».



> Tap «Firmware and hardware information».

## Registering details of the dealer

The contact details for your specialized BERNINA dealer can be entered.



> Tap «Home».



> Tap «Setup Program».



> Tap «Machine Settings».

## Setup Program



> Tap «Information».



> To enter the dealer data, tap «Dealer Data».



> To enter the company name of the specialist BERNINA dealer, tap «Name».



> To enter the address of the specialist BERNINA dealer, tap «Address».



> To enter the telephone number of the specialist BERNINA dealer, tap «Phone Number».



> To enter the website or e-mail address of the specialist BERNINA dealer, tap «E-mail Address».

### Saving Service data

The service data regarding the current status of the machine can be saved on a USB stick and consequently provided to the specialized BERNINA dealer.

> Insert a USB stick which provides enough free capacity into the USB port of the machine.

> Tap «Home».



> Tap «Setup Program».



> Tap «Machine Settings».



> Tap «Information».



> Tap «Service Data».

> Tap «Export the service data».

– The icon «Export the service data» is outlined in white.

> If the white frame is no longer displayed, remove the USB stick.



## Back to default setting

**ATTENTION:** Using this function will delete all individually made settings.



> Tap «Home».



> Tap «Setup Program».



> Tap «Machine Settings».



> Tap «Factory Setting».



> To restore all default settings for sewing, tap «Default setting sewing» and confirm.



> To restore all default settings, tap «Default setting machine», confirm and restart the machine.

## Deleting user data

Patterns which are not needed anymore can be deleted to create space for new motifs.



> Tap «Home».



> Tap «Setup Program».



> Tap «Machine Settings».



> Tap «Factory Setting».



> To delete all data from the Personal Memory, tap «Delete data from own storage medium» and confirm.

## Calibrating the Buttonhole Foot #3A

The Buttonhole Foot with Slide #3A is calibrated to the machine and they should only be used both together.

Prerequisite:

- The Buttonhole Foot with Slide #3A is fitted.
- The needle is not threaded.



> Tap «Home».



## Setup Program



> Tap «Setup Program».



> Tap «Machine Settings».



> Tap «Maintenance/Updates».



> Tap «Calibrating the Buttonhole foot #3A».  
> Lower the Buttonhole Foot with Slide #3A.



> To start the calibration, push the button «Start/Stop».



## 4 System settings

### 4.1 Calling up the Tutorial

The tutorial provides information and explanations on different areas of sewing and the various stitches.



- > Tap «Home».



- > Tap «Tutorial».
- > Select the desired topic in order to view information.

### 4.2 Calling up the Creative Consultant

The Creative Consultant provides decision support for sewing projects. After entering the kind of fabric and the desired sewing project, suggestions concerning the suitable needle or the appropriate presser foot are displayed.



- > Tap «Home».



- > Tap «Creative Consultant».
- > Select the fabric on which you want to sew.
- > Select the sewing project.



- > Tap «Confirm».
- The settings are adjusted.

### 4.3 Using eco mode

If work is interrupted for an extended period, the machine can be put into energy-saving mode. The power save mode eco also serves as a child safety feature. Nothing can be selected in the display and the machine cannot be started.



- > Tap «Home».



- > To activate the power save mode, tap «eco Mode».
- The display goes to sleep. The power consumption is reduced and the sewing light is off.
- > To deactivate the power save mode, tap «eco Mode» again.

### 4.4 Calling up the Help



- > Touch the window in the display where help is needed.
- > To start the Help Mode, tap «Help» twice.
- > Tap the icon in the display where help is needed.

### 4.5 Cancelling any alterations with «clr»


Any alterations to motifs can be reset to basic setting. Exceptions are saved motifs which have been filed in the personal memory and monitoring functions.



- > Tap «Clear Settings».

## 5 Creative sewing


### 5.1 Overview selection menu sewing

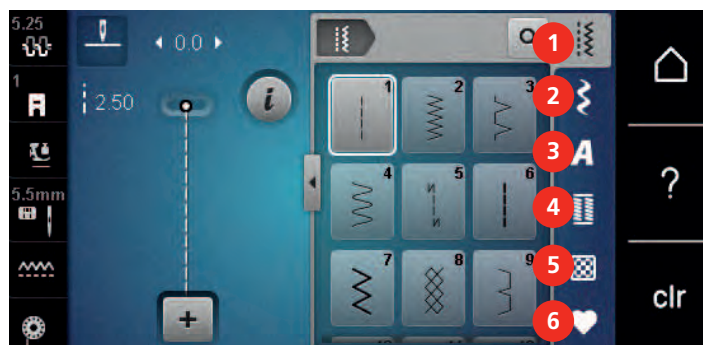

- |   |                       |   |                   |
|---|-----------------------|---|-------------------|
| 1 | «Practical Stitches»  | 4 | «Buttonholes»     |
| 2 | «Decorative Stitches» | 5 | «Quilt Stitches»  |
| 3 | «Alphabets»           | 6 | «Personal Memory» |

#### Selecting a stitch pattern

- > Select a stitch pattern, alphabet or buttonhole.
- > Wipe up in the area of the practical stitches, alphabets or buttonholes to have more stitch patterns displayed.
- > To increase the view, tap «Increasing/Decreasing the display size» (1).

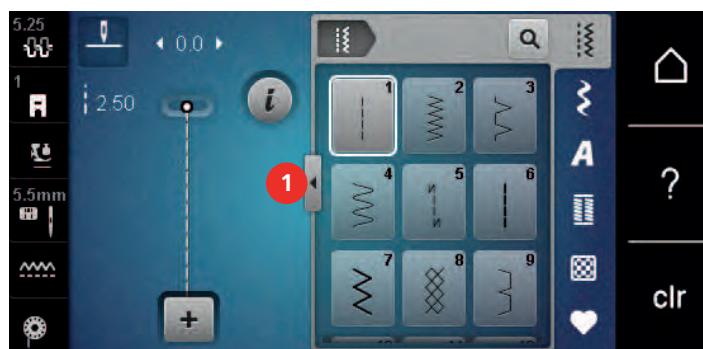

- > To decrease the view, tap «Increasing/Decreasing the display size» again.
- > To select the stitch pattern via the stitch number entry, tap «Stitch Pattern Selection via Number».



### 5.2 Regulating the speed

The sewing speed can be adjusted infinitely variable with the slide.

- > Move the slide to the left to reduce the sewing speed.
- > Move the slide to the right to increase the sewing speed.

### 5.3 Adjusting the upper thread tension

The basic setting of the upper thread tension is provided automatically as soon as a stitch pattern is selected.

The upper thread tension is set optimally at the BERNINA factory and the machine has been tested. Metrosene/Seralon thread size 100/2 (Mettler, Switzerland) is used for the upper and bobbin thread.



When using other sewing threads, the optimal upper thread tension may vary. It may therefore be necessary to adjust the upper thread tension individually according to the sewing project as well as the desired stitch pattern.

The higher the upper thread tension, the tighter the upper thread, and the bobbin thread is pulled up to the top of the fabric. When the upper thread tension is low, the upper thread is less tightened and the bobbin thread is pulled up less.

Alterations to the upper thread tension affect the stitch pattern that is currently selected. Permanent alteration of the upper thread tension for the sewing mode can be made in the Setup Program. (see page 45)

Prerequisite:

- The upper thread tension has been altered in the setup program.

- > Tap «Upper Thread Tension».
- > Adjust the upper thread tension.




- > Tap the yellow-framed icon on the right side to reset the alterations to the default setting.
- > Tap the yellow-framed icon on the left side to reset the alterations in the «Setup Program» to the default setting.

## 5.4 Editing stitch patterns

### Changing the stitch width


- > Turn the «Upper Multi-function knob» to the left to narrow the stitch width.
- > Turn the «Upper Multi-function knob» to the right to widen the stitch width.
- > To call up further setting options, tap the icon «Stitch width» (1).

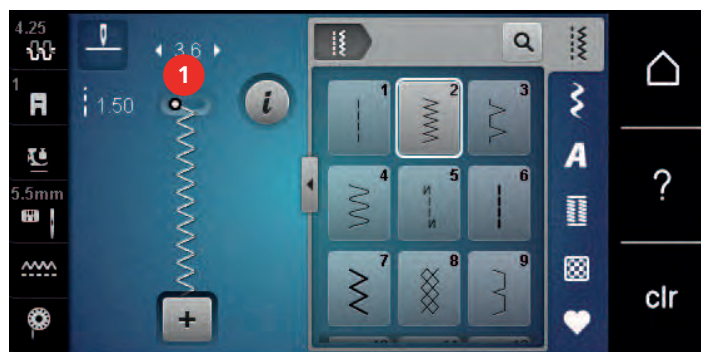

### Changing the stitch length

- > Turn the «Lower Multi-function knob» to the left to shorten the stitch length.
- > Turn the «Lower Multi-function knob» to the right to elongate the stitch length.

- > To call up other setting options, tap «Stitch length» (1).

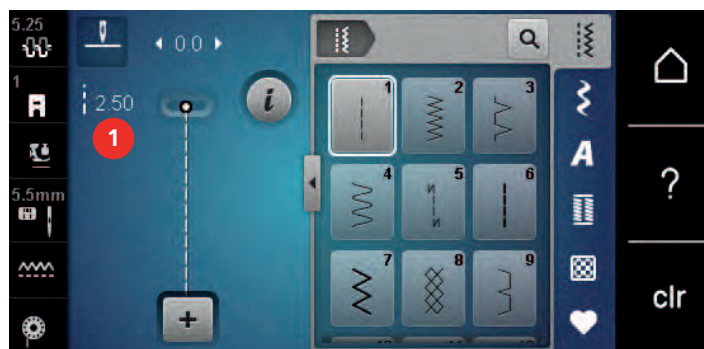


### Correcting the balance

Different fabrics, threads and stabilizers can affect the programmed stitch patterns so that they cannot be sewn out correctly. The electronic balance can correct these deviation and the stitch pattern can be adjusted optimally to the selected fabric.

- > Select a stitch pattern or alphabet.
- > Sewing stitch pattern.
- > Tap «i-Dialog».



- > Tap «Balance».
  - A preview of the stitch pattern is displayed.

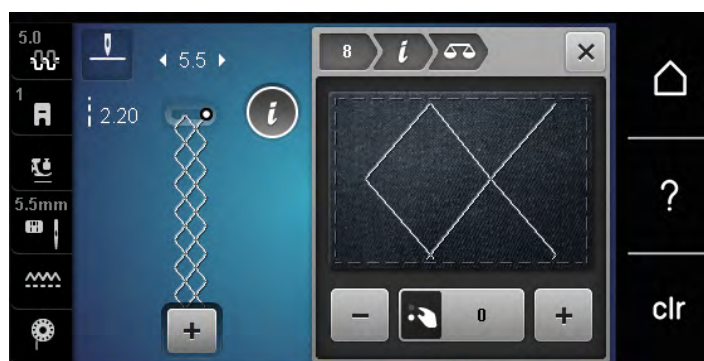

- > To correct the longitudinal direction of the stitch pattern, turn the «Lower Multi-function knob» until the preview of the stitch pattern matches the stitch pattern sewn on the fabric.
- > Altered Balance settings can be saved for each stitch in the «Personal Memory» .
- > Altered Balance settings only remain valid until the «Clear Settings» is pushed or the machine is switched off.



### Programming pattern repeat

Stitch patterns can be repeated up to nine times.

- > Select a stitch pattern or alphabet.
- > Tap «i-Dialog».



- > To sew the stitch pattern 1x, tap «Pattern Repeat» 1x.
- > To repeat the stitch pattern up to 9 times, tap «Pattern Repeat» 2 up to 9x.
- > To deactivate the pattern repeat, tap and hold «Pattern Repeat».

## Mirror image of stitch patterns

- > Select a stitch pattern or alphabet.
- > Tap «i-Dialog».



 
- > To mirror the stitch pattern from left to right, tap «Mirror Image Left/Right».



- > To mirror the stitch pattern in sewing direction, tap «Mirror Image Up/Down».

## Quick reverse


- > Select a stitch pattern or alphabet.
- > To switch immediately to sewing in reverse when pushing the button «Quick Reverse», select Needle Stop Down (permanent).
- > Program needle stop up (permanent) to sew another stitch forward before the machine switches to reverse sewing.



- > Push and hold the button «Quick Reverse».

## Permanent Quick reverse

 - > Select a stitch pattern or alphabet.
- > Tap «i-Dialog».



- > To sew permanently in reverse, tap «Permanent Quick Reverse».
  - The machine sews permanently in reverse until «Permanent Quick Reverse» is tapped again.

## 5.5 Combining stitch patterns


### Overview Combi mode




- |   |                 |   |  |
|---|-----------------|---|--|
| 1 | «Stitch Width»  | 3 | «Combination Mode/Single Mode»                   |
| 2 | «Stitch length» | 4 | Individual stitch pattern within the combination |

## Creating Stitch pattern combinations

In the Combi-mode stitch patterns and alphabets can be combined according to your wish. By combining any alphabet letters, the logo BERNINA can be created.

-  > Tap «Combination Mode/Single Mode».
- > Select the desired stitch patterns.




-  > To get back to the Single Mode, tap «Combination Mode/Single Mode» again.

## Saving a stitch pattern combination

To use an individually created stitch pattern combinations again, they can be saved in the folder «Personal Memory».

- > Create a stitch pattern combination.
- > Tap «Personal Memory».




-  > Tap «Save stitch pattern».

-  > To save the stitch pattern combination, tap «Confirm».

## Loading a stitch pattern combination

-  > Tap «Combination Mode/Single Mode».



-  > Tap «Personal Memory».

-  > Tap «Loading a stitch pattern combination».
- > Select a stitch pattern combination.

## Overwriting a stitch pattern combination

- > Create a stitch pattern combination.
- > Tap «Personal Memory».



-  > Tap «Save stitch pattern».
- > Select the stitch pattern combination which is to be overwritten.
-  > To overwrite the stitch pattern combination, tap «Confirm».

## Deleting a stitch pattern combination

- > Create a stitch pattern combination.
- > Tap «i-Dialog».
- > Tap «Edit Entire Combination».




- > Tap «Delete».



- > Tap «Confirm».

## Editing a single stitch pattern

- > Create a stitch pattern combination.
- > To select a single stitch pattern, tap the desired position (1) within the stitch pattern combination.

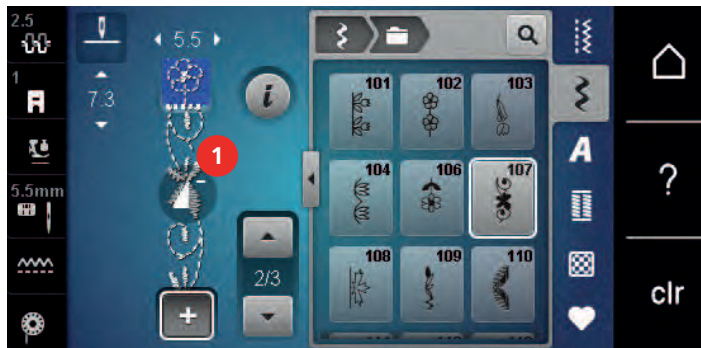

- > To edit the single stitch pattern, tap «i-Dialog».

## Deleting a single stitch pattern

Prerequisite:

- A stitch pattern combination has been created.
- > Tap the desired stitch pattern (1) within the stitch pattern combination.



- > Tap «i-Dialog».




- > Tap «Delete».

## Adding a single stitch pattern

The new stitch pattern is always inserted **after** the selected stitch pattern.

- > Create a stitch pattern combination.
- > To select a single stitch pattern, tap the desired position (1) within the stitch pattern combination.

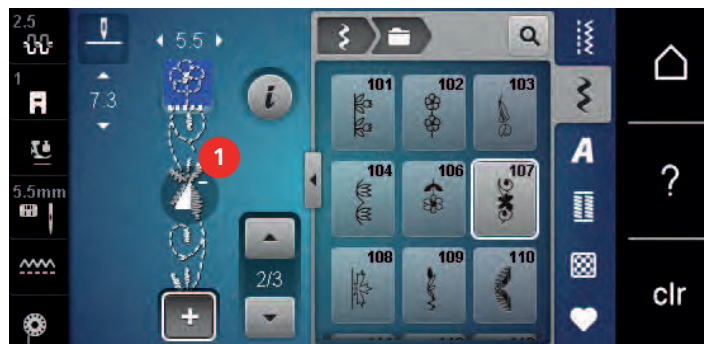

- > Select a new stitch pattern.

## Mirroring a stitch pattern combination

 
- > Create a stitch pattern combination.
- > Tap «i-Dialog».
- > Tap «Edit Entire Combination».



- > To mirror the whole stitch pattern combination from left to right, tap, «Mirror Image Left/Right».
- > To reset the changes and revert to the default settings, tap «Mirror Image Left/Right».

## Securing a stitch pattern combination

- > Create a stitch pattern combination.
- > Select the desired position within the stitch pattern combination where the stitch pattern combination is to be secured.
- > Tap «i-Dialog».



- > Tap «Edit Combination at Cursor Position».



- > Tap «Securing Stitches».
  - Every single pattern of the stitch pattern combination can be secured at the start or at the end.

## Programming pattern repeat

- > Create a stitch pattern combination.
- > Tap «i-Dialog».
- > Tap «Edit Entire Combination».



- > To repeat the stitch pattern combination, tap «Pattern Repeat» 1x.
- > To repeat the stitch pattern combination up to 9x, tap «Pattern Repeat» again.
- > To deactivate the pattern repeat, tap and hold «Pattern Repeat» or tap «Clear Settings».

## 5.6 Administering stitch patterns

### Saving settings of stitch patterns



- > Select a stitch pattern, alphabet or buttonhole.
- > Tap «i-Dialog».
- > Edit the stitch, alphabet or buttonhole.



- > To save all alterations permanently, tap «Save Stitch Pattern Settings».



- > To cancel all alterations, tap «Reset Stitch Pattern».

### Saving stitch patterns in personal memory

In the folder «Personal Memory» any stitch patterns, also those which have been individually edited, can be saved.

- > Select a stitch pattern, alphabet or buttonhole.
- > Edit the stitch pattern.
- > Tap «Personal Memory».



- > Tap «Save stitch pattern».
- > Select the file where the pattern is to be saved.



- > Tap «Confirm».

### Overwriting stitch patterns from the personal memory

Prerequisite:

- The stitch pattern is saved in the personal memory.

- > Select a stitch pattern, alphabet or buttonhole.
- > Edit the stitch pattern.
- > Tap «Personal Memory».



- > Tap «Save stitch pattern».
- > Select the file where the stitch pattern to be overwritten has been saved.
- > Select the stitch pattern which should be overwritten.



- > Tap «Confirm».

### Loading stitch patterns from the personal memory

Prerequisite:

- The stitch pattern is saved in the personal memory.

- > Tap «Personal Memory».





- > Tap «Load embroidery motif».
- > Select the file where the stitch pattern has been saved.
- > Select a stitch pattern.

### Deleting stitch patterns from the personal memory

Prerequisite:

- The stitch pattern is saved in the personal memory.



- > Tap «Personal Memory».



- > Tap «Delete».
- > Select the file where the stitch pattern has been saved.
- > Select a stitch pattern.



- > To delete the stitch pattern, tap «Confirm».

## 5.7 Securing

### Securing a seam with the button «Securing»

The «Securing» button can be programmed with various securing stitches. (see page 46)




- > Pressing the «Securing» button before starting to sew.
  - The stitch pattern/stitch pattern combination is secured with the number of programmed stitches when sewing is started.
- > Press the «Securing» button while sewing.
  - The machine stops immediately and secures with the number of programmed stitches.

## 5.8 Height Compensation of uneven layers

If the presser foot is at an angle when sewing over a thick seam, the feed dog cannot grip the fabric and the sewing project cannot be sewn out properly.


- > Place 1 – 3 compensating plates as required from the back of the presser foot close to the needle to level the fabric layer.

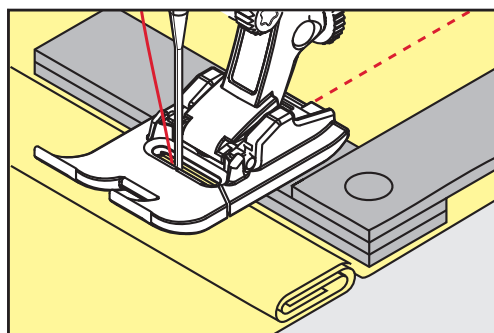

- The presser foot is leveled with the sewing project.



- > Place 1 – 3 compensating plates as required from the front of the presser foot close to the needle to level the fabric layer.

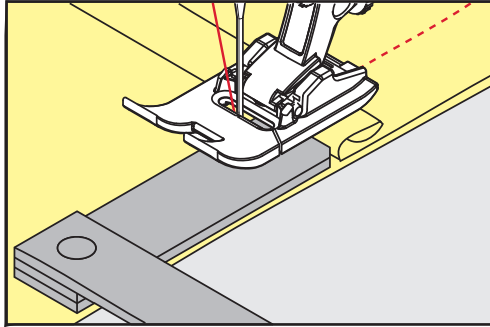


- The presser foot is leveled with the sewing project.
- > Sew until the complete presser foot has passed the thick seam.
- > Remove the plates of the height compensation.

## 5.9 Sewing Corners

When sewing corners, only a small section of the fabric is actually on the feed dog. Therefore it cannot grip the fabric well. By means of the height compensation tool the fabric can be fed evenly.


- > When the fabric edge is reached, stop the sewing process with needle position down.
- > Raise the presser foot.
- > Turn the fabric and place in desired position.
- > Place 1 – 3 compensating plates as required on the right of the presser foot close to the sewing project.
- > Lower the presser foot.

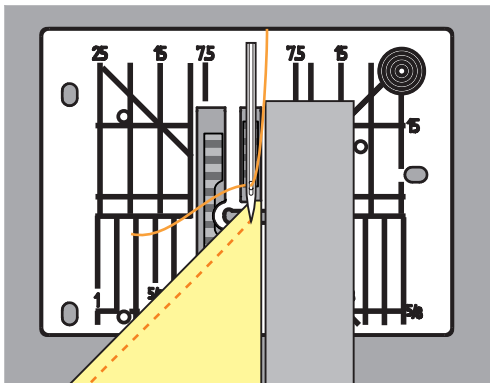

 

 



 
 




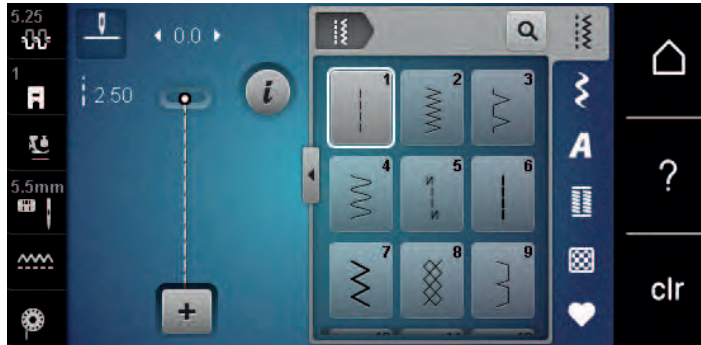












- > Resume sewing until the sewing project is on the feed dog again.

## 6 Practical stitches



  

### 6.1 Overview Practical Stitches




Stitch patterns	Stitch number	Name	Description
	1	Straight stitch	To join seams, for topstitching and basting.
	2	Zigzag	To finish edges, to sew elastic seams, to sew on lace inserts and elastics.
	3	Vari-overlock	For finishing edges, sewing together and simultaneously finishing elastic fabrics.
	4	Running stitch	For darning and reinforcing fabric edges or attaching lace or rubber tape.
	5	Securing program	For automatic securing at the start of the seam with forward and reverse stitches.
	6	Triple straight stitch	For reinforced seams on heavy fabrics and decorative effects.
	7	Triple zigzag	For durable seams on strong fabrics, visible hems and decorative seams.
	8	Honeycomb stitch	For stretch fabrics and hems, including with rubber threads.
	9	Blind stitch	For blind hems on most fabric types and for shell edging on soft jerseys and fine fabric.
	10	Double overlock	For simultaneously sewing together and finishing elastic fabrics.
	11	Super stretch stitch	For highly stretch open seams.

	12	Gathering stitch	For gathering with rubber threads and for flat joining seams on medium-weight fabrics.
	13	Stretch overlock	For simultaneously sewing together and finishing elastic fabrics, as well as for flat joining seams.
	14	Tricot stitch	For visible hems and seams in lingerie and sweaters and for mending tricot fabric.
	15	Universal stitch	For flat joining seams, visible hems and decorative seams in strong fabrics such as felt and leather and for attaching rubber tape.
	16	Sewn-out zigzag	For finishing and reinforcing fabric edges, for sewing on rubber tape and for decorative seams.
	17	Lycra stitch	For flat joining seams, visible hems on Lycra fabric and for stitching over seams in foundation garments.
	18	Stretch stitch	For stretchable seams and hems in woven and knitted fabrics.
	19	Reinforced overlock	For overlock seams or flat joining seams on medium-weight knit fabrics and toweling.
	20	Knit overlock	For stretchable seams and hems in woven and knitted fabric, for sewing and finishing.
	22	Simple darning program	For automatic darning in fine to strong fabrics.
	23	Reinforced darning program	For automatic darning in strong materials.
	24	Bartack program	For reinforcing pocket openings, buttonhole bars and for sewing belt loops.
	25	Bartack program	For reinforcing pocket openings, sewing belt loops and securing seam ends.
	26	Large fly stitch	For reinforcing pocket openings, zippers and slits in medium-weight to thick fabrics.



	29	Narrow blind stitch	For blind hems and shell edging in light, fine and soft fabrics.
	30	Manual basting stitch	For work where a very long stitch length is required.
	32	Single straight stitch	As a connecting stitch in a combination for one straight stitch.
	33	Three single straight stitches	As connecting stitches in a combination for three individual straight stitches.

## 6.2 Sewing straight stitch

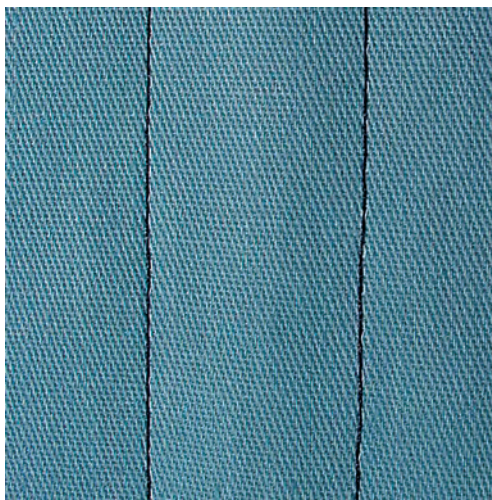


Match the stitch length with the sewing project, such as for denim fabrics use long stitches (ca. 3 – 4 mm), for delicate fabrics use short stitches (ca. 2 – 2.5 mm). Match the stitch length with the thread size, e. g. when edgestitching with Cordonnet, use long stitches (ca. 3 – 5 mm).

Prerequisite:

- The Reverse Pattern Foot #1 is fitted.
- > Tap «Practical Stitches».
- > Select Straight stitch No. 1.



### 6.3 Securing with the automatic Securing Program

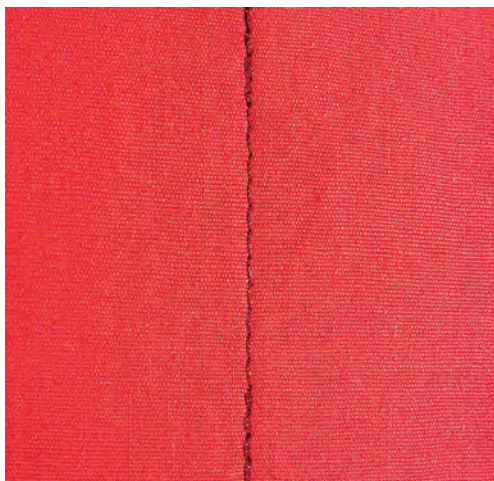


Due to a determined number of 6 stitches sewn forwards and 6 stitches sewn in reverse, the securing is regular.

Prerequisite:

- The Reverse Pattern Foot #1 is fitted.




 - > Tap «Practical Stitches».
- > Select Securing program No. 5.
- > Press the foot control.
  - The machine secures automatically.



- > Sew the seam in the desired length.
- > Push the button «Quick Reverse».
  - The machine secures automatically and stops at the end of the securing program.

### 6.4 Sewing in the zipper

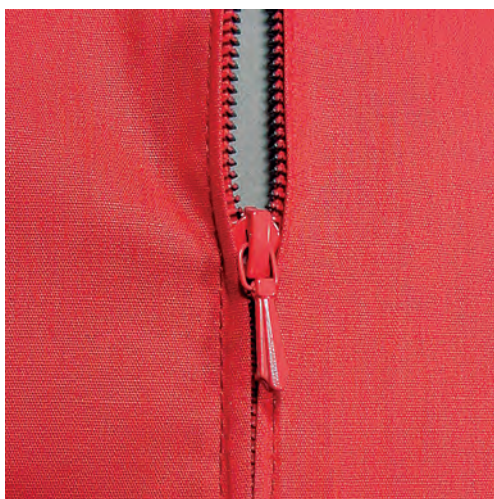


As the fabric feed can be difficult when starting to sew, it is recommended to hold the threads firmly or to pull the fabric slightly to the back for a few stitches or to sew 1 – 2 cm reverse first.

- > Fit the Reverse Pattern Foot #1.



- > Tap «Practical Stitches».
- > Select Straight stitch No. 1.
- > Sew the seam up to where the zipper starts.
- > Sew the securing stitches.
- > Close the zipper length with long stitches.
- > Finish the seam allowances.
- > Iron the seam.
- > Open the zipper length.
- > Baste the zipper under the fabric so that the fabric folded edges meet over the center of the zipper.
- > Open the zipper a few centimeters.
- > Fit the Zipper Foot #4.
- > Move the needle position to the right.
- > Use the Free Hand System to raise the presser foot and to position the sewing project.
- > Start sewing from top left.
- > Guide the foot so that the needle stitches along the zipper coils.
- > Stop in front of the zipper pull with needle position down.
- > Raise the presser foot.
- > Close the zipper.
- > Continue to sew and stop in front of the base of the zipper with needle position down.
- > Raise the presser foot and turn the sewing project.
- > Sew across the other side of the zipper and stop with needle position down.
- > Raise the presser foot and turn the sewing project.
- > Sew the second side from bottom to top.

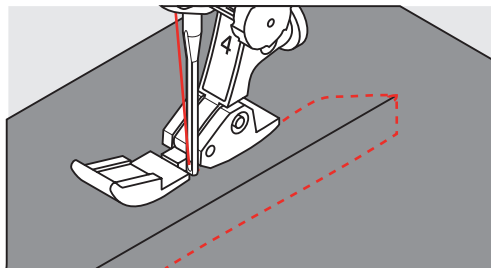

## 6.5 Sewing both sides of the zipper from bottom to top

For fabrics with pile, such as velvet, it is recommended to sew in the zipper on both sides from bottom to top.




When the fabric is densely woven or hard, it is recommended to use a needle with the size 90 – 100. This results in an even stitch formation.



- > Fit the Reverse Pattern Foot #1.
- > Tap «Practical Stitches».
- > Select Straight stitch No. 1.
- > Sew the seam up to where the zipper starts.
- > Sew the securing stitches.
- > Close the zipper length with long stitches.
- > Finish the seam allowances.
- > Iron the seam.
- > Open the zipper length.
- > Baste the zipper under the fabric so that the fabric folded edges meet over the center of the zipper.
- > Fit the Zipper Foot #4.
- > Move the needle position to the right.
- > Use the Free Hand System to raise the presser foot and to position the sewing project.



- > Start sewing in the center of the seam at the end of the zipper.
- > Sew diagonally along the edge of the zipper coils.
- > Sew the first side (1) from bottom to top.
- > Stop in front of the zipper pull with needle position down.
- > Raise the presser foot.
- > Open the zipper as far as behind the presser foot.
- > Lower the presser foot and continue sewing.
- > Move the needle position to the left.
- > Sew the second side (2) in exactly the same way from bottom to top.

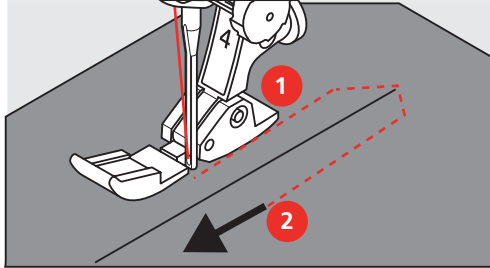

## 6.6 Sewing Triple Straight stitch




The Triple straight stitch is especially suitable for durable seams and for firm, densely woven fabrics such as denim and corduroy. For firm or densely woven materials it is recommended to fit the Jeans Foot #8. This will help to sew denim or canvas. For decorative topstitching, the stitch length can be elongated.

- > Fit the Reverse Pattern Foot #1.
- > Tap «Practical Stitches».
- > Select Triple straight stitch No. 6.



## 6.7 Sewing Triple zig zag

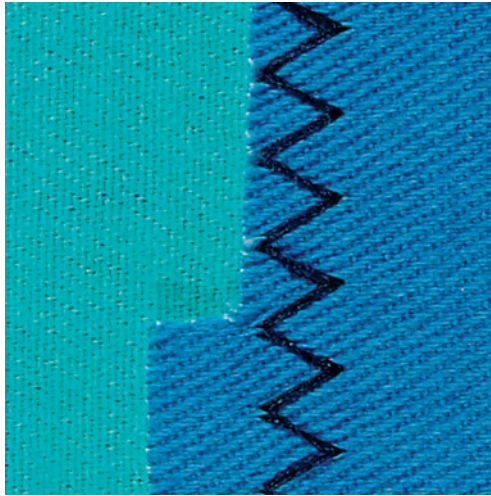


In firm fabrics, particularly for denim fabrics, deckchair covers, awnings. Hems on items that are frequently washed. Finish the seam edges first.



- > Fit the Reverse Pattern Foot #1.
- > Tap «Practical Stitches».
- > Select Triple zigzag No. 7.

## 6.8 Manual darning

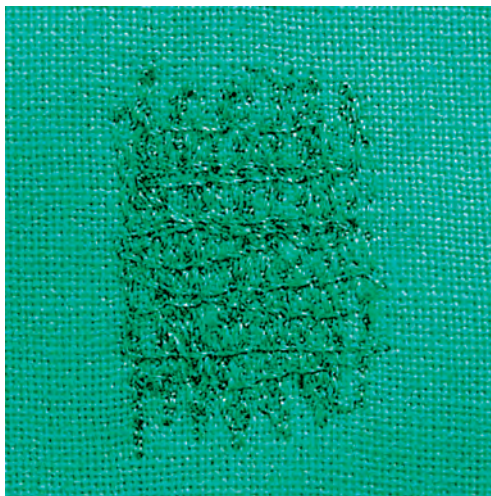

Used for darning holes or worn areas in all fabric types.

If the thread is lying on top and a poor stitch formation results, slow down the movement of the sewing project. If there are knots on the wrong side of the fabric, move the sewing project faster. When the thread breaks, guide the sewing project more consistently.




- > Fit the Darning Foot #9.
- > Tap «Practical Stitches».
- > Select Straight stitch No. 1.
- > Lower the feed dog.
- > Attach the Slide-on Freearm Extension Table.
- > Hoop the sewing project in the round embroidery hoop (optional accessory).
  - The darning area stays evenly taut and cannot be distorted.
- > Sew from the left to the right, guide the fabric evenly by hand without using pressure.






- > Sew another loose row.

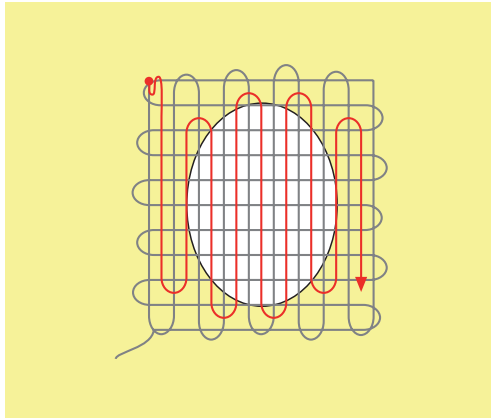


## 6.9 Automatic darning

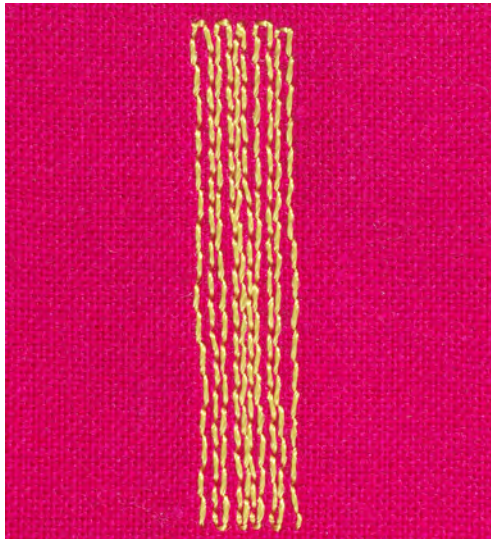

The Simple darning program No. 22 is particularly suitable for quick darning of worn areas or tears. It is recommended to use fine material as a backing for the worn and damaged areas or to stick an adhesive interlining. The Simple darning program No. 22 replaces the longitudinal threads in all fabrics. If the darning area becomes distorted, correct with the balance.

 - > Fit the Reverse Pattern Foot #1 or the Buttonhole Foot with Slide #3A (optional accessory).
- > Tap «Practical Stitches».
- > Select Simple darning program No. 22.
- > Hoop light-weight materials in the round embroidery hoop (optional accessory).
  - The darning area stays evenly taut and cannot be distorted.
- > Start sewing top left.
- > Sew the first row.
- > Stop the machine.
- > Push the button «Quick Reverse».
  - The length is programmed.
- > Finish sewing the Darning Program.
  - The machine stops automatically.



## 6.10 Reinforced darning, automatic

**NOTICE!** This program only works in combination with the Buttonhole Foot with Slide #3A which in some markets is only available as an optional accessory from specialized BERNINA retailers.



The Reinforced darning program No. 23 is particularly suitable for quick darning of worn areas or tears. The Reinforced darning program No. 23 replaces the longitudinal threads in all fabrics.

 


If the Darning Program does not cover the whole worn or damaged area, it is recommended to reposition the work and sew the Darning Program again. The length is programmed and can be repeated as often as desired.



- > Fit the Buttonhole Foot with Slide #3A.
- > Tap «Practical Stitches».
- > Select Reinforced darning program No. 23.
- > Hoop light-weight materials in the round embroidery hoop (optional accessory).
  - The darning area stays evenly taut and cannot be distorted.

- > Start sewing top left.
- > Sew the first row.
- > Stop the machine.



- > Push the button «Quick Reverse».
  - The darning length is programmed.
- > Finish sewing the Darning Program.
  - The machine stops automatically.

## 6.11 Finishing edges



Zigzag No. 2 is suitable for all fabrics. It can be used for elastic seams as well as for decorative work. Use darning thread for fine materials. When sewing satin stitch, it is recommended to set a short, dense zigzag at a stitch length of 0.3 – 0.7 mm. The satin stitch can be used for appliqué and for embroidering.

Prerequisite:

- The edge of the fabric should lie flat and not roll.
- > Fit the Reverse Pattern Foot #1.
- > Tap «Practical Stitches».
- > Select Zigzag No. 2 or Satin stitch No. 1315.
- > Neither select too wide a stitch nor too long a stitch.
- > Guide the edge of the fabric into the center of the presser foot, so that the needle goes into the fabric on one side and over the edge into the air on the other side.



## 6.12 Sewing Double overlock



A double overlock seam is suitable for looser knit fabric and for cross seams in woven fabric. When working with jersey, a jersey needle should be used to prevent damaging the knit fabric. When sewing stretch materials, use a stretch needle.

- > Fit the Reverse Pattern Foot #1 or Overlock Foot #2.
- > Tap «Practical Stitches».
- > Select Double overlock No. 10.




## 6.13 Narrow edgestitching

- > Fit the Blindstitch Foot #5 or Edgestitch Foot #10.
- > Tap «Practical Stitches».
- > Select Straight stitch No. 1.
- > Place the left-hand edge against the guide of the Blindstitch foot.




- > Select the left-hand needle position at the desired distance to the edge.

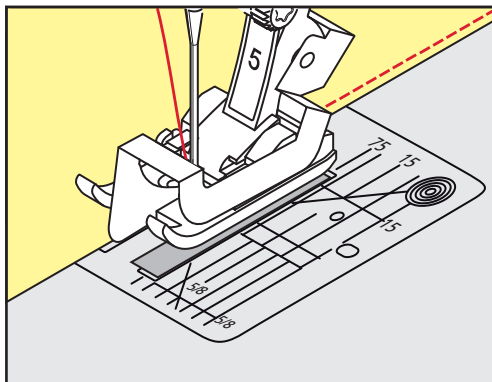

### 6.14 Wide edgestitching



- > Fit the Reverse Pattern Foot #1.
- > Tap «Practical Stitches».
- > Select Straight stitch No. 1.
- > Guide the edge along the presser foot or at a distance of 1–2.5 cm along the marks on the stitch plate.
- > Select the needle position at the desired distance to the edge.

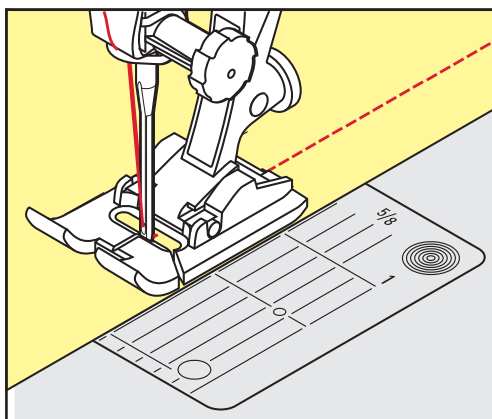


### 6.15 Edgestitching using the seam guide (optional accessory)

When sewing parallel wider lines, it is recommended to guide the seam guide (optional accessory) along a sewn line.



- > Fit the Reverse Pattern Foot #1.
- > Tap «Practical Stitches».
- > Select Straight stitch No. 1.
- > Loosen the screw on the back of the presser foot.
- > Insert the seam guide into the hole in the presser foot.
- > Adjust the width as required.
- > Tighten the screw.

- > Guide the folded edge along the seam guide.

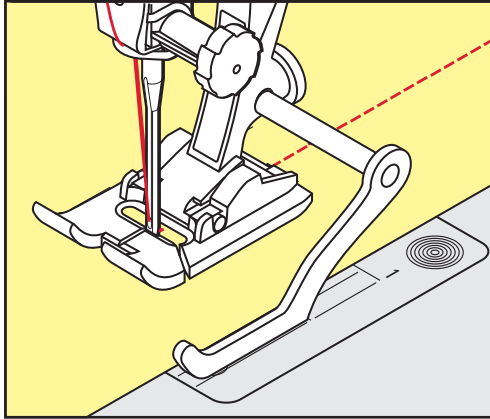


### 6.16 Sewing hem edges


When using the Blindstitch Foot #5, it is recommended to set the needle position to the far left or right. With the Reverse Pattern Foot #1 and the Edgestitch Foot #10, all needle positions are possible.



- > Fit the Blindstitch Foot #5 or the Reverse Pattern Foot #1 or the Edgestitch Foot #10.
- > Tap «Practical Stitches».
- > Select Straight stitch No. 1.
- > Place the inner upper hem edge on the right against the guide of the Blindstitch Foot.
- > Select the needle position far right in order to sew along the upper hem edge.

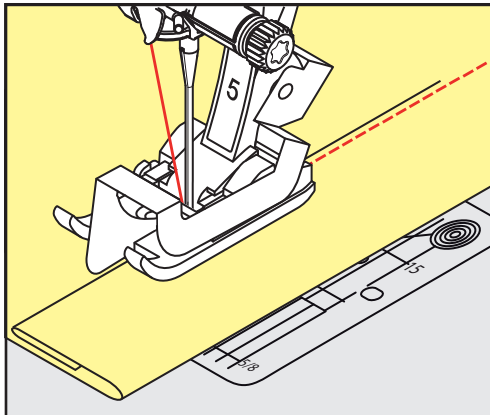


### 6.17 Sewing blind hems

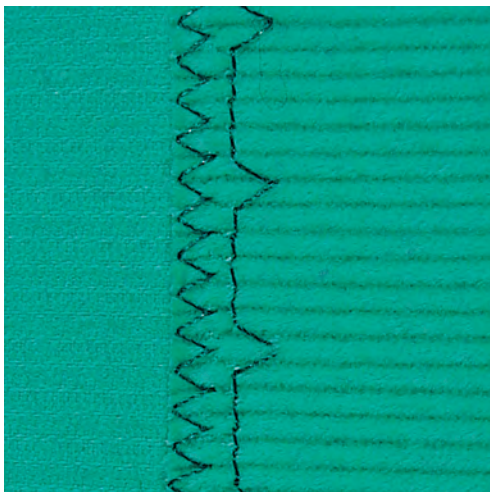


For invisible hems in medium to heavy weight cotton, wool and blended materials.

Prerequisite:

- The fabric edges are finished.
- > Fit the Blindstitch Foot #5.
- > Tap «Practical Stitches».
- > Select Blind stitch No. 9.
- > Fold the fabric so that the finished fabric edge is on the right side.
- > Place the fabric under the presser foot and move the folded edge against the metal guide on the presser foot.
- > Guide the folded edge evenly along the metal guide of the presser foot to sew the stitches evenly deep.
  - Make sure that the needle only pierces the edge of the fold.
- > After sewing about 10 cm (ca. 3.93 inch) check both sides of the fabric and adjust the width again if necessary.

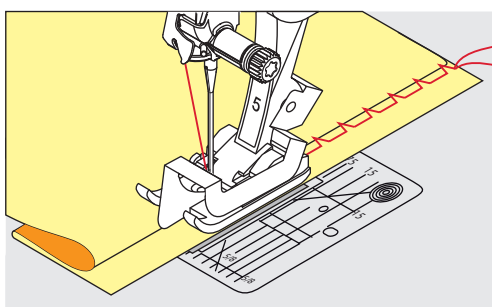

## 6.18 Sewing visible hems

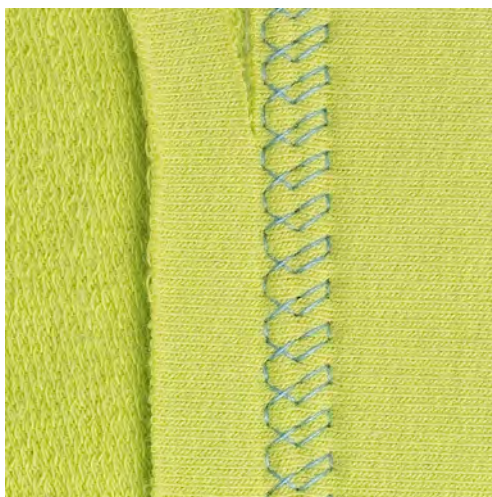

The visible hem is particularly suitable for elastic seams in tricot made of cotton, wool, synthetic and mixed fibers.

- > Fit the Reverse Pattern Foot #1.
- > Tap «Practical Stitches».
- > Select Tricot stitch No. 14.
- > Iron the hem and baste if necessary.
- > Reduce the Presser Foot Pressure if necessary.
- > Sew the hem in the desired depth on the right side of the fabric.
- > Trim off the remaining fabric on the wrong side of the fabric.








## 7 Decorative stitches

### 7.1 Overview Decorative Stitches

Easier or more difficult decorative stitches come into their own depending on the type of fabric.

- Decorative stitches which are programmed with simple straight stitches are particularly appropriate for lightweight materials, e. g. the Decorative stitch No. 101.
- Decorative stitches which are programmed with triple straight stitches or with a few satin stitches are particularly appropriate for medium-weight materials, e. g. the Decorative stitch No. 107.
- Decorative stitches which are programmed with satin stitches are particularly appropriate for heavyweight materials, e. g. the Decorative stitch No. 401.

For a perfect stitch formation it is of advantage to use the same thread color for upper and bobbin thread and a stabilizer. With pile or longfiber materials, it is recommended to use an additional water-soluble stabilizer on the right side, which can be easily removed after sewing.

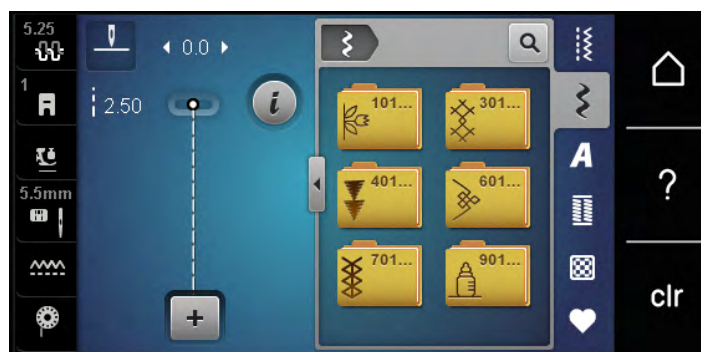

Decorative stitch	Category	Name
	Category 100	Natural stitches
	Category 300	Cross stitches
	Category 400	Satin stitches
	Category 600	Geometric stitches
	Category 700	Heirloom stitches
	Category 900	Novelty stitches
	Category 7100	Kaffe Fassett stitches

## 7.2 Bobbin-Play



The bobbin can be filled with different thread material. For free-motion stitching to add texture. This method is similar to "normal" free-motion sewing, but is done on the **wrong** side of the fabric.

Reinforce the area to be sewn with embroidery stabilizer. The design can be drawn on the wrong side of the fabric. You can also draw the design on the front side of the fabric. The lines can be followed with a freely guided straight stitch using polyester, cotton or rayon thread. The rows of stitching are visible on the wrong side of the fabric, and they serve as guidelines for the bobbin-thread sewing.

The BSR function can be used for bobbin-thread sewing. We recommend guiding your project evenly under the needle at a consistent speed, following the lines of the design. The stabilizer must be removed after sewing.

A sewing sample should be produced and checked first to see how the result looks on the right-hand side.

Not all decorative stitches are suitable for this technique. Simple decorative stitches provide best results. Avoid compact stitch types and satin stitches.

### NOTICE

#### Inappropriate bobbin case is used

Damage to the bobbin case.

> Use the Bobbinwork bobbin (optional accessory).



> Fit the Open Embroidery Foot #20.

> Tap «Decorative Stitches».


> Select an appropriate decorative stitch.

> Turn the «Upper Multi-function knob» and «Lower Multi-function knob» to set the stitch length and stitch width so that a beautiful stitch formation can be achieved even when sewing with thick thread.



> To adjust the upper thread tension, tap «Upper Thread Tension».

### 7.3 Sewing cross stitches

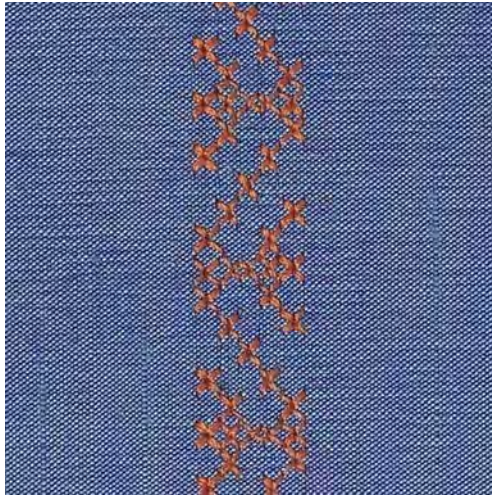


Cross Stitch Embroidery is a traditional technique and an addition to the other decorative stitches. If the cross stitches are sewn on fabrics with a linen structure, they look as if they were hand-stitched. When cross stitches are sewn with embroidery yarn, the stitch pattern appears fuller. Cross stitches are particularly used for home furnishing, trimmings on garments and embellishing in general. As every following line refers to the first row, it is important to stitch the first row in a straight line.

- > Fit the Reverse Pattern Foot #1 or Open Embroidery Foot #20.
- > Select a cross stitch of the Category 300 and combine it as desired.
- > Stitch the first row using the seam guide to sew a straight line.
- > Stitch the second row next to the first at a distance of one presser foot's width or using the seam guide.



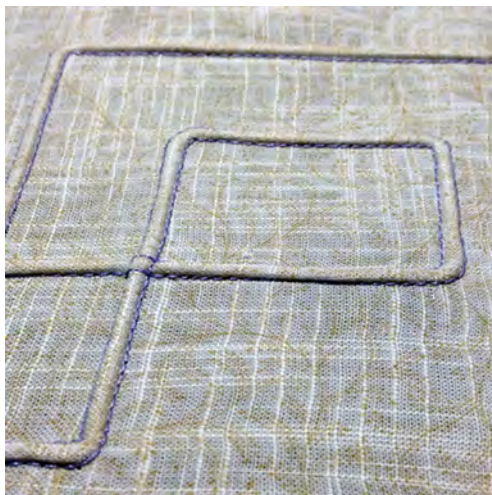


### 7.4 Pintucks

#### Pintucks



Pintucks are narrow stitched folds which are normally sewn on the fabric before cutting out the pieces for garments or other sewing projects. They are suitable for embellishing or in combination with other heirloom embroidery techniques. The use of Pintuck Feet can simplify this technique considerably. This technique reduces the size of the fabric. This means that always enough fabric should be calculated.

## Overview Pintuck Feet


Pintuck foot	Number	Description
	# 30 (optional accessory)	3 grooves For heavy-weight fabrics. In combination with the 4 mm double needle
	# 31 (optional accessory)	5 grooves For heavy to medium-weight fabrics. In combination with the 3 mm double needle
	# 32 (optional accessory)	7 grooves For light to medium-weight fabrics. In combination with the 2 mm double needle
	# 33 (optional accessory)	9 grooves For very light fabrics (without extra cord). In combination with the 1 or 1.6 mm twin needle
	# 46C (optional accessory)	5 grooves In combination with the 1.6 – 2.5 mm double needle For very light to medium-weight fabrics.

### Working with cord

A more distinctive and relief-like effect can be achieved when the pintucks are corded, which means that they are sewn with an additional pintuck cord. Chose a pintuck cord that fits well into the grooves of the selected pintuck foot. The cord must be colorfast and shrinkproof.

- > Switch off the machine and disconnect it from the power supply.
- > Remove the needle.
- > Remove the presser foot.
- > Remove the stitch plate.
- > Open the hook cover.

- > Pull the cord through the hook opening from the bottom and through the opening of the stitch plate.
- > Replace the stitch plate.
- > Close the Looper cover.
- > Make sure that the cord slides through the thread slot of the bobbin cover.

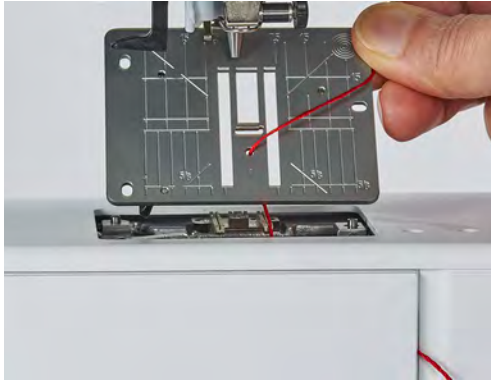


- > Place the spool on the spool holder.



- > Check that the cord runs smoothly.
- > If the thread doesn't glide smoothly at the hook cover, leave the hook cover open.
  - The cord lies on the wrong side of the material and is hold/sewn over by the bobbin thread.

### Sewing Pintucks

- > Insert the corresponding twin needle.
- > Threading the double needle.
- > Thread-up command.
- > Sewing the first pintuck.
- > Place the first pintuck in one of the side grooves in the presser foot.
- > Sew additional pintucks parallel.

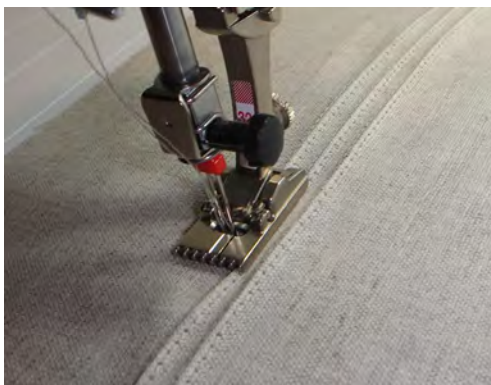


## 8 Alphabets

### 8.1 Overview Alphabet

Block, Double block and Script alphabets as well as as Cyrillic can be sewn in lower case letters.

For a perfect stitch formation, use the same thread color for upper and bobbin threads. The fabric can be reinforced with embroidery stabilizer on the wrong side. When working with pile or napped fabrics, e.g. toweling, use an additional, water-soluble stabilizer on the right side of the fabric.

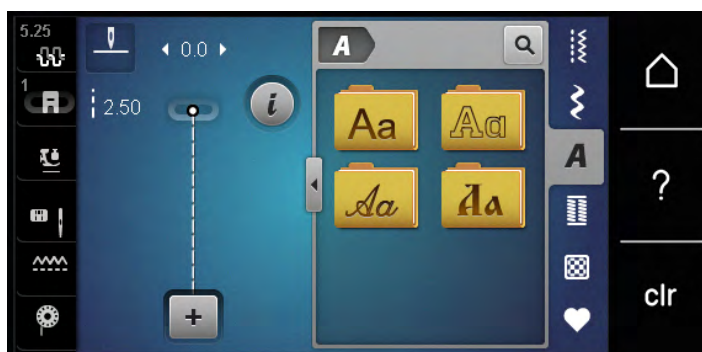

Stitch patterns	Name
ABCabc	Block alphabet
ABCabc	Double-Block
<i>ABCabc</i>	Script (Italics)
АБВабв	Cyrillic

### 8.2 Creating lettering



It is recommend to sew a test sample using the desired thread, the original fabric and the original stabilizer. Please make sure that the fabric is fed evenly and lightly without colloding and being caught. Do not pull, push or hold the fabric while sewing.



- > Tap «Alphabets».
- > Select the font.




- > To create a combination, tap «Combination Mode/Single Mode».









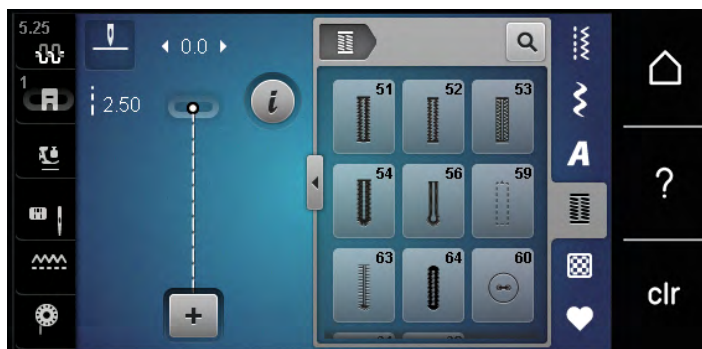


## 9 Buttonholes

### 9.1 Overview Buttonholes

 To create the correct buttonhole for every button, every purpose and for every garment, your BERNINA 475 QE provides a considerable collection of buttonholes. The corresponding button can be sewn on automatically. Eyelets can also be sewn.



Stitch patterns	Stitch number	Name	Description
	51	Standard buttonhole	For light to medium-weight fabrics. e.g. blouses, dresses and bed linen.
	52	Narrow standard buttonhole	For light to medium-weight fabrics, e.g. blouses, dresses, children's and baby clothes, crafts.
	53	Stretch buttonhole	For all elastic fabrics.
	54	Round buttonhole with normal bartack	For medium-weight to heavy fabrics. e.g. dresses, jackets, coats and rainwear.
	56	Keyhole buttonhole	For heavy, non-stretch fabrics, e.g. jackets, coats and leisurewear.
	59	Straight stitch buttonhole	For staystitching and reinforcing buttonholes and as button hole edging, especially for buttonholes in leather and imitation leather.
	60	Button sew-on program	Sews buttons with 2 or 4 holes.
	61	Eyelet with small zigzag	Openings for cords or narrow ribbons and for decorative work.
	62	Eyelet with straight stitch	Openings for cords or narrow ribbons and for decorative work.








## 9.5 Cord


### Using cord with the Buttonhole Foot #3

Prerequisite:

- The Buttonhole Foot #3 is fitted and raised.
- > Insert the needle at the beginning of the buttonhole.
- > Hook the cord over the center pin at the front of the Buttonhole Foot.

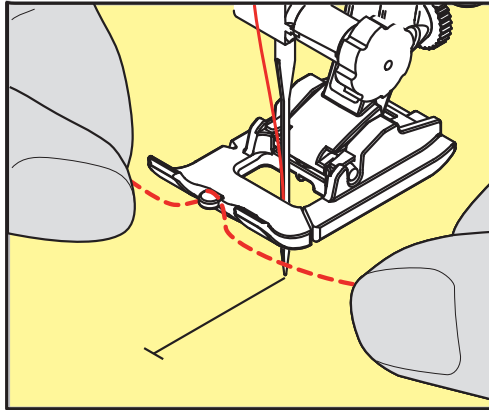


- > Pull both cords ends under the Buttonhole Foot to the back and place each a cord into a groove of the sole.

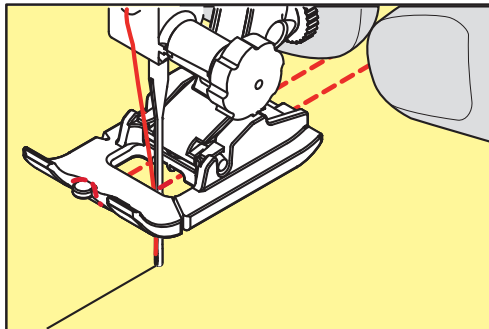

- > Lower the Buttonhole Foot.
- > Sew the buttonhole in the usual manner.
- > Pull the cord loop until the loop disappears in the bartack.



- > Pull the ends of the cord to the wrong side using the hand sewing needle and either knot or secure them there.

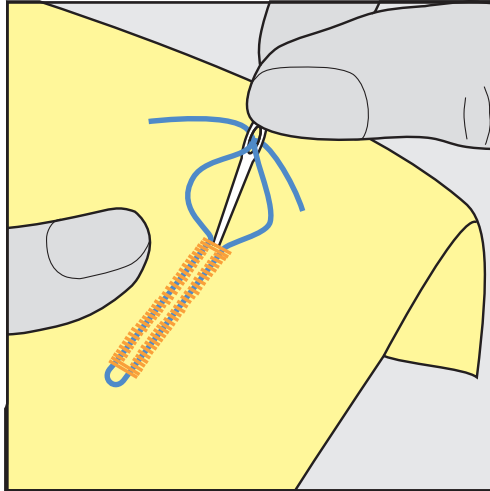


### Using cord with the Buttonhole Foot with Slide #3A


The additional cord reinforces and embellishes the buttonhole and is particularly suitable for the Standard buttonholeNo. 51. Ideal cords are Perle cotton No. 8, strong hand-sewing thread and fine crochet yarn. It is recommended to not hold the cord while sewing.

Prerequisite:

- The Buttonhole Foot with Slide #3A is fitted and raised.
- > Insert the needle at the beginning of the buttonhole.
- > Guide the cord on the right side under the Buttonhole Foot with Slide.
- > Hook the cord over the pin at the back of the Buttonhole Foot with Slide.

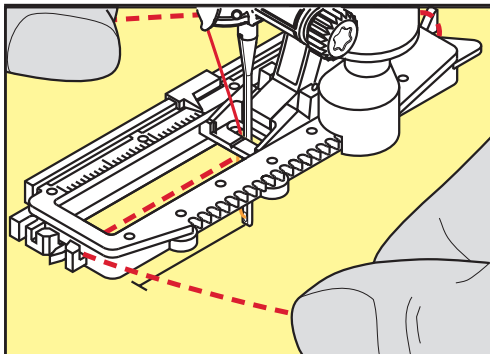

- > Pull the cord to the front on the left side under the Buttonhole Foot with Slide.

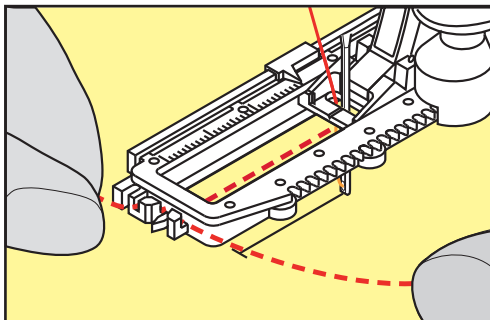

- > Pull the cord ends into the slits.







 
- > Tap «Buttonholes».
- > Select the buttonhole.



- > Tap «i-Dialog».



- > Tap «Programming the length via the Stitch Counter».
- > Sew the required length of the buttonhole.
- > Stop the machine.



- > The machine sews the lower bartack and the second bead in reverse when the button «Quick Reverse» is pushed.
- > Stop the machine at the height of the first stitch.
- > The machine sews the upper bartack and the securing stitches when the button «Quick Reverse» is pushed again.
  - The length of the buttonhole remains saved and every subsequent buttonhole is sewn identically until the machine is switched off.

## 9.8 Determining the buttonhole length with the Buttonhole Foot with Slide #3A



The button can be centered in the yellow circle on the display. By turning the «Upper/Lower Multifunction knobs», the yellow circle can be enlarged or downsized to determine the diameter of the button.

2 mm is automatically added to the diameter of the button for the buttonhole length. If the diameter of the button is 14 mm, for example, 16 mm is calculated for the buttonhole length.

Prerequisite:

 
- The Buttonhole Foot with Slide #3A is fitted.



- > Tap «Buttonholes».
- > Select the buttonhole.



- > Tap «i-Dialog».



- > Tap «Direct Entry Buttonhole Length».
- > To adjust the buttonhole length, turn the «Upper Multi-function knob» or the «Lower Multi-function knob».

## 9.9 Sewing the manual 7-step buttonhole with the Buttonhole Foot #3

The length of the buttonhole is determined manually when sewing. The bartack, eye and securing stitches are preprogrammed. The individual steps can also be selected by scrolling using the arrow icons or by pressing the button «Quick Reverse».

Prerequisite:

- The Buttonhole Foot #3 is fitted.



- > Tap «Buttonholes».
- > Select Standard buttonhole No. 51.



> Tap «i-Dialog».



- > Tap «Manual Length Adjustment».
  - Step 1 is activated in the display to start the buttonhole.
- > Sew the required length of the buttonhole.
  - Step 2 becomes active when sewing starts.



- > Stop when the required length of the buttonhole or the length marking is reached.
- > Step 3 appears by tapping «Scroll down».
  - The machine sews straight stitches in reverse.
- > Stop the machine at the level of the first stitch where the buttonhole begins.
- > Step 4 appears by tapping «Scroll down».
  - The machine sews the upper bartack and stops automatically.
- > Step 5 appears by tapping «Scroll down».
  - The machine sews the second bead.
- > Stop the machine at the level of the last stitch of the first bead.
- > Step 6 appears by tapping «Scroll down».
  - The machine sews the lower bartack and stops automatically.
- > Step 7 appears by tapping «Scroll down».
  - The machine secures and stops automatically.

### 9.10 Sewing the manual 5-step buttonhole with the Buttonhole Foot #3

The length of the buttonhole is determined manually when sewing. The bartack, eye and securing stitches are preprogrammed. The individual steps can also be selected by scrolling using the arrow icons or by pressing the button «Quick Reverse».

Prerequisite:

- The Buttonhole Foot #3 is fitted.



- > Tap «Buttonholes».
- > Select Round buttonhole with normal bartack No. 54.



> Tap «i-Dialog».





- > Tap «Manual Length Adjustment».
  - Step 1 is activated in the display to start the buttonhole.

- > Sew the required length of the buttonhole.
  - Step 2 is activated.



- > Stop when the required length of the bead or the length marking is reached.
- > Step 3 appears by tapping «Scroll down».
- > The machine sews the curve or the eye and stops automatically.
- > Step 4 appears by tapping «Scroll down».
- The machine sews the second bead in reverse.
- > Stop the machine at the level of the first stitch where the buttonhole begins.
- > Step 5 appears by tapping «Scroll down».
- The machine sews the upper bartack and secures automatically.

### 9.11 Sewing a buttonhole automatically with the Buttonhole Foot with Slide #3A

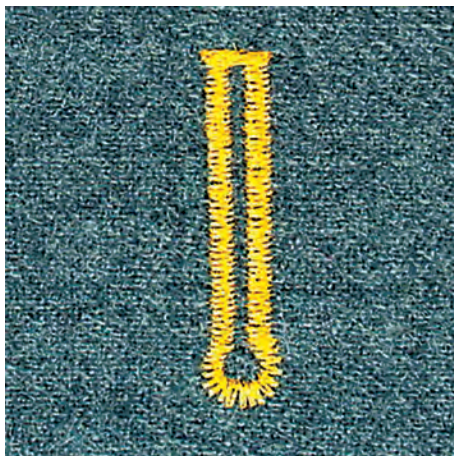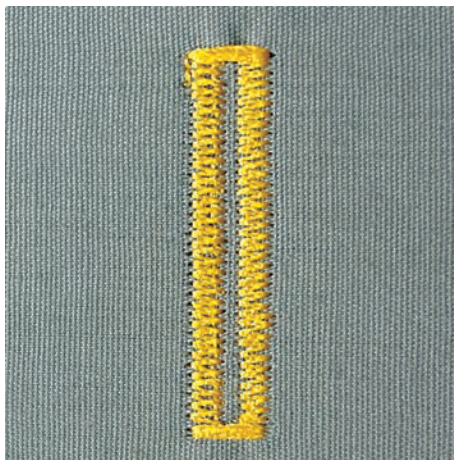




When the Buttonhole Foot with Slide #3A is used, the length of the buttonhole is measured automatically by the lens on the presser foot. The buttonhole will be exactly duplicated and the machine switches to the next step automatically when the maximum length is reached. The Buttonhole Foot with Slide #3A is suitable for buttonholes at a length of 4 mm up to 31 mm, depending on the buttonhole type. The Buttonhole Foot with Slide #3A must lie perfectly flat on the fabric so that the length can be measured accurately. Programmed buttonholes are all at the same length and of the same nice look.

Prerequisite:

- The Buttonhole Foot with Slide #3A is fitted.



 - > Tap «Buttonholes».
- > Select the buttonhole No. 51 – 54, No. 56, 59, 63 or 64.
- > Sew the required length of the buttonhole.




- > To program the length, push the button «Quick Reverse».



- > Push the button «Start/Stop» or press the foot control.
  - The machine finishes the buttonhole automatically. All subsequent buttonholes are sewn at the same length.


## 9.12 Cutting the buttonhole open with the seam ripper

- > Place a pin in each end of the buttonhole to avoid accidental cutting into ends of buttonhole.
- > Cut the buttonhole from both ends to the middle.

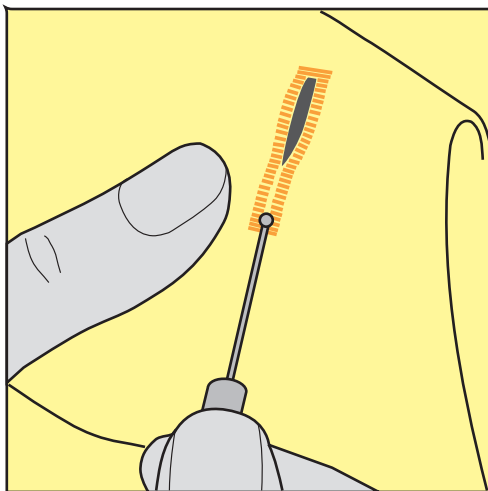

### 9.13 Cutting open buttonholes with the buttonhole cutter (optional accessory)

- > Place the fabric on an appropriate piece of wood.

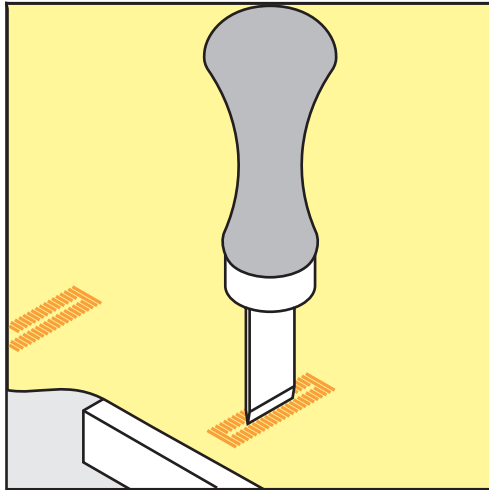

- > Position the cutter in the center of the buttonhole.
- > Press down on the cutter with your hand.

### 9.14 Sewing on buttons

The Button Sew-on Program can be used to sew on buttons with two or four holes, press studs or snap fasteners.

- |                             |   |
|-----------------------------|---|
| Recommended Sewing Program: | Button sew-on program No. 60  |
| Recommended Presser Foot:   | Button Sew-On Foot #18  |
| Alternative Presser Feet:   | <ul style="list-style-type: none"> <li>• Reverse Pattern Foot #1/1C</li> <li>• Darning Foot #9</li> <li>• Reverse Pattern Foot with Clear Sole #34/34C</li> </ul> |

#### Adjusting the thread shank

For buttons on thicker fabrics, increase the thread shank = the distance between the button and the fabric. Buttons sewn on thin fabrics or buttons for decorative purposes only are stitched without a «thread shank».

**NOTICE! The adjustment of the thread shank is only possible when using the Button Sew-on Foot #18.**

- > Loosen the screw on the back of the presser foot.
- > Push the bar upwards according to the thickness of the fabric.
- > Tighten the screw.

#### Sewing on a button

Prerequisite:


- The shank length is adjusted according the fabric thickness.
- The Button Sew-On Foot #18 or an alternative presser foot is fitted.
- The fitted presser foot has been selected in the user interface.
- The feed dog is lowered.





## 10 Quilting

### 10.1 Overview Quilt Stitches

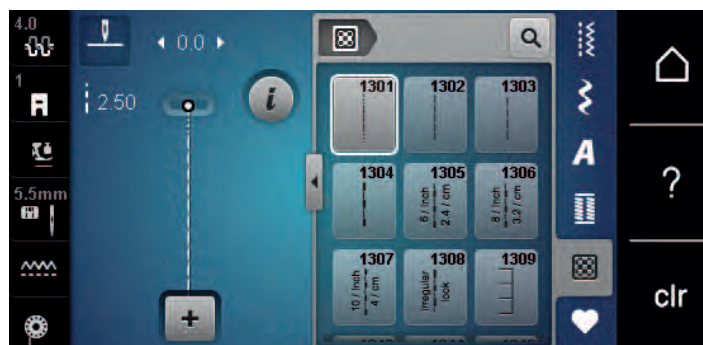

Stitch pattern	Stitch number	Name	Description
.....	No. 1301	Quilting, securing program	To secure at the sewing start and sewing end with short forward stitches.
.....	No. 1302	Quilting, straight stitch	For machine quilting using a straight stitch with a 3 mm stitch length.
.....	No. 1303	Patchwork stitch/ straight stitch	For sewing patchwork parts together using a straight stitch with a 2 mm stitch length.
.....	No. 1304 – No. 1308	Hand-look quilt stitch	For attaching an imitation of hand-look stitch with monofilament.
┌┐┌	No. 1309 – No. 1314	Blanket stitch	For applications and sewing on ribbons.
⚡	No. 1317 – No. 1327  No. 1339 – No. 1344	No. 1317 – No. 1327	For quilting, crazy patchwork, embellishing and finishing.
▬▬▬	No. 1315	Satin stitch	For appliqué.
})	No. 1316	Narrow blind stitch	For hidden sewing of applications
⋈	No. 1331	Stippling stitch/stippling quilt stitch	For imitations of stippling stitch.
↖↗	No. 1332 – No. 1338	Feather stitch	For quilting, crazy patchwork, embellishing and finishing.


## 10.2 Quilting, Securing Program

 Prerequisite:

- The Reverse Pattern Foot #1 is fitted.




- > Tap «Quilt Stitches».
- > Select Quilting, securing program No. 1301.
- > Press the foot control.
  - The machine sews 6 short stitches forwards automatically when sewing is started.
- > Sew the seam at the desired length.



- > Push the button «Quick Reverse».
  - The machine sews 6 short stitches forwards automatically and stops automatically at the end of the Securing Program.

## 10.3 Sewing handlook quilt stitches

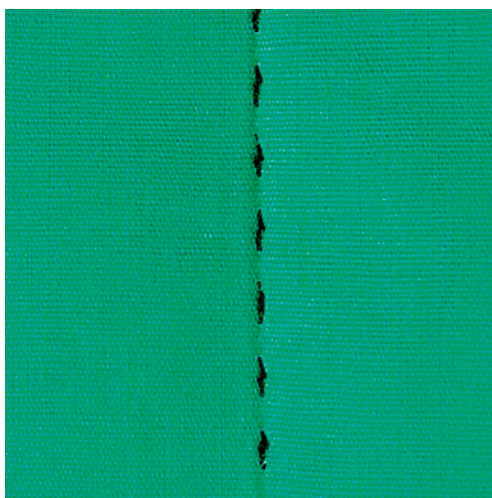

Hand-look quilt stitches are suitable for all fabrics and sewing projects that should look like hand-sewn. It is recommended to use a monofilament thread as upper thread and an embroidery thread as bobbin thread. The sewing speed should be moderate to prevent the monofilament from breaking. If required, the upper thread tension and the balance can be adjusted to the sewing project and the desired quilt stitch.

Prerequisite:

- The Reverse Pattern Foot #1 is fitted.



- > Tap «Quilt Stitches».
- > Select Hand-look quilt stitch No. 1304 or No. 1305, No. 1306, No. 1307 or No. 1308.
- > If necessary, adjust the upper thread tension and the Balance to suit the sewing project and the desired quilt stitch.
- > To start the machine, press the foot control or push the button «Start/Stop».

## 10.4 Guiding the quilt work freely



Free-motion quilting and darning are based on the same free-motion principles. With stipple quilting, entire areas of the fabric are filled with quilt stitches. The single lines of stitching are rounded and must not cross each other.




- Quilting gloves with rubber nubs make it easier to guide the fabric.
- For the best possible results use the High Thread Tension Bobbin Case (optional accessory).
- It is recommended to use the slide-on table and the Free Hand System.
- With free motion quilting, it is of advantage to quilt from the center outwards and to guide the fabric using smooth, round movements to form the design of your choice.

Prerequisite:

- The top layer, the batting and the backing are pinned together or basted.
- The feed dog is lowered.
- The Darning Foot #9 is fitted.



- > Tap «Practical Stitches».
- > Select Straight stitch No. 1.
- > If required, adjust the upper thread tension.
- > To prevent the fabric from shifting, select the needle position down.
- > To start the machine, press the foot control or push the button «Start/Stop».
- > To guide the fabric as if in a hoop, keep both hands close to the presser foot. Make sure that the needle does not pierce the same place several times in a row.
- > To ensure a minimum stitch distance when quilting corners, reduce the embroidery speed.
- > If the thread is lying on top of the fabric, slow down the movement.
- > If there are knots on the wrong side of the fabric, move the fabric more quickly.

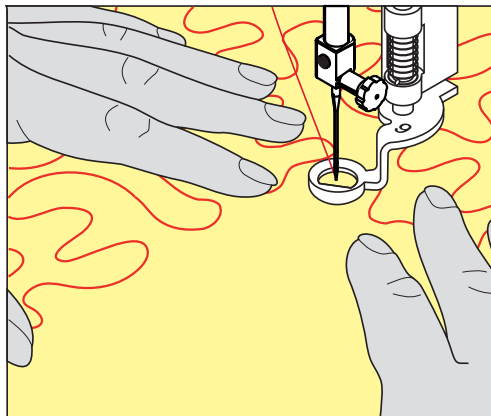



- > Insert the plug for the cable vertically into the BSR connection (1) until you feel it click into place.



- > Switch the machine on.
  - The BSR display opens and the BSR 1 mode is activated.

## Changing the presser foot sole


### NOTICE

The lens of the BSR presser foot is dirty

The machine doesn't recognize the BSR presser foot.

- > Clean the lens with a soft, slightly damp cloth.

- > Raise the needle.
- > Raise the BSR foot.
- > Switch the machine off and disconnect it from the power supply system.
- > Remove the BSR foot from the machine.
- > Press both push buttons at the BSR foot against each other.

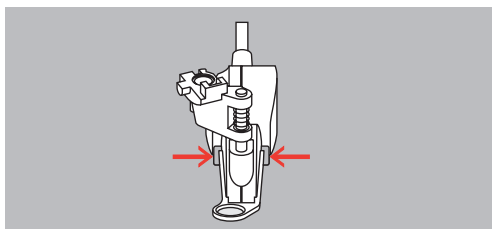

- > Pull the presser foot sole out of the guide downwards.
- > Insert the new presser foot sole into the guide and push upwards until it clicks into place.
- > Attach the BSR presser foot.

## 11.6 Using the BSR mode

The BSR function can either be operated via the foot control or via the button «Start/Stop».




Start via the Foot Control: The foot control must be pressed down while quilting is in progress. The machine keeps running in BSR Mode 1 until the foot control is released, even if the fabric is not moved.


If quilting in BSR Mode 2 is stopped, the machine sews another stitch depending on the needle position and stops with needle position up.

Prerequisite:

- The Slide-on Table has been fitted.
- The Knee Lifter of the Free Hand System is attached.
- > Lower the feed dog.
- > Select the desired BSR Mode.



- > Lower the presser foot.
-  > To lower the presser foot, push the button «Start/Stop» or press the foot control.
  - A red light is lit on the BSR Presser Foot.
- > Move the fabric to control the speed of the machine in the BSR mode.
-  > To stop the BSR Mode, push the button «Start/Stop» again or release the foot control.
  - The BSR mode stops, and the red light at the presser foot goes off.
-  > To deactivate the BSR Mode and to quilt without automatic stitch lengths, tap «BSR Mode».

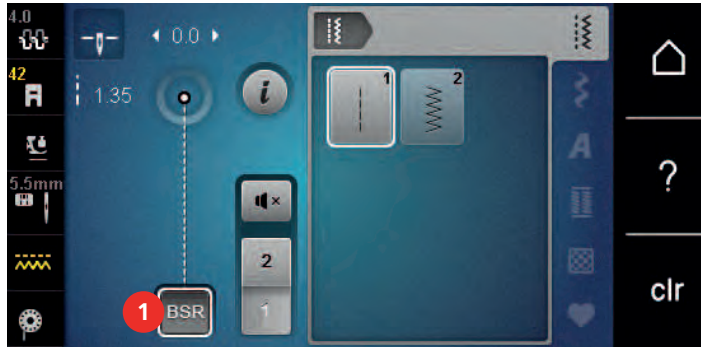




## 11.7 Securing

### Securing in BSR1 Mode with the button «Start/Stop»

Prerequisite:


- The BSR Presser Foot is fitted and connected to the machine.
- The BSR display opens and a BSR1 Mode is active.

- > Lower the feed dog.
- > Lower the presser foot.
-  > Push the button «Needle position Up/Down» 2x.
  - The bobbin thread is brought up.
- > Hold the upper and the bobbin thread.
-  > Push the button «Start/Stop».
  - Start the BSR Mode.
- > Sew 5 – 6 securing stitches.
-  > Push the button «Start/Stop».
  - The BSR Mode stops.
- > Cut the thread.

### Securing in BSR2 mode

Prerequisite:

- The BSR presser foot is attached and connected with the machine.
- The BSR display is open and the BSR2 mode is activated.

- > Lower the presser foot.
-  > Push the button «Securing».
- > Press the foot control or the button «Start/Stop».

By moving the fabric some short securing stitches are sewn, then the programmed stitch length is activated and the securing function is deactivated automatically.

## 12 Care and maintenance

### 12.1 Firmware

#### Checking the firmware version

The machine's firmware and hardware versions are displayed.



> Tap «Home».



> Tap «Setup Program».



> Tap «Machine Settings».



> Tap «Information».



> Tap «Machine Data».

#### Updating firmware



The machine's current firmware and detailed step-by-step instructions for the update process can be downloaded from [www.bernina.com](http://www.bernina.com). In general, personal data and settings are automatically transferred during a firmware update. For reasons of safety, it is also recommended to save data and settings on a BERNINA USB stick before the firmware update is started. If personal data and settings should get lost during a firmware update, they can be transferred to the machine again afterwards.

Prerequisite:

- Accessories such as Embroidery module or BSR Foot which are connected to the machine have been removed.

> Insert the USB stick with the new firmware version into the machine.

> Tap «Home».



> Tap «Setup Program».



 
> Tap «Machine Settings».



> Tap «Maintenance/Updates».



> Tap «Update Firmware».



- > To start the firmware update, tap «Update»  
 . **Please note:** The update may take several minutes. During the update, do not switch the machine off and do not remove the USB stick.  
 – The machine restarts. Once the update is complete, a message appears.

## Recovering saved data

If personal data and settings after a software update are not available anymore, they can be transferred to the machine again afterwards.

> Insert the BERNINA USB stick which provides the saved data and settings into the USB port of the machine.



> Tap «Home».



> Tap «Setup Program».



> Tap «Machine Settings».



> Tap «Maintenance/Updates».



> Tap «Update Firmware».

### NOTICE

The BERNINA USB stick (optional accessory) has been removed too early  
 Saved data cannot be transferred and the machine cannot be used.

> Remove the BERNINA USB stick (optional accessory) only after the saved data has been transferred successfully.



- > Tap «Load Data».  
 – After the data has been transferred, a green tick is temporarily displayed.

## 12.2 Machine

### Cleaning the display

> Clean the display in the switched off status with a soft slightly damp microfiber cloth.

### Cleaning the feed dog

Remaining threads under the stitch plate must occasionally be removed.

- > Raise the needle and presser foot.

#### CAUTION

#### Electronically driven components

Risk of injury near the needle and the hook.

- > Switch the machine off and disconnect it from the power supply system.

- > Remove the needle and presser foot.
- > Lower feed dog.



- > Remove the stitch plate.

#### NOTICE

#### Dust and thread residues inside the machine

Damage to mechanical and electronic components.

- > Use a brush or a soft cloth.
- > Do not use compressed air spray.

- > Clean the feed dog with the brush.

### Cleaning the hook

#### CAUTION

#### Electronically driven components

Risk of injury near the needle and the hook.


- > Switch the machine off and disconnect it from the power supply system.

- > Open the hook cover.
- > Remove the bobbin case.
- > Press the release lever to the left.



- > Fold down the fastening bracket along with the black hook race cover.

- > Remove the hook.

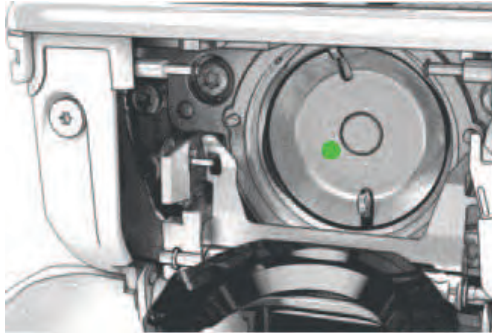**NOTICE****Dust and thread residues inside the machine**

Damage to mechanical and electronic components.

- > Use a brush or a soft cloth.
- > Do not use compressed air spray.

- > Clean the hook race with a brush and a soft cloth. Do not use any sharp objects.
- > Hold the hook at the pin in the center with two fingers.
- > Guide the hook, lower edge first, at an angle from above behind the hook race cover.
- > Position the hook with the two lugs on the hook driver meeting the corresponding openings in the hook; the colored mark on the hook driver should be visible through the hole in the hook.
- > Insert the hook.
  - The hook is magnetic and therefore fastened to the correct position.
- > Close the hook race cover and the fastening bracket until the release bracket engages.
- > As a check, turn the handwheel.
- > Insert the bobbin case.

**Lubricating the hook****CAUTION****Electronically driven components**

Risk of injury near the needle and the hook.


- > Switch the machine off and disconnect it from the power supply system.

- > Remove the bobbin case.
- > Push the release bracket to the left.



- > Fold down the fastening bracket along with the black hook race cover.

- > Remove the hook.

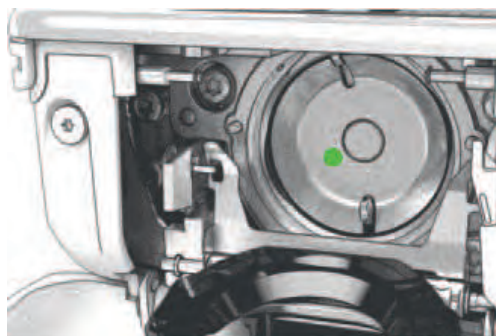

**NOTICE**

Lubricating the hook

Too much oil can pollute the fabric and the thread.

- > After lubricating, sew/embroider a test piece first.

- > Add one drop of BERNINA oil down into the hook race.



- > Add one drop of oil into each of the two oil depots so that the felts are damp, and make sure that the red-marked surface of the hook sleeve remains free of oil.



- > Hold the hook at the pin in the center with two fingers.
- > Guide the hook with the lower edge first diagonally from the top to the bottom behind the hook race cover.
- > Position the hook so that the two lugs on the hook driver fit into the corresponding openings on the hook, and the colored marking on the hook driver is visible in the hole of the hook.
- > Insert the hook.
  - The hook is magnetic and therefore fastened to the correct position.
- > Close the hook race cover and the fastening bracket until the release bracket engages.
- > As a check, turn the handwheel.
- > Insert the bobbin case.



### Cleaning the thread catcher



> Tap «Home».



> Tap «Setup Program».



> Tap «Machine Settings».



> Tap «Maintenance/Updates».




> Tap «Cleaning the thread catcher».  
> Clean the thread catcher according to the instructions on the display.

## 13 Errors and faults

### 13.1 Error messages


Message on the display	Cause	Solution
	Stitch number unknown.	> Check the entry and enter the new number.
	The stitch pattern cannot be selected in the Combi-mode.	> Combine other stitches.
	The feed dog is not lowered.	> Push the button «Feed dog up/down» to lower the feed dog.
	The selected needle and stitch plate cannot be used in combination.	> Replace the needle. > Replace the stitch plate.
	The needle is not at its top end.	> Adjust the needle position via the handwheel.
	The main motor is not running.	> Turn the handwheel clockwise until the needle is at its top position. > Remove the sewing project. Do not pull on the fabric or the thread. > Remove the stitch plate. > Remove the thread remnants. > Clean the hook. > Remove the hook and make sure that there are no pieces of broken needle points on the magnetic back of the hook.
Insufficient free space on the BERNINA USB stick (optional accessory).	There is not enough free capacity on the BERNINA USB stick (optional accessory).	> Make sure that the BERNINA USB stick (optional accessory) is used. > Delete data from the BERNINA USB stick (optional accessory).




Message on the display	Cause	Solution
No personal data on the BERNINA USB stick (optional accessory).	No personal data for recovery available on the BERNINA USB stick (optional accessory).	> Make sure that the data and settings have been saved on the BERNINA USB stick (optional accessory).
The recovery of personal data has failed.	The firmware update has been successful but the personal data could not be recovered.	> Make sure that the data and settings have been saved on the BERNINA USB stick (optional accessory). > Transfer saved data to the machine.
No BERNINA USB stick is inserted. Make sure that the same BERNINA USB stick remains connected during the entire automatic update process.	The BERNINA USB stick (optional accessory) is not inserted.	> Use a BERNINA USB stick (optional accessory) which provides enough free capacity.
The firmware update has failed.	The latest firmware version cannot be found on the USB stick.	> Make sure that the compressed zip file has been unzipped for the firmware update. > Check whether the data for the software update is saved directly on the data medium and not in a file on the USB stick. > Updating Firmware.
	The machine must be cleaned/ lubricated.	> Clean the machine. > Lubricate the hook.  <b>Important information on lubricating:</b> Too much oil may stain the fabric and the thread. > After lubricating, always embroider on a test piece.
The automatic thread cutter (at the thread catcher) needs cleaning.	The automatic thread cutter needs cleaning. The message appears every time when the machine is started as soon as 1000 cutting cycles have been carried out.	> Tap «Confirm». – The machine calls up the function «Clean the thread catcher». > Clean the thread catcher according to the instructions on the display. – The counter for the cutting cycles is reset.



## 13.2 Troubleshooting

Fault	Cause	Solution
<b>Uneven stitch formation</b>	Upper thread too tight or too loose.	> Adjust the upper thread tension. > Check the thread feed from the thread spool.
	Needle blunt or bent.	> Replace the needle, make sure that a new BERNINA quality needle is used.
	Poor quality needle.	> Use a new BERNINA quality needle.
	Poor quality thread.	> Use quality thread.
	Incorrect needle/thread combination.	> Match the needle with the thread size.
	Incorrectly threaded.	> Rethread.
	The fabric has been pulled.	> Feed the fabric evenly.
<b>Uneven stitch formation</b>	Incorrect bobbin case is used.	> Use the supplied bobbin case with triangles.
		
<b>Skipped stitches</b>	Incorrect needle.	> Use the needle system 130/705H.
	Needle blunt or bent.	> Replace the needle.
	Poor quality needle.	> Use a new BERNINA quality needle.
	The needle is incorrectly inserted.	> Insert the needle with the flat side to the back as far up as it will go into the needle holder and tighten the screw.
	Incorrect needle point.	> Match the needle point to the texture of the material.
<b>Faulty stitching</b>	Thread remnants between the thread tension discs.	> Fold a piece of thin material and slide the folded edge (not the raw edges) between the thread tension discs.
	Incorrectly threaded.	> Rethread.
	Thread remnants below the bobbin case spring.	> Remove the thread remnants under the spring.

Fault	Cause	Solution
<b>Upper thread breaks</b>	Incorrect needle/thread combination.	> Match the needle with the thread size.
	Upper thread is too tight.	> Reduce the upper thread tension.
	Incorrectly threaded.	> Rethread.
	Poor quality thread.	> Use quality thread.
	The stitch plate or the hook tip is damaged.	> Contact the nearest specialized BERNINA dealer to have the damages repaired. > Replace the stitch plate.
	The thread is caught in the area of the Thread Take-up Lever.	> Slide the service cover (1) to the left, then remove the service cover. > Remove the thread remnants. > Guide the 4 knobs of the service cover into the provided recesses and slide the service cover to the right.
		
<b>Lower thread breaks</b>	The bobbin case is damaged.	> Replace the bobbin case.
	The stitch hole in the Stitch Plate damaged.	> Contact the nearest specialized BERNINA dealer to have the damages repaired. > Replace the stitch plate.
	Needle blunt or bent.	> Replace the needle.
<b>Needle breaks</b>	The needle is incorrectly inserted.	> Insert the needle with the flat side to the back as far up as it will go into the needle holder and tighten the screw.
	The fabric has been pulled.	> Feed the fabric evenly.
	Thick fabric has been pushed.	> Use a suitable presser foot, e. g. Jeans Foot #8, for thick fabric. > Use the height compensating tool when sewing over a thick seam.
	Knotted thread.	> Use quality thread.
<b>Stitch width not adjustable</b>	The selected needle and stitch plate cannot be used in combination.	> Replace the needle. > Replace the stitch plate.

Fault	Cause	Solution
<b>Speed too low</b>	Unfavorable room temperature.	> Place the machine in a warm room one hour before use.
	Settings in the Setup Program.	> Adjust the sewing speed in the Setup Program. > Adjust the slide.
<b>The machine doesn't start</b>	Unfavorable room temperature.	> Place the machine in a warm room one hour before use. > Connect the machine and switch it on.
	The machine is damaged.	> Contact an authorized BERNINA dealer.
<b>Error during firmware update</b>	USB stick is not recognized.	> Use the BERNINA USB stick.
	The update process is blocked and the hourglass on the display is inactive.	> Remove the USB stick. > Switch off the machine. > Switch the machine on. > Follow the instruction on the display.
	Firmware update files are not found.	> Unzip the update data. > Store data for the firmware update directly on the data medium and not in a folder on the USB stick.
<b>Beads and/or bartacks are repeatedly not sewn properly</b>	The Buttonhole Foot with Slide #3A is not calibrated with the machine.	> Calibrate Buttonhole Foot with Slide #3A. (see page 51)









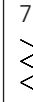

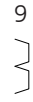

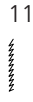
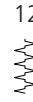






 




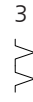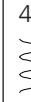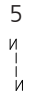





## 15 Technical data

Article	Value	Unit
Maximum fabric thickness	10.5 (0.41)	mm (inch)
Sewing Light	8	LED
Maximum speed	900	spm/rpm
Measurements without the spool pin	423 × 330 × 200 (18.30 × 12.99 × 7.87)	mm (inch)
Weight	9.5 (20.94)	kg (lb)
Energy consumption	90	Watts
Input voltage	100 – 240	Volts
Protection class (Electrical Engineering)	II	
Production date: Can be seen on the type label under «Code».		



 

 






## 16 Overview stitch patterns

### 16.1 Overview Stitch patterns
 
#### Practical stitches



























1 	2 	3 	4 	5 	6 	7 	8 	9 	10 	11 	12 	13 	14 
15 	16 	17 	18 	19 	20 	22 	23 	24 	25 	26 	29 	30 	32 
33 													

#### Buttonholes






 
 




51 	52 	53 	54 	56 	59 	60 	61 	62 	63 	64 
--	--	--	--	--	--	--	--	--	--	--

#### Decorative stitches


























##### Natural stitches

101 	102 	103 	104 	106 	107 	108 	109 	110 	111 	112 	113 	114 	115 
116 	117 	118 	119 	122 	123 	124 	125 	136 	137 	150 	152 		

##### Cross stitches

301 	302 	303 	304 	305 	306 	307 	308 	309 	321 	322 
--	--	--	--	--	--	--	--	--	--	--

##### Satin stitches

401 	402 	405 	406 	407 	408 	409 	410 	412 	413 	414 	415 	416 	417 
422 	423 	424 	425 	426 	427 	428 	429 	437 	465 	466 			



Geometric stitches

601	602	603	604	605	606	607	608	609	610	611	612	613	614
615	616	618	619	620	621	622	623	624	625	626	627	628	629
630	631	632	634	635	652	653	657						

White embroidery

701	702	703	704	705	706	707	708	709	710	711	712	713	714
715	716	717	721	722	723	724	725	726	727	729	730	731	732
741	742	743											





 
 
 
 



 








 
 

 
 





 

 

 
 

 
 
 

Novelty stitches

901	902	903	904	905	906	907	908	909	910	911	912	913	914
915	916	917	918	919	920	921	922	924	935	938	948	950	954
961													

Kaffe Fassett stitches

7101	7102	7103	7106	7107	7109	7111	7113	7117	7118	7119	7120	7122	7124
7125	7126	7127	7128	7129	7130	7131							

### Quilt stitches

1301 	1302 	1303 	1304 	1305 6 / Inch 2.4 / cm 	1306 8 / Inch 3.2 / cm 	1307 10 / Inch 4 / cm 	1308 irregular look 	1309 	1310 	1311 	1312 	1313 	1314 
1315 	1316 	1317 	1318 	1319 	1320 	1321 	1322 	1323 	1324 	1325 	1326 	1327 	1331 
1332 	1333 	1334 	1335 	1336 	1337 	1338 	1339 	1340 	1341 	1342 	1343 	1344 	



Selecting the language.....	48
Setting the maximum sewing speed.....	45
Setting the securing stitches.....	45, 62
Setting the sound .....	48
Setting values .....	22
Sewing a test sample .....	91
Slide-on Freearm Extension Table.....	31
Storing the machine.....	116

## T

Technical specifications.....	117
Threading the bobbin thread .....	42
Threading the double needle .....	40
Threading the triple needle .....	41
Threading the upper thread .....	37
Troubleshooting.....	113

## U

Updating firmware.....	104
Using eco Mode.....	53
Using the spool net.....	30

## W

Winding the bobbin thread.....	42
--------------------------------	----





BERNINA recommends threads from

*Mettler*<sup>®</sup>