



Sewing



Home



Setup Program



Tutorial



Creative consultant



Help



ECO



Clear settings



Upper thread tension



Security program - needle



Presser foot indicator/Selecting a presser foot



Presser foot pressure



Security program - stitch plate



Feed dog position up/down



Filling of the bobbin



Stitch selection by number



Practical stitches



Decorative stitches



Alphabets



Buttonholes



Quilt stitches



Personal program/Memory



History



Information



Close



Confirming selection



Leaving the active display



Needle stop up/down



Pattern repeat



Long stitch



Mirror Image left/right





Mirror Image up/down



Altering pattern length



Stitch Counter



Balance



Multi-Directional sewing



Permanent reverse sewing



Backstepping



Saving stitch patterns



Basic setting of stitch pattern



Programming the buttonhole length



Buttonhole length direct entry



Stitch counter buttonhole



Manual buttonhole



Buttonhole slit width



Lettering size with monograms



Lettering size in alphabets



Altering the pattern length



Editing a combination at cursor position



Deleting



Editing the whole combination



Combination subdivider (1)



Combination subdivider (2)



Securing



Combination repeat



Adjusting the width in the combination



Adjusting the length in the combination



Connecting stitches



Moving multiple stitch patterns of a combination

