


# Clear Overlock/Combostitch Foot

#C27  
Overlocker

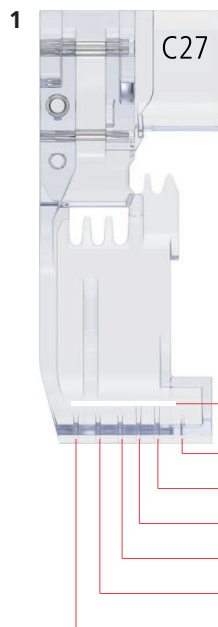

## Information

### Purpose

- For general sewing with overlock, coverstitch or combo stitches.
- For decorative sewing on fabric edges and in fabric.
- For precise stitches thanks to a good view of the needle area.
- For sewing on fine braid up to 14 mm in width.

### For your safety

Before using this accessory, please read this instruction manual as well as the instruction manual of your machine carefully.

### Markings

- A Tape guide
- B Cutting line at cutting width 6
- C Right overlock needle RN
- D Left overlock needle LN
- E Right coverstitch needle RC
- F Center coverstitch needle CC
- G Left coverstitch needle LC


## Application

### Sewing in fabric along a marking with coverstitch or chain stitch

- > Mark the seam lines for decorative seams.
- > Raise the needles and the presser foot.
- > Place the fabric under the presser foot and lower the presser foot.
- > When sewing, guide the fabric such that the marking aligns with the needles. (Fig. 2)

### Tip

- > If the reflection is too strong, depending on the fabric, turn off the sewing light.

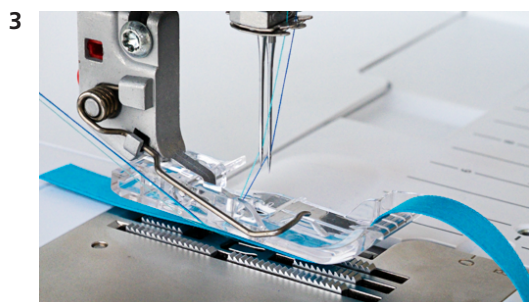

### **Sew a tape onto the fabric with coverstitch or chain stitch (stitch 24 or 16)**

- > Raise the needles and the presser foot.
- > Swing the presser foot out. Thread the tape into the tape guide from above and lay it under the presser foot towards the back. Swing the presser foot in. (Fig. 3)
- > Place the fabric under the presser foot and lower the presser foot.
- > Sew the tape. Guide the tape so that at least one needle can pierce the tape. (Fig. 4)



### **Tip**

- > Adjust differential feed depending on tape, material and desired effect (0.7 – 1 for woven tapes, 1 – 2 for ruffles, as required for knitted fabric).

### **Sew a tape onto the fabric edge with overlock or combo stitch**

- > Raise the needles and the presser foot.
- > Swing the presser foot out. Thread the tape into the tape guide from above and lay it under the presser foot towards the back. Swing the presser foot in and lower it. (Fig. 5)
- > To fix the tape in place, sew a few stitches on the tape.
- > Lift the presser foot tip and place the fabric.
- > Sew the tape. Guide the tape so that at least one needle can pierce the tape. (Fig. 6)

