Single Fold Binder Attachment





10 mm С 40 mm

1







Information

Purpose

• For binding fabric edges with unfolded bias or jersey tapes of 40 mm width.

For your safety

Before using this accessory, please read the instruction manual at hand as well as the instruction manual of your machine carefully.

Overview

- Accessory holder (not included in the scope of delivery) А
- В Connecting piece with locking screw
- С Tape guide (40 mm)
- D Tape outlet channel (10 mm)

Application

How to prepare the Binder Attachment

- > Select the stitch. (Coverstitches No. 21, 22, 23 / Chainstitches No. 16 with LC)
- > Thread the machine.
- > Attach the presser foot. (#C13 for Coverstitch and Chainstitch)
- > Attach the Binder Attachment with accessory holder to the machine. Refer to the instruction manual of the accessory holder.
- > Loosen the locking screw of the connecting piece, position the Binding Attachment in front of the left coverstitch needle (LC) and tighten the screw again.
- > Loosen the locking screw on the swivel arm, position the Binder Attachment as close as possible to the presser foot tip and tighten the screw again.
 - The Binder Attachment and the presser foot are close to each other without direct contact.

Sewing on the bias tape

- > Cut the end of the tape into a point. (Fig. 2)
- > Swinging out the Binder Attachment.
- > Push the tape tip through the tape guide until the tape comes out folded approx. 3 cm at the tape outlet channel. (Fig. 3)
- > Bring the Binder Attachment into sewing position and lower the presser foot onto the tape.
- > Sew a few stitches to fix the tape. (Fig. 4)

BERNINA International AG | CH-8266 Steckborn Switzerland | www.bernina.com | © Copyright by BERNINA International AG

1052105 00 04



1062195.00.04 2021-07 EN

5



- > Check the seam position of the binding and, if necessary, adjust the position of the Binder Attachment by adjusting the locking screw on the connecting piece.
 - Sew on the tape close to the tape edge.
- > Push the edge of the fabric firmly to the right into the Binder Attachment and continue sewing. (Fig. 5)

- The fabric edge lies in the tape fold.

> Cut back any excess seam allowance on the wrong side of the fabric.