

# Echo-Quilting Clips

Compatible with #72/725 | #96



## Information

### Scope of delivery

- 1× Echo-Quilting Clip, radius 0.5 inch
- 1× Echo-Quilting Clip, radius 0.75 inch
- 1× Echo-Quilting Clip, radius 1.0 inch

### Purpose

- To free motion quilt or to sew along a ruler, e.g. for cross hatching.

### For your safety

Before using this accessory, please read the instruction manual at hand as well as the instruction manual of your machine carefully.

## Application

### Attaching the Echo-Quilting Clip

- > Place the Echo-Quilting Clip with the markings down on a solid surface.
- > Carefully push the presser foot from above into the clip. Make sure that the groove on the presser foot sole is aligned with one of the markings. (fig. 1)

### Removing the Echo-Quilting Clip

#### NOTICE

Removing the Echo-Quilting Clip from the attached presser foot

The presser foot can bend or break.

- > Before detaching the Echo-Quilting Clip, remove the presser foot from the machine.

- > Hold the presser foot and detach the Echo-Quilting Clip from the presser foot by a rotating movement downwards. (fig. 2)
- > If the clip is too tight, use a flat blunt object as an aid, e.g. a screwdriver. Place the clip on a solid surface and push the screwdriver carefully into the slot of the clip until the clip can be detached from the presser foot. (fig. 3)