


BERNINA 335 / 325

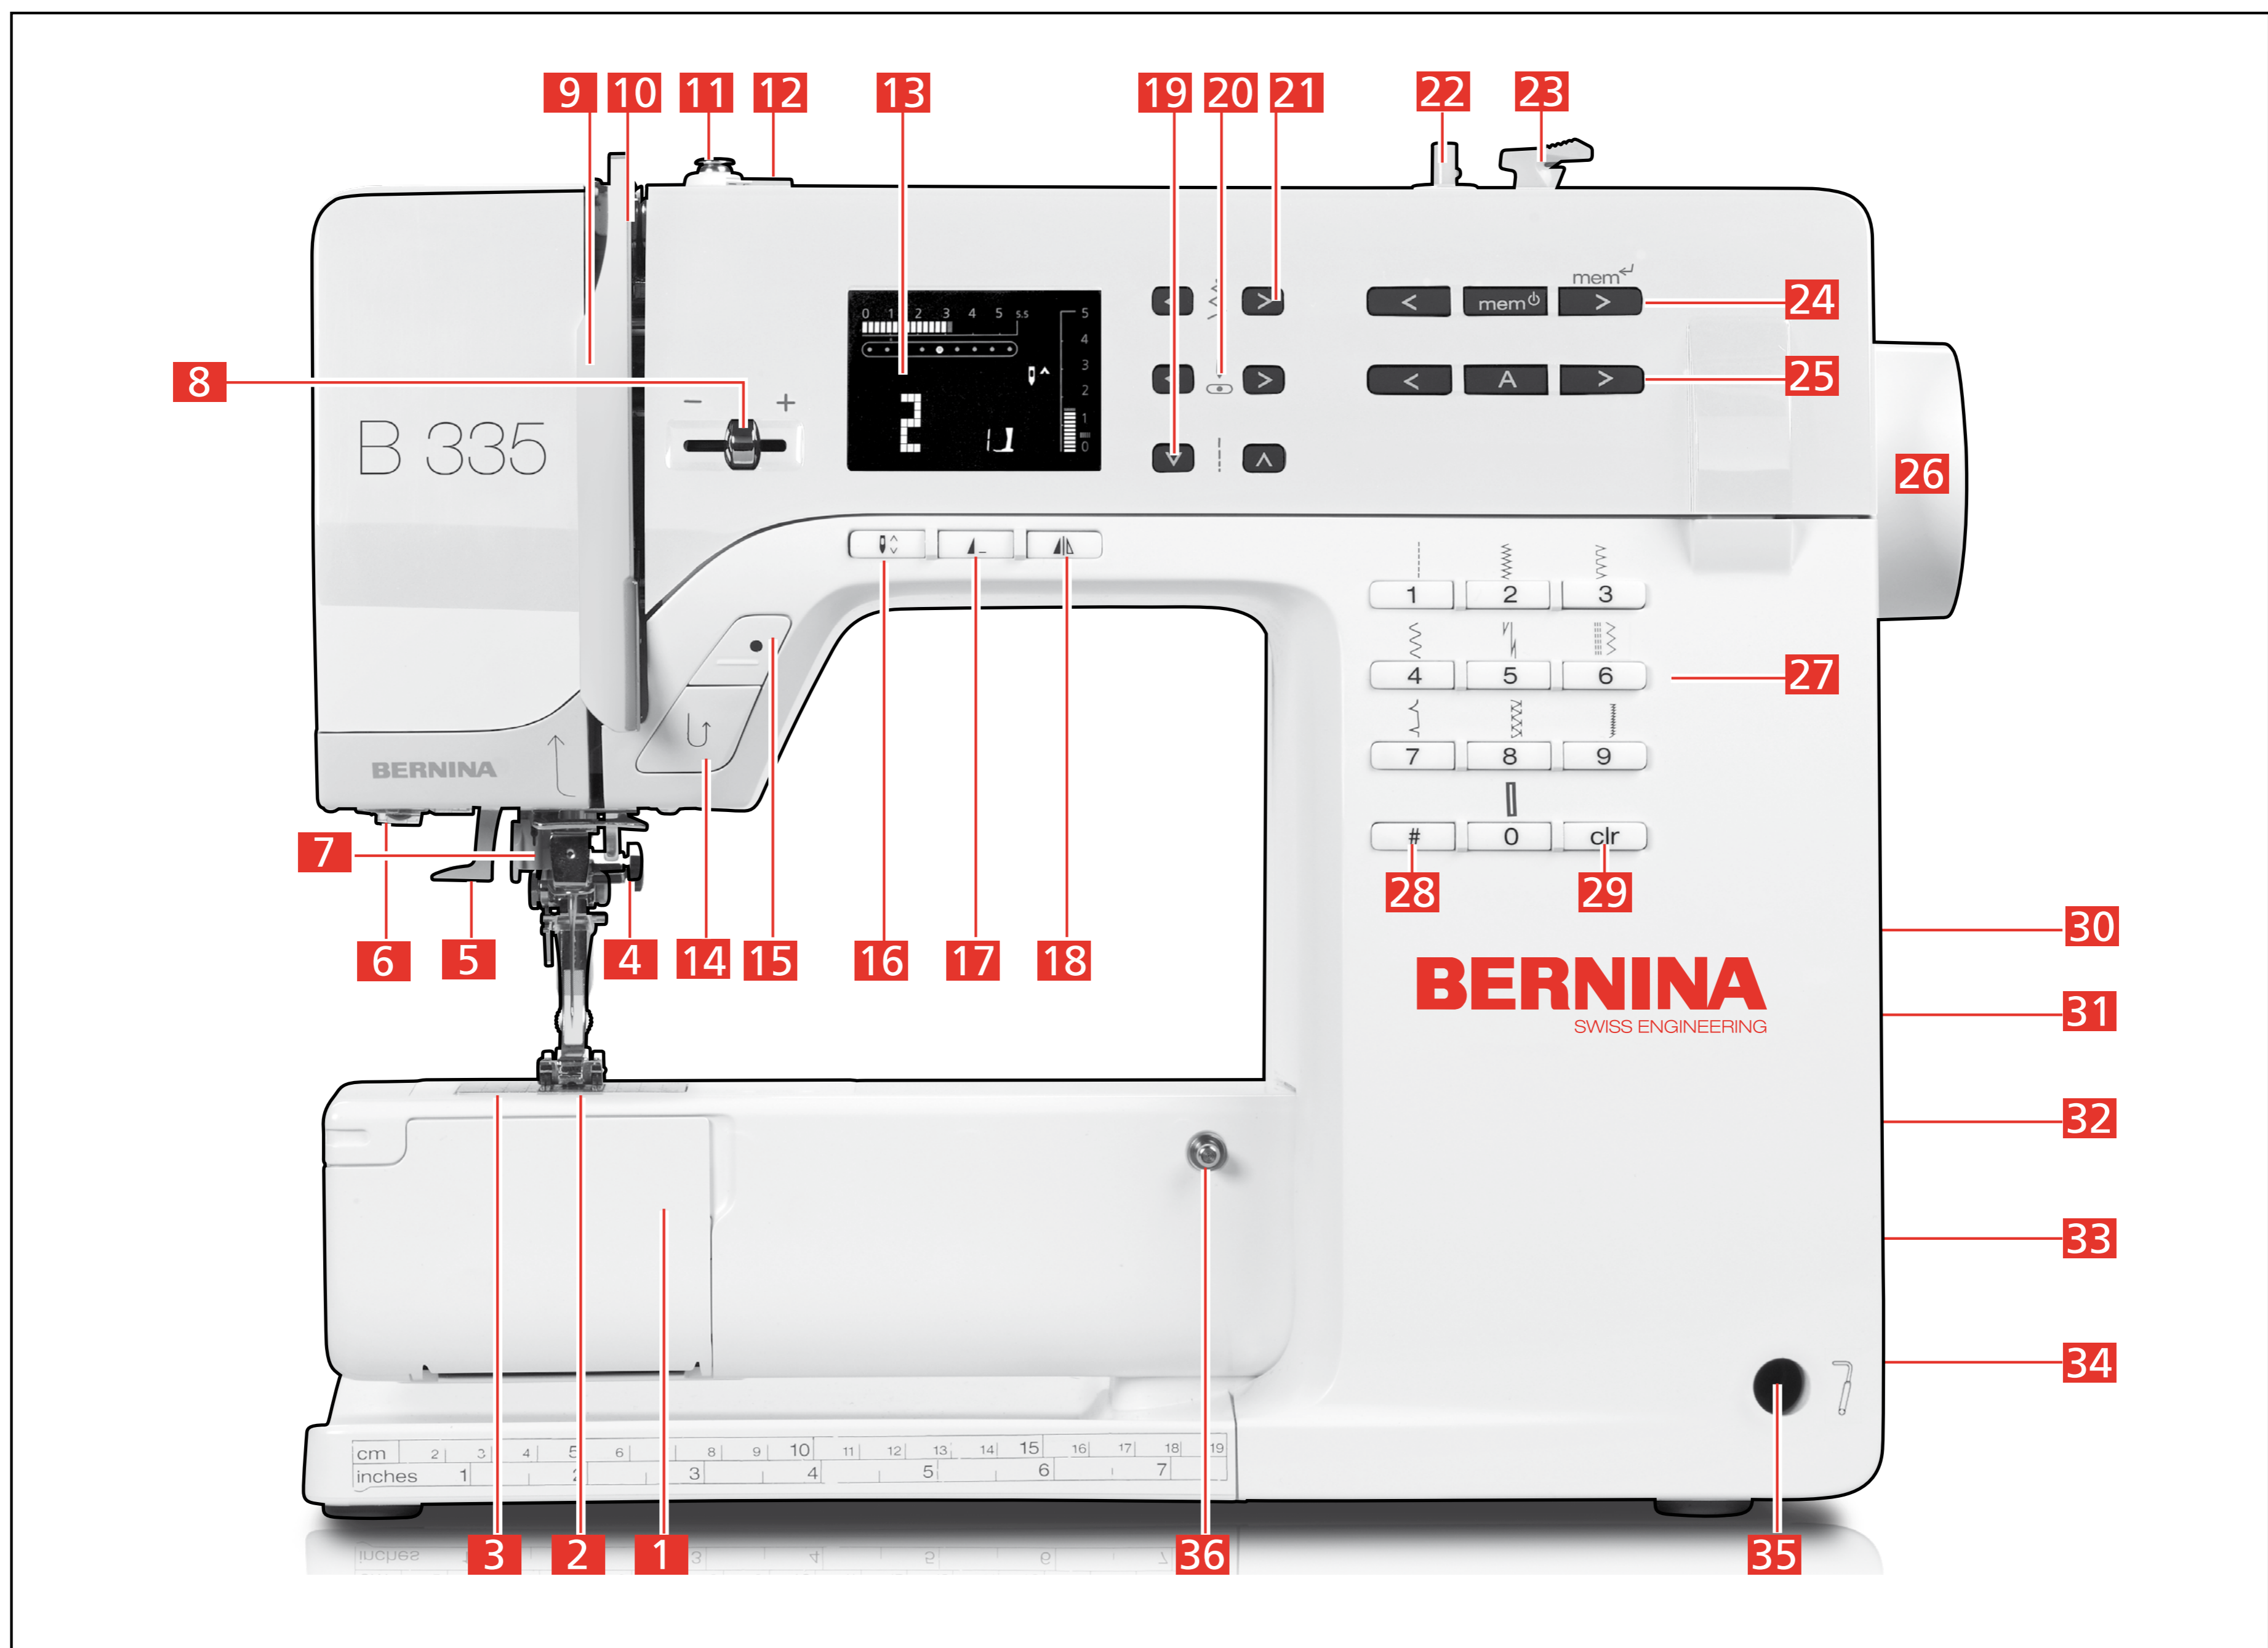

- | | |
|--|--|
| 1 Bobbin cover | 21 Stitch width buttons |
| 2 Presser foot | 22 Bobbin winder device |
| 3 Stitch plate | 23 Thread cutter on bobbin winder |
| 4 Needle clamp | 24 Memory buttons |
| 5 Needle threader | 25 Alphabet button |
| 6 LED sewing light | 26 Handwheel |
| 7 Thread guide | 27 Stitch selection buttons |
| 8 Slide speed control | 28 #-button (hash button) |
| 9 Thread take-up cover | 29 «clr» (clear) button |
| 10 Thread take-up lever | 30 Balance adjuster |
| 11 Bobbin winder pre-tension | 31 Foot control socket |
| 12 Thread tension adjustment wheel | 32 Feed dog drop |
| 13 Screen | 33 Power switch on/off |
| 14 Quick reverse button | 34 Power plug socket |
| 15 Start/stop button | 35 Free Hand System (FHS) connection (B 335 only) |
| 16 Needle stop up/down button | 36 Slide-on table socket |
| 17 Pattern end button | |
| 18 Mirror image button (B 335 only) | |
| 19 Stitch length buttons | |
| 20 Needle position buttons | |