



























 
















































 



Sewing

	Home		Quilt stitches
	Setup Program		Personal program/Memory
	Tutorial		History
	Creative Consultant		Information
	Help		Close
	ECO		Confirm selection
	Clear settings		Escape Display
	Upper thread tension		Needle stop up/down
	Security needle		Pattern repeat
	Presser foot Indicator/Presser foot selection		Long stitch
	Presser foot pressure		Mirror Image left/right
	Security stitch plate		Mirror Image down/up
	Feed dog recognition		Altering the pattern length
	Filling bobbin		Stitch counter
	Time/Alarm		Balance
	Stitch selection by number		Multi-Directional sewing
	Practical stitches		Permanent reverse sewing
	Decorative stitches		Backstepping
	Alphabets		Personal memory permanent
	Buttonholes		Reset

Sewing

	Programming buttonhole length		Stitch Designer
	Buttonhole length direct entry		Select all points
	Balance BERNINA Dual Transport		Selection from a defined point
	Manual buttonhole		A single point is selected/activated
	Buttonhole slit width		Pattern width limitation
	Distorting stitch patterns		Moving the view of the stitch pattern
	Altering angle		Moving points/Direct point selection
	Font size in monograms		Inserting/editing a stitch
	Font size in alphabets		Scrolling through the points
	Editing combination from cursor position		5 / 8
	Deleting		Creating new stitch pattern
	Editing the whole combination		Triple stitch
	Combination subdivider (1)		Duplicating
	Combination subdivider (2)		Reversing the stitch sequence
	Securing		Slow re-draw
	Combination repeat		Snap to grid
	Adjusting the width in the combination		Fit to screen
	Adjusting the length in the combination		Single-/Combi mode
	Connecting stitches		Edit mode in combi mode
	Moving single/multiple stitch patterns of a combination		

