

# V7 Dongle with USB 3 Interface

---

## **Symptom:**

BES V7, USB 3 beeping, when I restart my computer, the old dongle driver automatically re-installs and the beeping is back

## **Solution:**

Please try the latest HASP driver  
[www.bernina.com](http://www.bernina.com) > Support > Dongle Driver

[How to remove and install the latest HASP driver](#)