

# Embroidery



Home



Setup Program



Tutorial



Help



ECO



Upper thread tension



Presser foot display/Presser foot selection



Embroidery hoop display/Embroidery hoop selection



Stitch plate/Needle selection



Feed dog up/down



Filling level of bobbin thread



Close



Confirm



Cancel



Relocating the view



Moving the view of the motif



Zooming in



Zooming out



Relocating the motif



Rotating the embroidery motif



Altering the embroidery motif proportionally



Mirror image left/right



Mirror image up/down



Deleting the embroidery motif



Checking motif size



Altering the stitch type/stitch density



Selecting the machine



Selecting the USB stick



Moving the hoop to the left



Moving the hoop to the back



Parking the embroidery module for sewing mode



Motif center



Virtual positioning



Color pattern display



Selection



Basting



Moving the hoop

Embroidery



Editing



Embroidery sequence control when thread breaks



Cutting connecting stitches



Colors



Single or multi color embroidery motif



Embroidery



Loading embroidery motif



Saving the embroidery motif



Changing the thread brand



Optimal embroidery speed



Adjusting the maximum embroidering speed

