


## Removing the bobbin case and inserting the case and bobbin into the hook

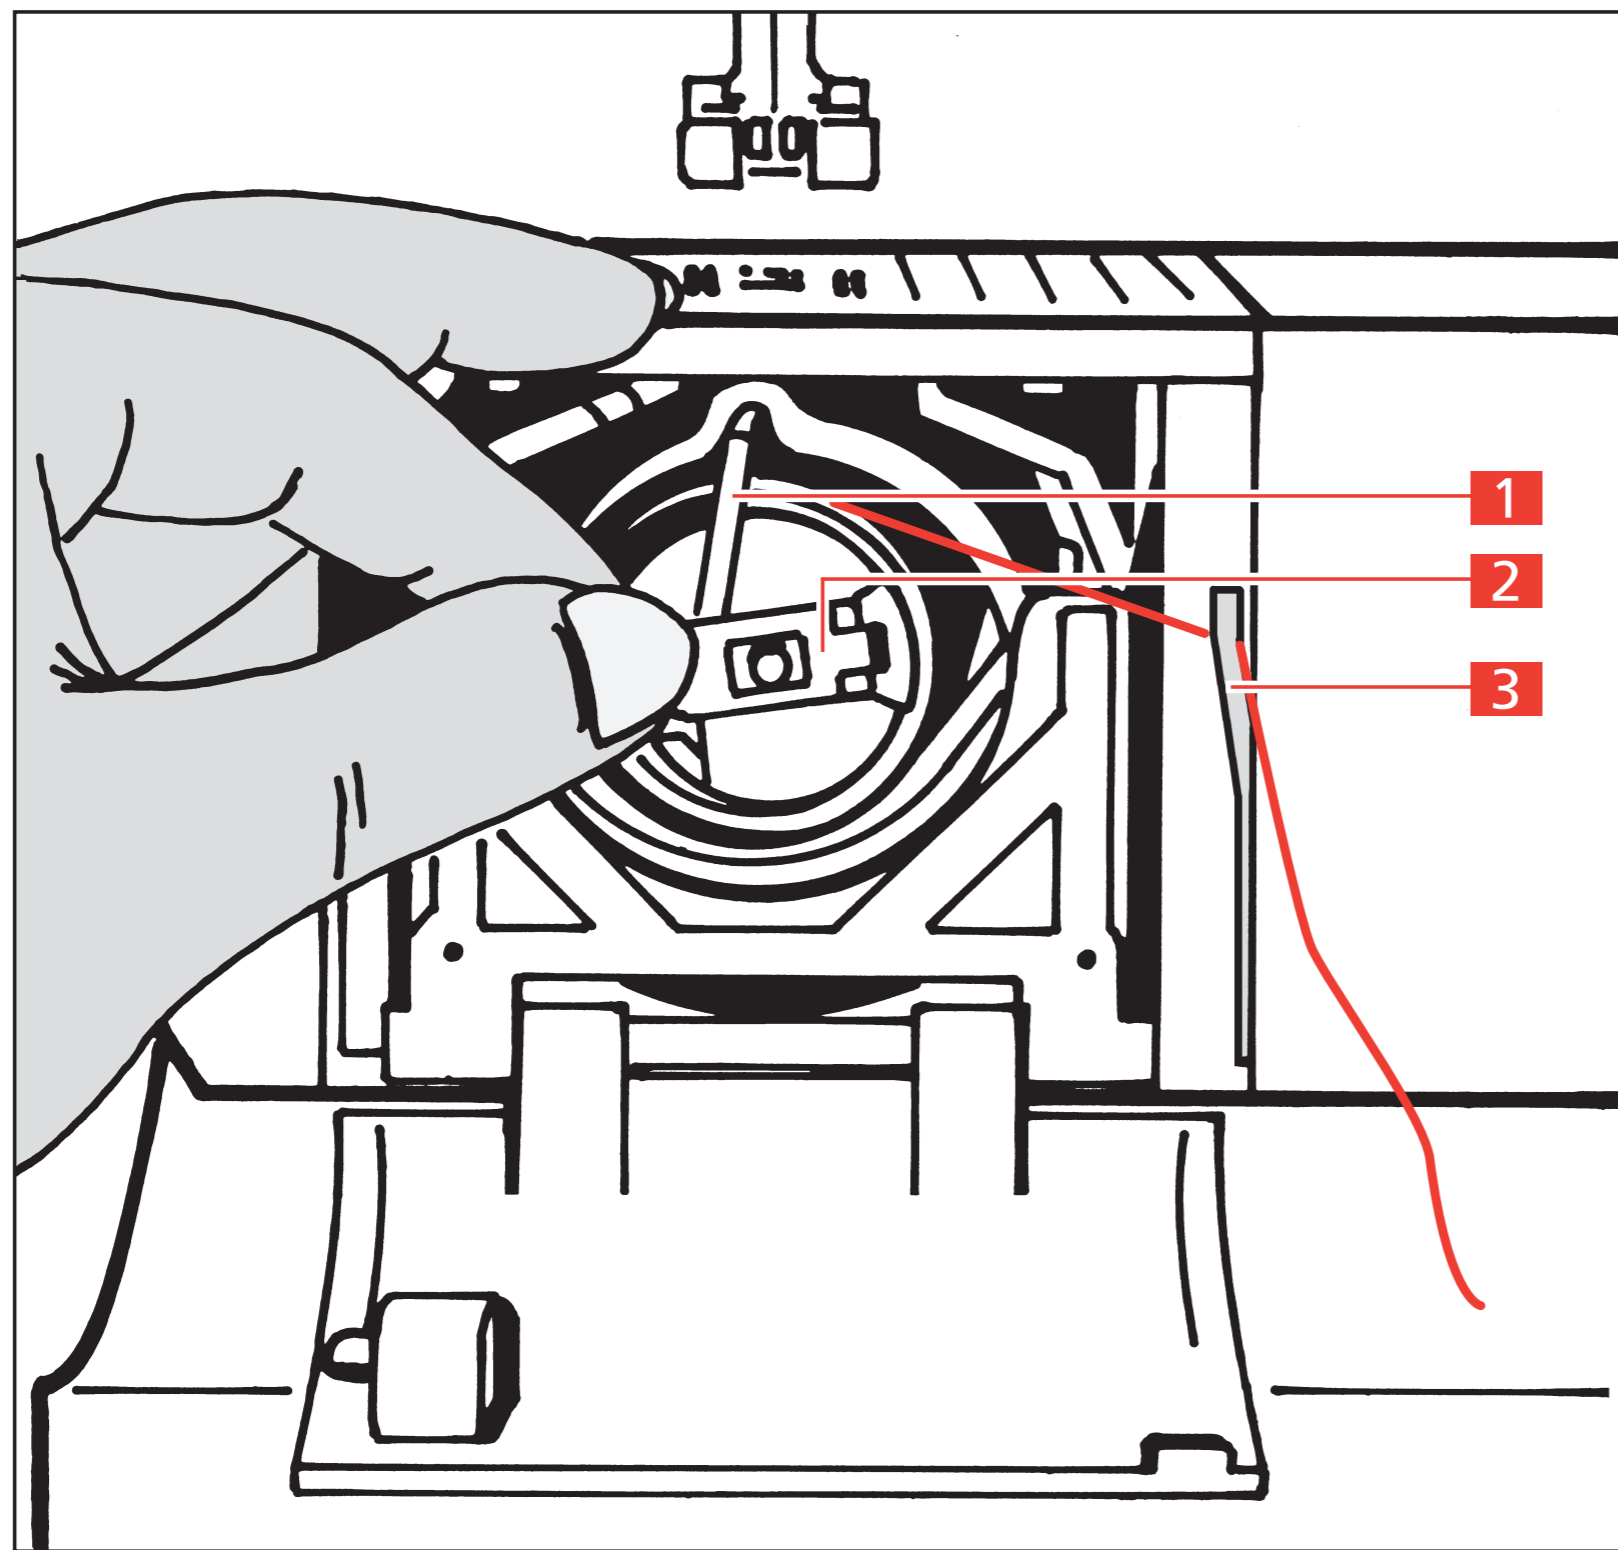


### Instructions

1. Turn the handwheel until the needle is in its highest position.
2. To remove: Hold the hinged latch **2** on the bobbin case with your left thumb and index finger, then pull it out.
3. To insert: Hold the bobbin case in the same way as when removing it. Keep the case with its finger pointing **1** up to fit it into the opening provided in the hook race cover.
4. Take the thread over cutter **3** and cut the thread.
5. Check: The bobbin case must not fall out when the thread end is pulled.

- 1** Bobbin case finger
- 2** Hinged latch
- 3** Thread cutter

## Bringing up the bobbin thread

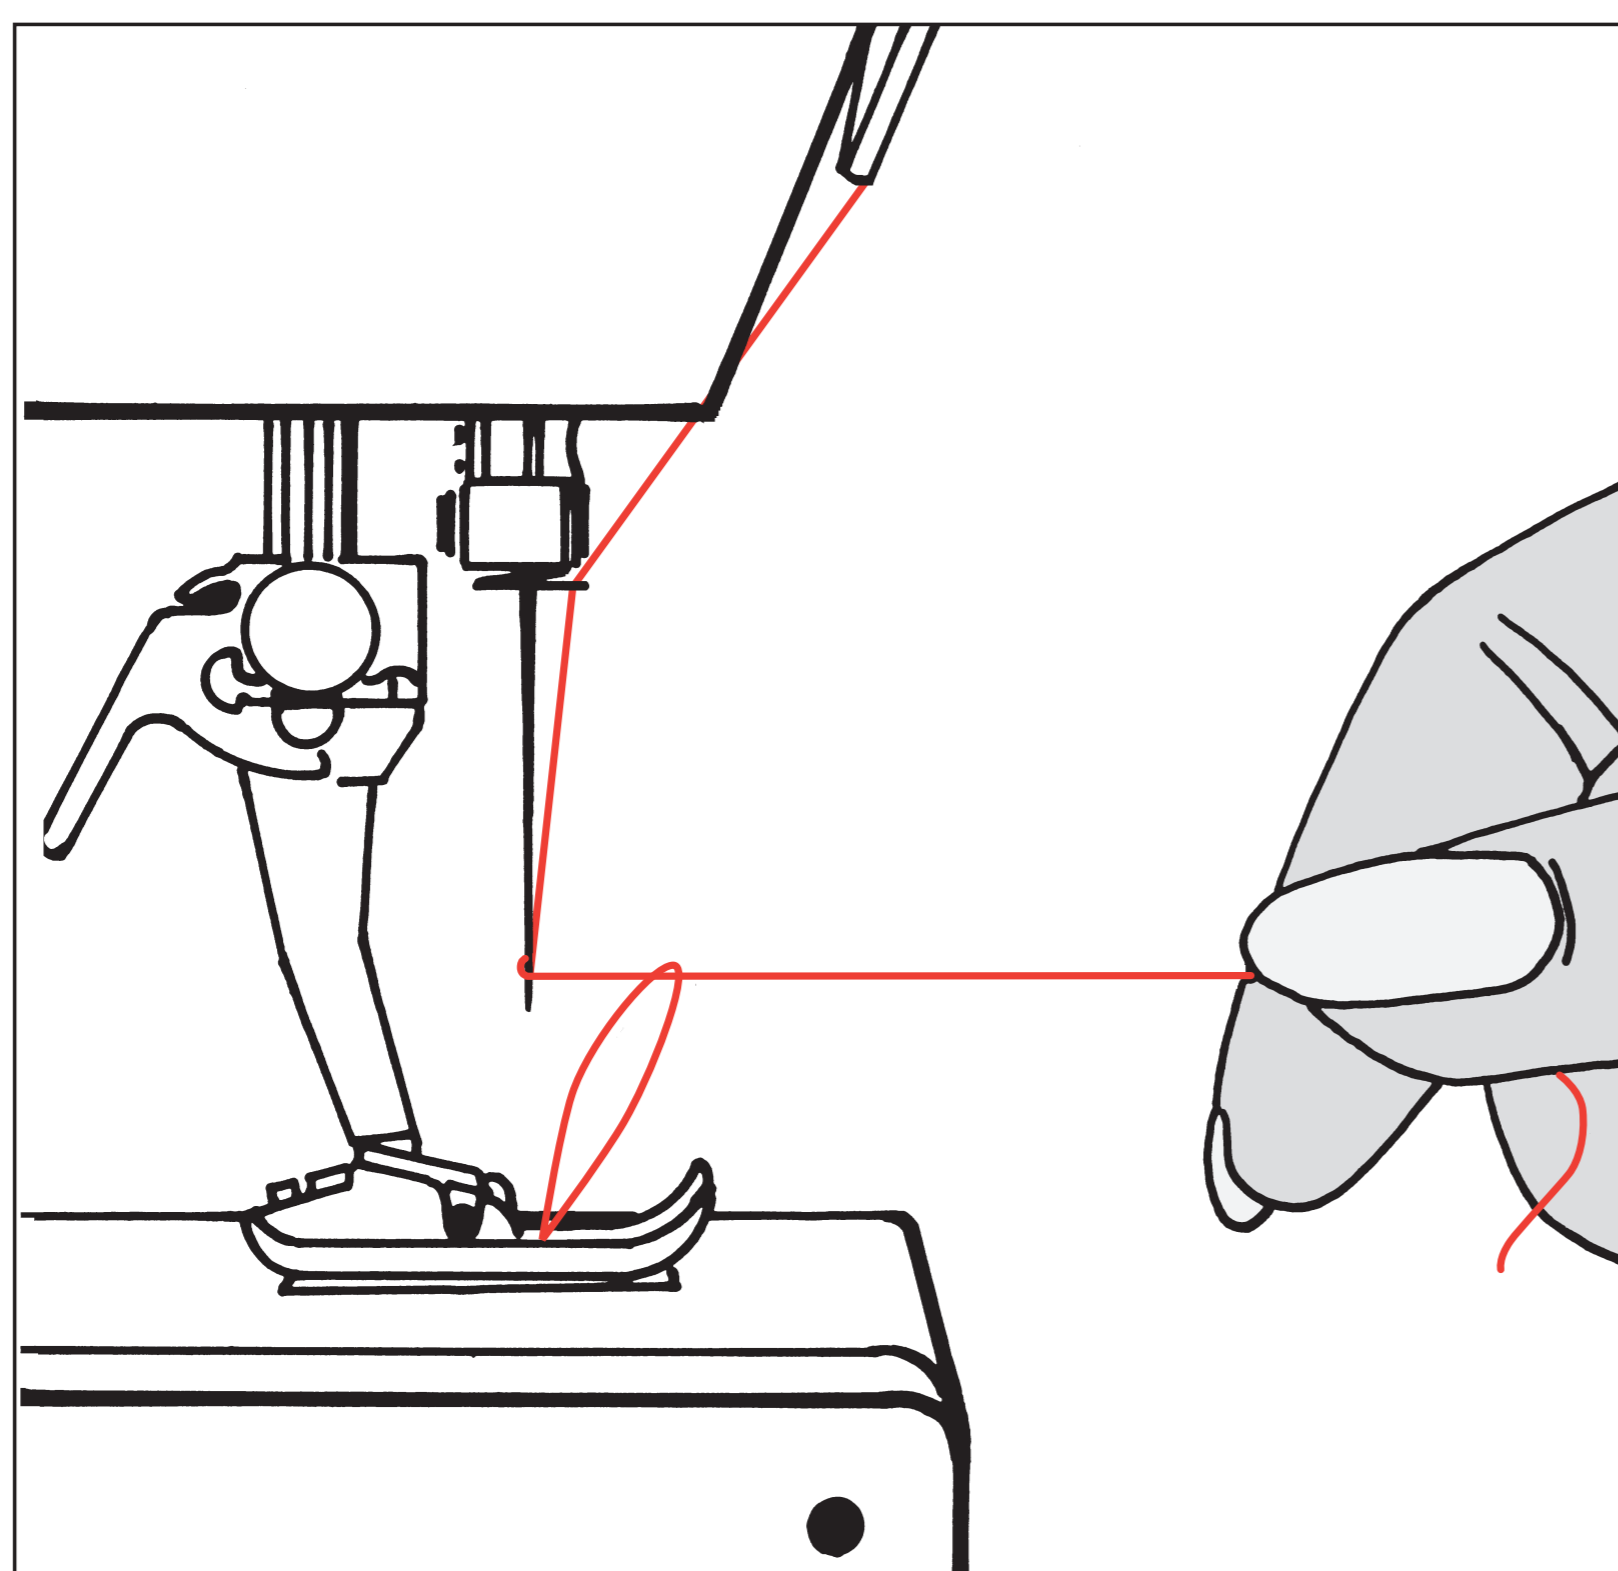

### Instructions

1. Hold needle thread (upper thread) loosely.
2. Tap the foot control to sew one stitch, or turn handwheel towards yourself until the thread take-up lever has returned to its highest position.
3. Pull the needle-thread end slightly taut to bring the bobbin thread (lower thread) up through the needle opening in the stitch plate.
4. Pull the needle- and bobbin threads slightly taut and place them under the presser foot and out to the left.

#### Note:

The bobbin thread must be brought up through the stitch plate for certain types of work. The length of thread is sufficient for most normal work if the lower thread cutter has been used.