




















 


















Sewing

	Home		Personal Memory
	Setup Program		Close
	Tutorial		Confirm
	Creative Consultant		Cancel
	Help		Needle position up/down
	ECO		Pattern repeat
	Deleting settings		Mirror image left/right
	Upper thread tension		Mirror image up/down
	Stitch plate/Needle selection		Editing stitch pattern length
	Presser foot display		Balance
	Presser foot pressure		Permanent Quick reverse
	Feed dog up/down		Backstepping
	Filling level of bobbin thread		Saving stitch pattern settings
	Stitch pattern selection via number		Back to basic setting
	Practical stitches		Stitch counter buttonhole
	Decorative stitches		Programming buttonhole length
	Alphabets		Manual buttonhole
	Buttonholes		Buttonhole slit width
	Quilt stitches		Altering font size

Sewing

 **Combi mode/Single mode**

 **Subdividing the combination**

 **Editing the combination at cursor position**

 **Interrupting the combination**

 **Deleting**

 **Securing**

 **Editing the whole combination**