
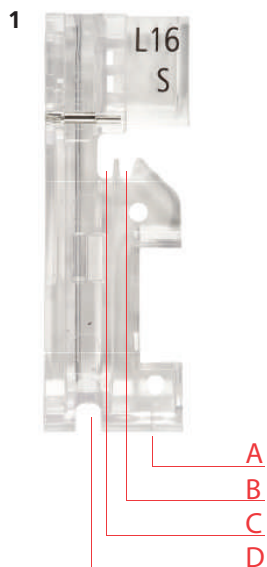


# Piping Foot

## #L16 S

Overlocker

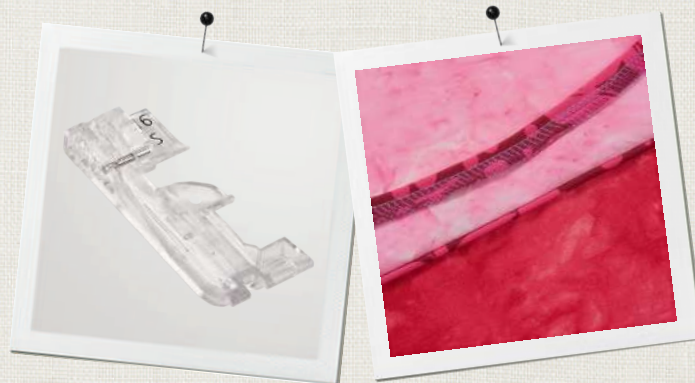

### Information

#### Purpose

- To create and sew in piping up to maximum of 3 mm.

#### For your safety

Before using this accessory, please read this instruction manual as well as the instruction manual of your machine carefully.

#### Markings and guides

- A Cutting line at cutting width 6
- B Right needle RN
- C Left needle LN
- D Guide groove

### Application

#### Creating piping

- > Prepare bias tape at a width of 4 cm.
- > Select a 3- or 4-thread overlock stitch and thread the machine.
- > Adjust the stitch length to 2.5 – 4 mm.
- > Place the cord or the piping under the guide groove and lower the presser foot.
- > Wrap the bias tape tightly around the cord and position the cutting edges towards the knife.
- > To secure the bias tape around the cord, sew a few stitches.
- > Make sure that the piping is fed evenly, without puckering and distorting.
- > Sew the piping. (fig. 2)

#### Sewing in piping

- > Select a 3- or 4-thread overlock stitch and thread the machine.
- > Adjust the stitch length to 2.5 – 4 mm.
- > Place the prepared piping between the two fabric layers (right side on right side).
- > Place the fabric layers under the presser foot. Make sure that the piping lies in the guide groove of the presser foot.
- > Lower the presser foot.
- > Sew the fabric layers together. (fig. 3)



You can find further information at:  
[www.bernina.com](http://www.bernina.com)