



#51216-14



## BE MINE COLLECTION

It is a violation of Copyright law to make and distribute copies of electronic designs or artwork.  
Electronic designs are licensed to the original purchaser for use at one location. ©2020 OESD, LLC. All rights reserved.

# DESIGNS



Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.



## 51216-14 Kiss Me Conversation Heart Stuffie

Size Inches:

Size mm:

Stitch Count:

**5.51 X 4.74 in. 140.0 X 120.4 mm 6929 St.**

- 1. Pink Fabric Placement Stitch..... 2171
- 2. Tackdown ..... 2171
- 3. Pink Detail..... 2171
- 4. Red Detail ..... 2123
- 5. Seam/ Match Fabric ..... 2171



# MATERIALS



## Stabilizer

- OESD PolyMesh CutAway
- OESD StitchH2O WashAway

## Fabric/Notions

- Please see instructions for individual designs for fabric requirements.
- Minkee
- Expert Embroidery Tape TearAway
- 505 Temporary Spray Adhesive
- Isacord thread
- Embroidery Machine
- Embroidery Scissors
- Polyester Fiberfill
- Hand Needle
- OESD Expert Embroidery Point and Press Tool

## Designs


- 51216-14
- 51216-14

# INSTRUCTIONS




## Step 1

- Fabric Requirement:  
(2) 8" x 6.5" pieces of Minkee fabric in desired color.
- Hoop one layer of OESD PolyMesh CutAway stabilizer.
- Stitch the first color called Placement Stitch. Use a thread color that blends with your fabric choice.

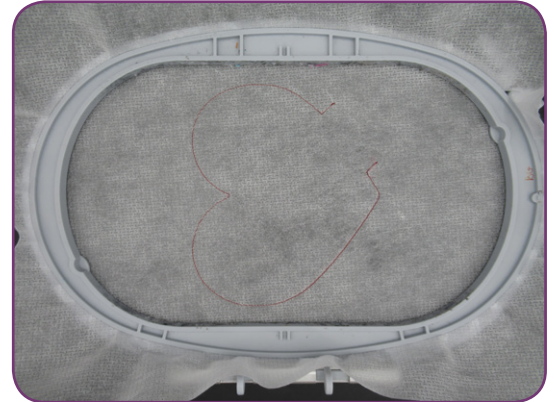

## Step 2

- Place the fabric (8" x 6.5") right side up onto the stabilizer, completely covering the Placement Stitch.

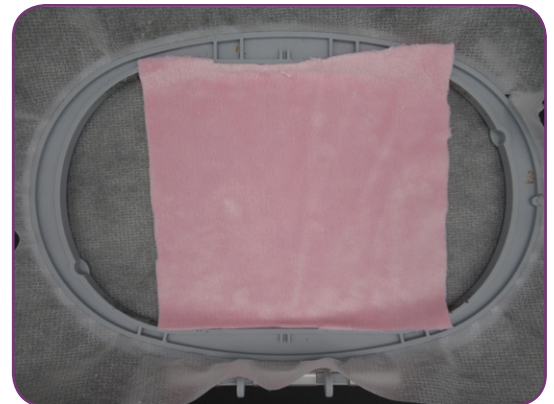

## Step 3

- Lay the StitchH2O topper over the fabric and tape in place with Expert Embroidery Tape TearAway.
- Raise the presser foot if possible to accommodate the added loft of the fabric. If not, slow the machine speed.
- Stitch the second color, the Tackdown Stitch.



# INSTRUCTIONS



## Step 4

- Stitch the next few colors until you get to the seam stitch.




## Step 5

- Place the second piece of fabric right side down directly over the first piece.



## Step 6

- Stitch the final color, again using the first thread color, called Seam - Match Top Fabric (For visual purposes we used a bright color so you could see the seam).

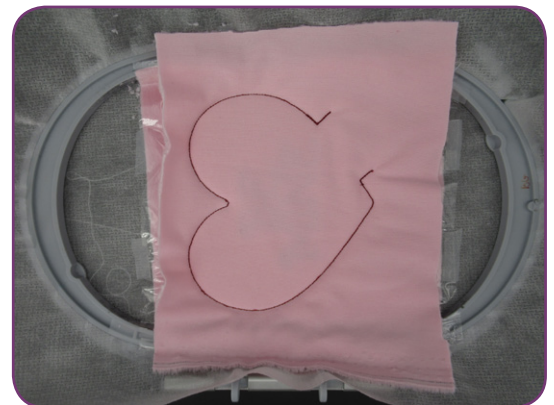

# INSTRUCTIONS



## Step 7

- Remove the hoop from the machine and the fabric from the hoop.
- Using scissors, carefully cut out the stitch 'n' turn project close to the stitching line. Cut around the stitches at the opening to create a tab.



## Step 8

- Clip to seam line at corners and on curves.
- Turn the project right side out. Use Expert Point and Press Tool to turn out corners and curves.



## Step 9

- Trim any jump stitches and then peel off the StitchH2O topping.
- Stuff with polyester fiberfill.
- **Note: For a smooth project, add small pieces of fiberfill until desired fullness is reached. Use Expert Point and Press tool to move fiberfill into corners.**
- Fold tabs in and slip stitch the slit closed with a hand needle, or use a narrow machine zigzag stitch.

