

BERNINA 580 Liberty Edition

In-the-Hoop Pocket Appliqué




Designs:

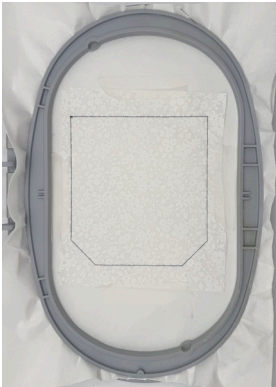

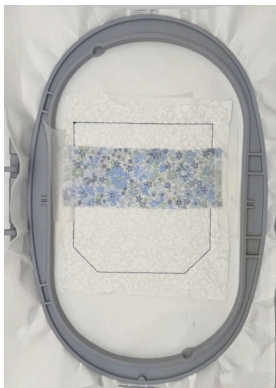
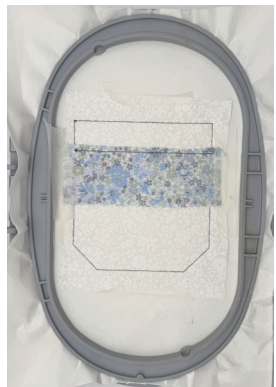
Glen Lyon 32, Velasco 20




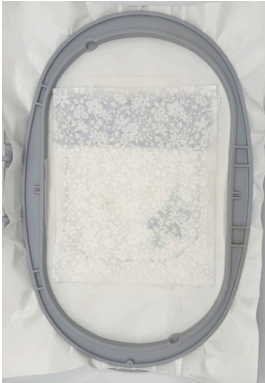
Instructions:

Create the in-the-hoop pocket appliqué by following these instructions. These pockets can then be stitched on your finished garment projects for a fun decorative detail.

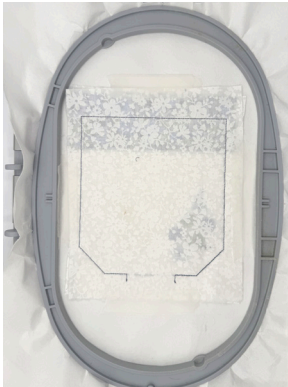





| | | |
|--------|--|---|
| Step 1 | Hoop two layers of OESD Medium Weight TearAway stabilizer. |  |
| Step 2 | <p>Stitch the first color change, a placement line, on the stabilizer by itself.</p> <p>*Note: we have used a contrasting color for steps 2 – 5 so it can be seen in the photos, but use a thread color matching your pocket fabric.</p> |  |
| Step 3 | Place a piece of fabric 5.5" x 6.5" over the placement line and tape in place with OESD TearAway Tape. |  |

| | | |
|--------|--|---|
| Step 4 | Stitch the next color change, a placement line. |  |
| Step 5 | Stitch the next color change, a placement line for the pocket contrast fabric. |  |
| Step 6 | Place a 2.5" x 5.5" piece of contrast fabric right sides together with the pocket fabric, aligning the long edge of the fabric 1/4" above the placement line just stitched. Tape in place. |  |
| Step 7 | Stitch the next color change, a seam line for the pocket contrast. |  |

| | | |
|---------|--|---|
| Step 8 | Fold the contrast fabric up over the pocket top, pressing in place with a small iron. Tape in place. |  |
| Step 9 | Stitch the next color change, a tackdown for the pocket contrast and edgestitching. |  |
| Step 10 | Stitch the embroidery design in the recommended colors. |  |
| Step 11 | Before the last color change, place another piece of 5.5" x 6.5" fabric right sides together with the pocket. Tape in place. |  |



| | | |
|---------|---|---|
| Step 12 | Stitch the final color change, the seam line. |  |
| Step 13 | Cut out the pocket with a ¼" seam allowance around the entire stitch line. Clip corners, including a small slit at the inner corner of the neck of the opening. |  |
| Step 14 | Tear away all excess stabilizer |  |
| Step 15 | Turn through the hole at the bottom of the pocket and press, tucking the "neck" of the opening into the pocket. Slipstitch or edgestitch the opening closed. |  |