



Key Chains & Tags



Supplies

- 2" of 3/8" or 1/2" ribbon
- OESD Aqua Mesh
- Isacord thread
- OESD Fiber Form
- 505 Temporary Adhesive Spray
- OESD curved embroidery scissors
- OESD bobbin thread
- Various appliqué fabrics and scraps

The instructions with photos of a heart pendant is exemplary for making the buttonhole pendant.



Photo 1

- Hoop two layers of OESD Aqua Mesh. Stitch the first color change, ribbon placement, on the Aqua Mesh. Remove the hoop from the machine but do not remove the stabilizer from the hoop. Photo 01.




Photo 2

- Form a loop with the 2" of ribbon. Tape the ribbon loop to the Aqua Mesh such that the loop is above the ribbon placement line and the tails of the ribbon extend 1/4" below the placement line. Place the tape so it is above the placement line to avoid stitching through the tape. Photo 02.



Photo 3

- Return the hoop to the machine and stitch the second color change, the ribbon tackdown. Remove the tape. Trim the ribbon close to the ribbon tackdown. Photo 03.

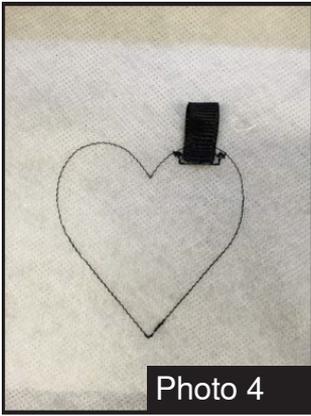

- Stitch the next color change, which is a placement line for the fiber form and first applique. Photo 04.



- Cut a piece of Fiber Form slightly larger than the placement line. Lightly spray Fiber Form with 505 temporary adhesive spray. Place over placement line. Photo 05.



- Cut a piece of applique fabric (see thread chart for fabric color) slightly larger than the placement line. Spray the wrong side of the fabric with 505 temporary adhesive spray and place on top of the Fiber Form. Photo 06.



- Stitch the next color change, which will be the cut line and tackdown for both the applique and fiber form. Note the double line, which allows you to trim very close to the cut line. Photo 07.



Photo 8

- Trim both the Fiber Form and the appliqué to the cut line, using OESD curved embroidery scissors. Be careful NOT to cut the ribbon you already placed. Photo 08.

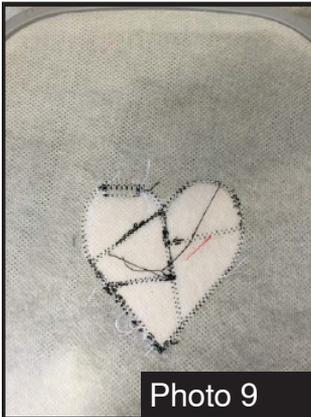


Photo 9

- Remove the hoop from the machine but do not remove the project from the hoop. Flip the hoop to the backside. Photo 09.



Photo 10

- Lightly spray a piece of appliqué fabric large enough to cover the entire keychain with 505 temporary adhesive spray. Place over the back of the design. Photo 10.



Photo 11

- Replace the hoop on the machine and stitch the “Back Cut Line & Tackdown”. Remove the hoop from the machine but do not remove the project from the hoop. Flip hoop to the back side. Photo 11.



Photo 12

- Trim the appliqué fabric to the cut line. Photo 12.



Photo 13

- Replace the hoop on the machine and stitch the cover stitch, **MATCHING THE BOBBIN** thread to the top thread. Design have two cover stitch color changes. Match the bobbin for each cover stitch. Photo 13.



Photo 14

- Remove the hoop from the machine and the project from the hoop. Trim the excess Aqua Mesh to approximately $\frac{1}{4}$ " from the design. Photo 14.



Photo 15

- Rinse away the remaining Aqua Mesh and allow the project to dry. Photo 15.