



# CUTLERY ROLL

## Overlocker Take-out

### MATERIALS LIST

- 6 x pieces of printed fabric, 4" x 12"
- 4 x pieces of plain fabric, 4" x 12"
- 5 x pieces of iron on Pellon, 4" x 12"
- 4 x strips of plain fabric, 2" x 19"
- 1 x piece of printed fabric 11" square for serviette
- 1 x 610D Overlocker

### SETTING UP OVERLOCKER FOR ROLLED HEM

1. Remove left needle, place needle in holder.
2. Thread upper and lower loopers with Wooly Nylon.
3. Thread right needle with Metrocor.
4. Remove stitch finger B and place it somewhere safe.
5. Cutting width between 4- 5.
6. Stitch length to 2.
7. Change upper looper to 1 and lower looper to 3.
8. Attach thread catcher.
9. Overlock all four sides of serviette; secure each end with fray stopper. Leave to dry.

### SETTING UP THE OVERLOCKER FOR 4 THREADS

1. Open both front doors.
2. Replace left needle and thread with Metrocor.  
Note: left needle is higher than the right needle.
3. Insert stitch finger (B).
4. Close both doors.
5. Adjust the two looper tensions to approx 2- 3.
6. Stitch length on 2.
7. Cutting width on 7.
8. Differential in the centre.
9. Attach catcher, adjust seam guide to cut nothing off and sew test.

### MAKING STRAPS


1. Chain off enough thread so that it is a little longer than the orange straps. Don't cut!
2. Fold fabric strip in half lengthwise, right sides together.
3. Bring the thread chain around to the front of the overlocker; place it inside the fold of the fabric.
4. Overlock the seam, taking care not to catch the thread chain in the stitching.

5. Remove from the Overlocker and gently pull on the chain to turn the tube right side out.
6. Finger press.
7. Tie a knot at one end.
8. Do the same for the other strap.



### MAKING THE PLACEMAT

1. Place fabrics together to form quilt as you go so you end up with 3 strips of print and 2 strips of plain.
2. Sandwich a layer of Pellon between two pieces of printed fabric. Wrong sides to the batting (A).
3. Place a piece of plain fabric, right sides together with the back and another, right sides together with the top. Place a piece of Pellon on the top of stack (B). Overlock all six layers together close to the raw edge.
4. Open out the plain fabric pieces making sure you have the Pellon in the centre. Press flat.
5. Continue piecing and pressing fabric and pellon layers in the same manner until you have five panels altogether, 3 x prints and 2 x plain.
6. Trim with rotary cutter.

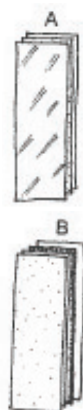

4. Pin straps to either side of the centre panel on unfinished side.
5. Place bind to the wrong side and overlock.
6. Press.
7. Trim all ends.

### ATTACHING MAGNETIC BUTTON

1. Fold ends in half and finger press.
2. Measure in 3.5cm from raw edge and mark a dot with a pen.
3. Place disc over the dot and mark in the two lines, this gives you the correct cutting lines.
4. Do the same for the other side, except turn the place mat over and do it on the other side.
5. Use buttonhole block and cutter to cut marked lines.  
**Cut through single layer only.**
6. For the side that has no pellon on it, cut a small piece of scrap fabric.
7. Overlock the two ends.
8. Secure with fray stopper.
9. Trim when dry.

### PUTTING TOGETHER

1. Fold serviette in half both ways.
2. Place serviette in centre of the placemat.
3. Place cutlery set on top of placemat, fold in the two sides and clip together.
4. Fold in opposite sides and tie together.
5. Enjoy!

