



BERNINA 5 SERIES

Notebook Cover

www.bernina.com.au

Method

NOTEBOOK

1. Fuse outside fabric (print) to one side of Timtex and inside fabric (plain) to opposite side of Timtex, wrong sides against each other.
2. Do the same to the inside flap (striped fabric).
3. Curve off one corner of the inside flap using the template.
4. Curve off the two corners of notebook at one end using template.
5. Trace all markings onto plain side of notebook.
6. Measure in 4" from curved edge and rule a line parallel to edge, draw another parallel line 5/8" to the right of the first line to create the spine.
7. Measure in 5 1/2" in from the opposite end and draw a line parallel to the edge, draw another parallel line 5/8" to the left of that line for the spine. You should have approx 6" space in between.
8. Mark Grommet placement at curved end of notebook. Find the centre and measure in 1 1/2" in from the edge. Place one side of the grommet onto the fabric so the marked point is in the centre of the grommet. Trace around the inside of the grommet.
9. Cut out hole for grommet with sharp scissors, making sure to cut just outside the marked line.

INSIDE FLAP


10. Attach Foot # 20 (open toe embroidery)
11. Select straight stitch and move needle position to far right.
12. Pin "made to create" label at the bottom right hand corner of the pocket flap.
13. Line up edge of label with the right inside edge of toe.
14. Stitch label into place.
15. Select zig-zag, W-5, L-0.3.
16. Line up curved edge of flap with the right inside edge of toe and satin stitch around.
17. Repeat a second time to create a smooth edge.
18. Select straight stitch
19. Press CLR button.
20. Attach Foot #37
21. Stitch flap into bottom right hand side of notebook (plain side up) using a 1/4" seam allowance.
22. Stitch the two outer edged lines marked on the notebook.

FREE HAND QUILTING

23. Attach BSR (Bernina Stitch Regulator)
24. Plug into socket
25. Drop feed teeth. (The green light will appear when they are lowered).



26. Select straight stitch (you have the option of both straight and zig-zag!)
27. Press BSR Button for BSR Mode 1 or BSR Mode 2
BSR 1 – needle moves with power activation
BSR 2 – needle moves when fabric moves

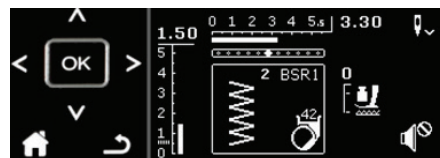

28. Freehand quilt around design keeping between the two lines sewn previously.



29. Unplug and remove BSR foot.
30. Bring up feed teeth.

Over >>

Requirements

OUTSIDE NOTEBOOK

- Cut 1 piece of printed fabric, plain fabric and double sided iron Timtex stabilizer 17" wide x 10" high

CENTRE INSIDE POCKET FOR NOTEPAD

- Cut 1 piece of printed fabric 6 1/2" wide x 15" high
- Cut 1 small striped of stabilizer 6" x 2"

INSIDE FLAP

- Cut 2 pieces of striped fabric and 1 piece of double sided iron on Timtex 6" wide x 7" high

OTHERS

- 1 x grommet
- 1 x piece of black elastic x 18" long x 1" wide

- 1 x packet of 1" wide bias binding
- 1 x Bernina "made to create" label
- Thread to match
- Sharp scissors
- Notepad
- Marking pen
- Pen / pencil

BERNINA 5 SERIES Notebook Cover


INSIDE POCKET

31. Fold fabric (striped) in half, right sides together.
32. Stitch long sided together with a ¼" seam allowance.
33. Turn through to the right side and press.
34. Insert small piece of stabilizer between both layers up to fold line.
35. Attach foot # 1


COMBINATION DESIGN

To be sewn at the top of the pocket.

- Press Home

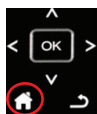

- Navigate to combi mode
- OK
- Navigate to decorative stitch categories
- OK
- Navigate to category #701
- OK
- Touch back button once

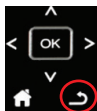

- Navigate to stitch category #123
- OK
- Touch back button twice
- Navigate to needle symbol



- Press OK to confirm combination
- Sew along top edge of pocket. Place pocket to one side.

ADDING THE ELASTIC

36. Cut a 2" piece of elastic from elastic length.
37. Fold elastic in half and position approx ¼" down from the top right hand side of pocket. This is to form a holder for the pen.
38. Pin pocket into place along the two remaining marked lines. Make sure the open end of the pocket is matched up with the bottom edge of the notebook cover, close to the edge of the fabric.

39. Stitch down the right side from top to bottom edge.
40. Insert edge of elastic under the left side of the pocket so that the elastic is lined up in the centre of the grommet whole.
41. Stitch down the left side from top to bottom edge, close to the edge of the fabric.
42. Press along the stitched lines to form the spine.

BINDING

43. Press one side of the bias binding open
44. Place open side of the binding on the wrong side of the short end of the cover (plain side up) level with the raw edge.
45. Use Foot #1, needle position two to the left and edge of foot lined up with edge of fabric. Stitch.
46. Fold bias over to the right side, select zig zag, W-4, L-3 and needle 2 to the right. Stitch down on the right side of cover.
47. Repeat the same steps around remaining edge. Make sure to turn under raw edges at the beginning and the end.

FINISHING OFF

48. Select the side of the grommet with the prongs. Place the cut hole over the Grommet making sure that it fits snug around the centre rim. You may have to trim a little if it is too big.
49. Attach other side of grommet and press down on a hard surface to close.
50. Insert notepad backing board into pocket.

51. Close notebook so that the grommet is on the outside.
52. Thread elastic through the grommet from the inside to the outside.
53. Wrap elastic around the notebook from the right of the grommet and around the back to the left spine.
54. Fold in raw edge of elastic to create a pen loop, pin into position. You may need to trim elastic if it is too long.
55. Carefully remove elastic from around book, remove notepad and stitch elastic into position along previously stitched spine line.
56. Insert notebook and pen, wrap elastic around notebook to close and enjoy!

