


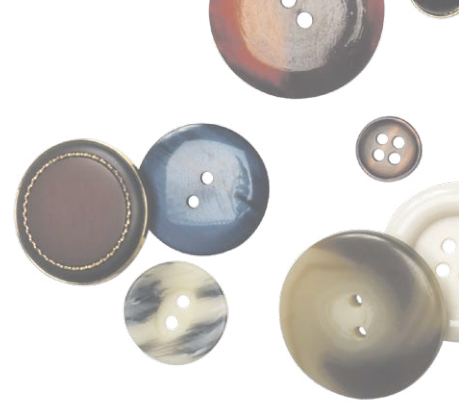

# Using the BERNINA® CutWork Tool



## SUPPLIES

- OESD AquaMesh Water Soluble Stabilizer
- OESD AquaMesh Plus Water Soluble Stabilizer
- 101 Temporary Spray Adhesive
- Isacord Polyester Embroidery Thread
- BERNINA® CutWork Tool
- Embroidery foot #44

## PREPARE FABRIC

- Starch fabric 2-3 times following manufacturer's instructions.
- Fabric to be cut should be crisp.
- Spray one hoop sized piece of AquaMesh Stabilizer and adhere it to the wrong side of your fabric.
- Hoop stabilizer and fabric.



## EMBROIDER AND CUT

- Send desired design to the embroidery machine.
- Replace normal stitch plate with the CutWork stitch plate.
- Attach the hoop to the machine.
- Stitch the design as normal until the machine shows Cut.



- When the machine calls for cut 1, 2, 3 or 4 you must replace embroidery foot with foot #44 and replace your embroidery needle with the CutWork Tool.
- Unthread the machine.
- Follow the «thread changes» on your machine screen and turn the dial on the CutWork Tool as required.
- After cuts are complete, remove hoop from machine but do not remove the fabric from the hoop.
- Gently remove any cut fabric piece, trimming any thread that may have not been cut completely.
- Apply a piece of AquaMesh Plus Stabilizer over the cut pieces on the backside of the hoop, making sure to completely cover cut areas.
- When the machine calls for threads again replace the needle and foot, rethread the machine and stitch as normal.
- Repeat as required, until design is completed.
- Remove hoop from machine and fabric and stabilizer from hoop.
- Carefully cut away excess stabilizer.
- Follow instructions printed on stabilizer packaging to remove remaining stabilizer.