


Blindstitch Foot

#C19

Overlocker

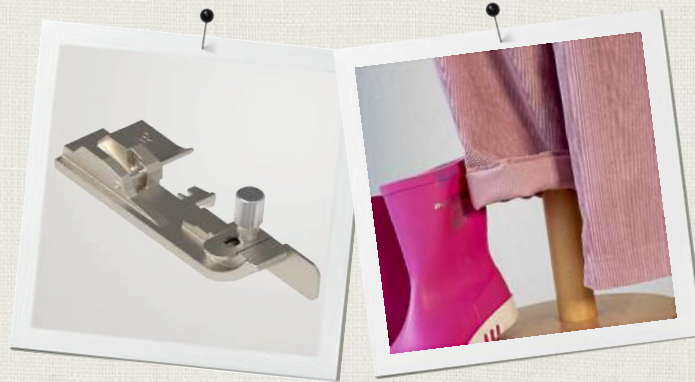

1



Information

Purpose

- To sew invisible hems in medium-weight to heavy fabrics.
- To sew ladder stitch hems.

For your safety

Before using this accessory, please read this instruction manual as well as the instruction manual of your machine carefully.

2



Application

To sew invisible hems

- > Select a 3-thread overlock stitch wide (LN) and thread the machine.
- > Adjust the stitch length to 3.5 – 4.5 mm.
- > Reduce the needle thread tension slightly.
- > Position the guide of the presser foot to 1 mm on the right of the needle.
- > Mark the hem depth (wrong side on wrong side) and press the hem.
- > Fold the hem back so that the lower fabric edge lies on the right next to the folded edge. (Fig. 1)
- > Place the fabric under the presser foot and push the folded edge against the guiding plate of the presser foot. (Fig. 2)
- > Sew a few stitches. In doing so, make sure that the needle barely stitches the folded edge. If necessary, adjust the guide on the presser foot.
- > Sew the hem.



Sewing a ladder stitch hem

- > Select a 3-thread flatlock stitch wide (LN) and thread the machine.
- > Adjust the stitch length to 2.5 – 4.5 mm.
- > Position the guide of the presser foot in the middle between the needle and the knife.
- > Mark the hem depth (wrong side on wrong side) and iron the hem.
- > Fold the hem back so that the lower fabric edge lies on the right next to the folded edge. (Fig. 3)
- > Place the fabric under the presser foot and push the folded edge against the guiding plate of the presser foot. (Fig. 4)
- > Sew a few stitches. Check, whether the seam can be stretched flat easily. If the seam puckers, position the guide on the presser foot closer to the needle. (Fig. 5)
- > Sew the hem.

Tip:

- > For stretch fabrics, use the 2-thread flatlock seam wide (LN).

