

Foot Book

Double Cord Foot #60/60C



Foundation: Low loft batting

Background: Felt or medium to heavy weight fabric

Techniques: Creating double welt trim

Embellishments: photo printed on fabric and stitched to background

(See following page for more directions.)


Double Cord Feet #60/60C

Designed to ride over two cords side-by-side, this presser foot has two tunnels or grooves on the bottom of the sole to hold the cords in place for stitching.

This foot has an uncoded version available for models that have a maximum stitch width of 5.5mm and a coded version for models that have a maximum stitch width of 9mm. Foot #60/60C will accommodate cords that are 7.0 - 8.0mm in diameter.

This foot is made to be used with a straight stitch or a side-to-side stitch such as a zigzag or feather stitch, depending on the technique being sewn.

Besides stitching cord in place, this foot can also be used for piping and for making double welting used as a trim for upholstery projects.

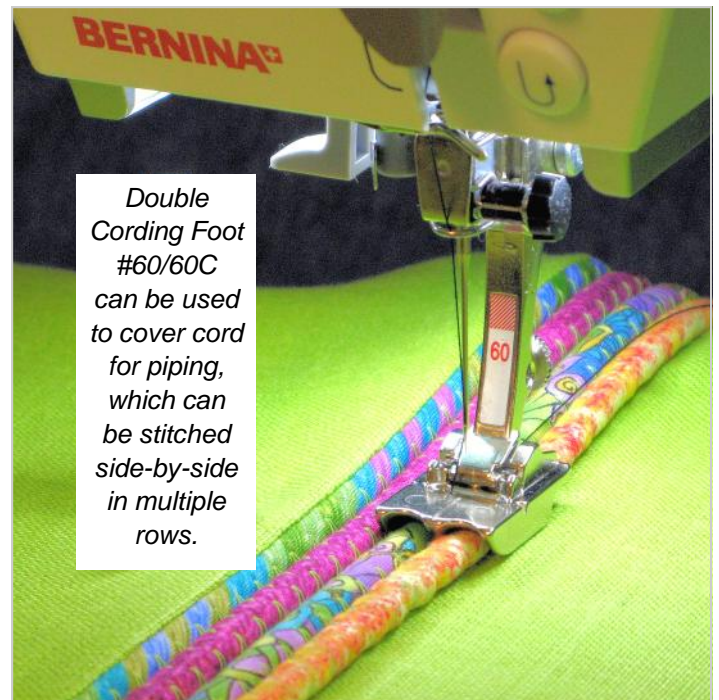

Double Cording Foot #60/60C can be used to cover cord for piping, which can be stitched side-by-side in multiple rows.

Creating Double Welting

Cut 3" wide bias strips to make 20". Seam together on the diagonal to make one long strip.

Cut 2 pieces of cord, 20" long each. Place both cords side-by-side on the wrong side of the bias strip and wrap the strip snugly around them.

Position the cords under the foot with one cord under each groove. Using a straight stitch and center needle position, sew between the two cords. (Photo 1). *Note: This stitching may catch the outer cord but it is not secured until the next step so handle the fabric carefully to keep the cord in place.*

Wrap the fabric to the back, pulling snugly. Again, using a straight stitch and center needle position, sew between the two cords. (Photo 2)

Trim the seam allowances from the back, leaving about an 1/8" of fabric. (Photos 3 & 4)

Assembling the Page

Use temporary spray adhesive to bond the batting to the back of the fabric.

Cut two 4" pieces of 1/2" wide ribbon and position them on the upper and lower edges of the photo. Using Edgestitch Foot #10, sew along the edges of the ribbon.

Cut the Double Welting into two 8" pieces. Remove the stitching at each end of the two pieces and trim away about 1/4" of the cording. *Do not* trim the fabric.

Position each piece of Double Welting over one side edge of the photo. Using a Double Cord foot, stitch the welting down the center to secure it to the page.

Finishing

Place the page wrong sides together with another page and straight stitch close to the outer edges through all layers.

Cut and piece bias strips to make one long piece, about 40" long and 2 1/2" wide.

Fold the bias strip in half lengthwise and press.

Position along the edge of the page with raw edges even. Sew to the page using 1/4" seam allowance, mitering the corners.

Wrap the binding to the other side and stitch by machine or hand as desired.

Add metal eyelets to the binding edge.



Printing the Photo

Print this page on paper, cardstock, or fabric as desired.

Cut out the photo to the right and position it in the center of the page, using temporary spray adhesive to hold it on place.